

Grundkonfiguration av Pager7 - Uppkoppling mot nät och cloud


Här beskriver vi hur man hittar programvaran till Pager7 och hur man konfigurerar den för anslutning mot mobilnät och Tell Cloud (för fjärrkonfigurering och app).

Ladda ner programvaran från:

<https://www.tell.hu/en/Pager7-4G-IN4-R2>

Skrolla ner....


Klicka på "Downloads"

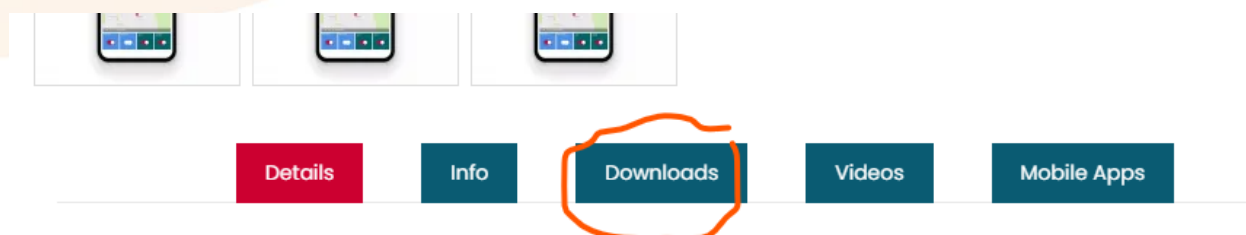


Main features:

- 4G/3G/2G communication
- Supported communication protocols: SIA DC-09, TELLMon
- 4 configurable MQTT connections

Sedan "...Software..."

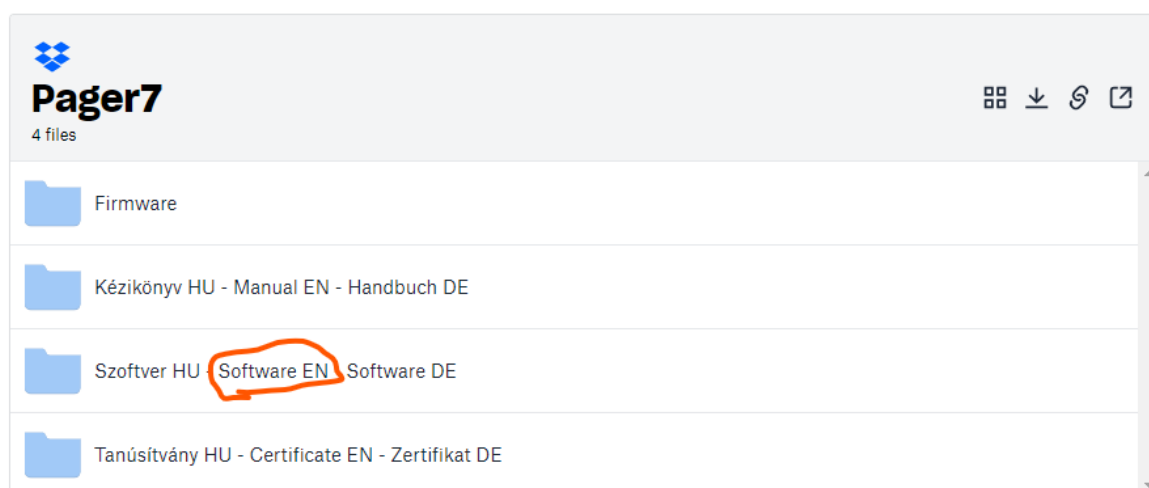

Sedan "Pager7-8 Prog....." och ladda ner med pilen längst till höger (det finns även versioner för Mac, Linux och Win 32).

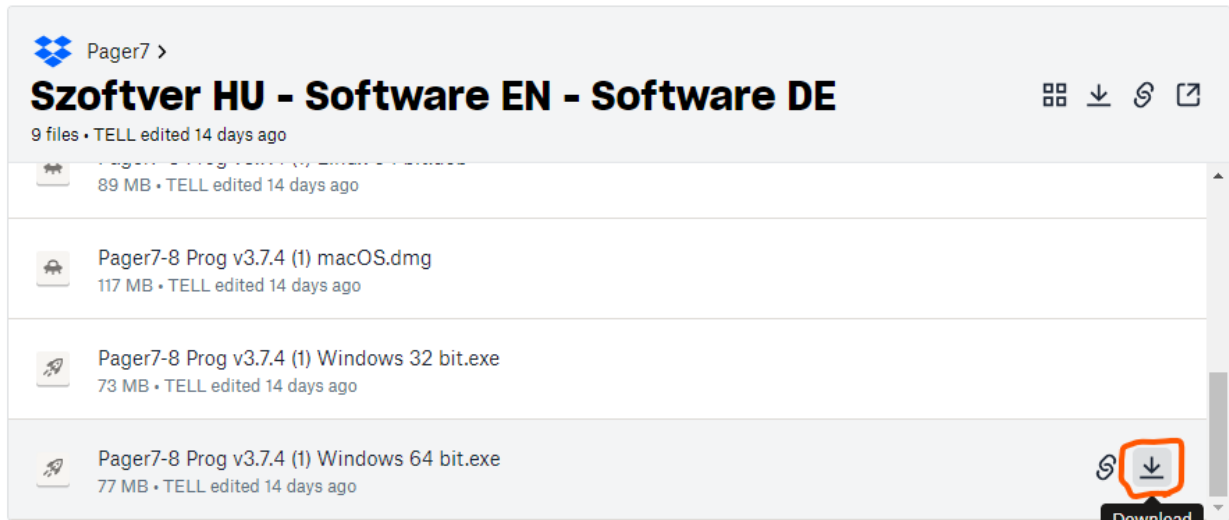


Spara filen och installera.


Om det inte redan är gjort så stoppa i ett aktivt SIM-kort i enheten och anslut spänningsmatning.

Starta programvaran Pager Control med Pager7 ansluten via USB-kabel.


Logga in med "Device password": 1111

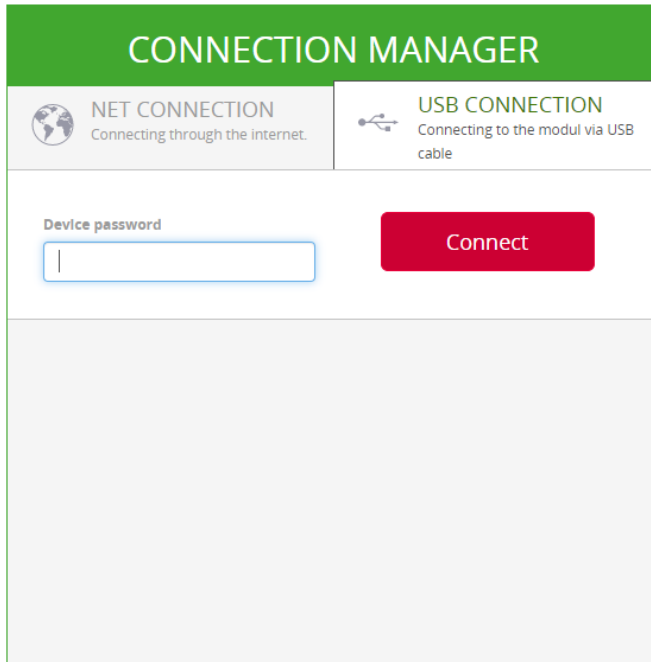

Öppna menyn genom att klicka på menysymbolen uppe till vänster.

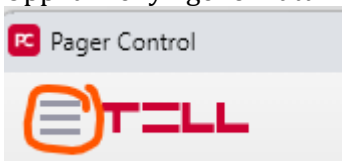


Om ditt SIM-kort har PIN-kod så anges den under Module settings → GSM-settings-→ PIN Code. Övriga inställningar i vyn kan man bortse från. Ev. kan man lägga in en limit för SMS per dag. Klicka på SAVE för att spara.

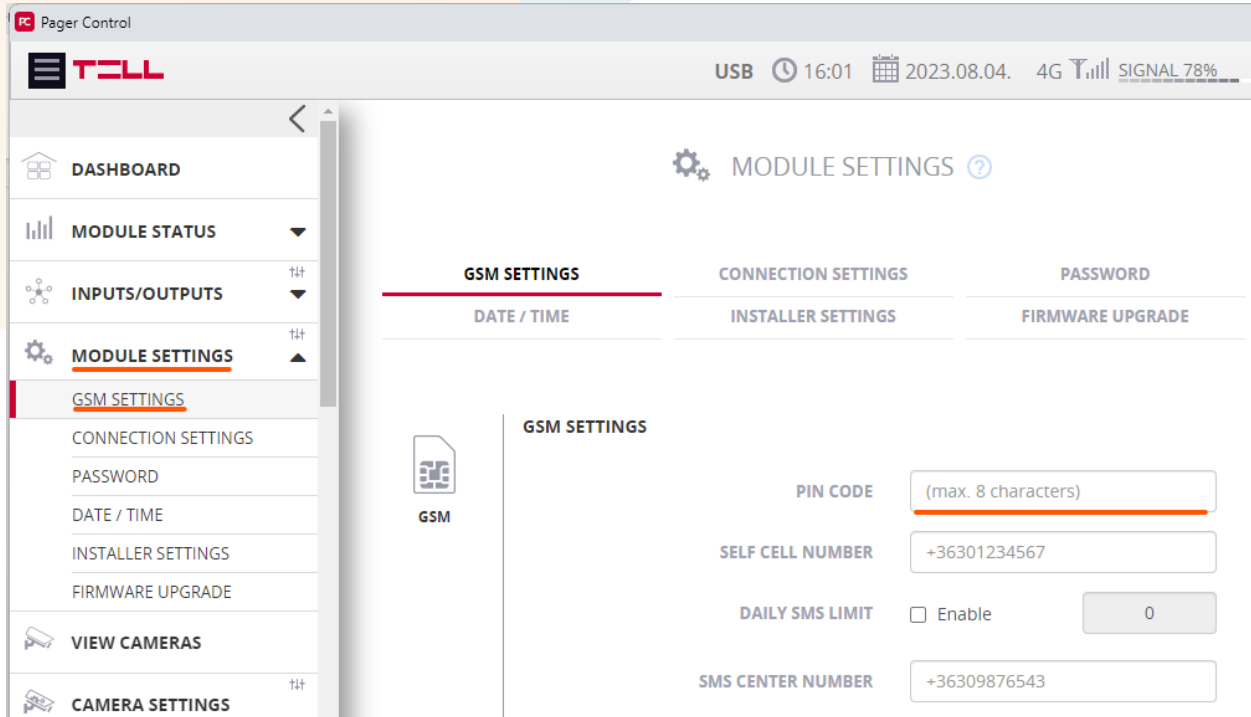

The screenshot shows the TELL web interface. At the top, there is a status bar with 'USB', '16:01', '2023.08.04.', '4G', and 'SIGNAL 78%'. The main header includes the TELL logo and a 'MODULE SETTINGS' gear icon. A left sidebar menu lists various settings: DASHBOARD, MODULE STATUS, INPUTS/OUTPUTS, MODULE SETTINGS (selected), GSM SETTINGS, CONNECTION SETTINGS, PASSWORD, DATE / TIME, INSTALLER SETTINGS, FIRMWARE UPGRADE, VIEW CAMERAS, and CAMERA SETTINGS. The main content area is titled 'MODULE SETTINGS' and has three tabs: 'GSM SETTINGS' (active), 'CONNECTION SETTINGS', and 'PASSWORD'. Under 'GSM SETTINGS', there are sub-tabs: 'DATE / TIME', 'INSTALLER SETTINGS', and 'FIRMWARE UPGRADE'. The 'GSM SETTINGS' sub-tab is active, showing a 'GSM' icon and the following fields: 'PIN CODE' (with a note '(max. 8 characters)'), 'SELF CELL NUMBER' (+36301234567), 'DAILY SMS LIMIT' (with an 'Enable' checkbox and a value of '0'), and 'SMS CENTER NUMBER' (+36309876543).


Välj Module settings → Connection settings och ange APN (Access Point Name) för SIM-kortet. T.ex. för operatören Tre så är det: data.tre.se och för Telia: online.telia.se

Om du vill kunna styra Pager7 från en app eller fjärrkonfigurera med programvaran Pager Control så måste TELL CLOUD vara aktiverat. Kryssa i så fall i Enabled längst ner på sidan.

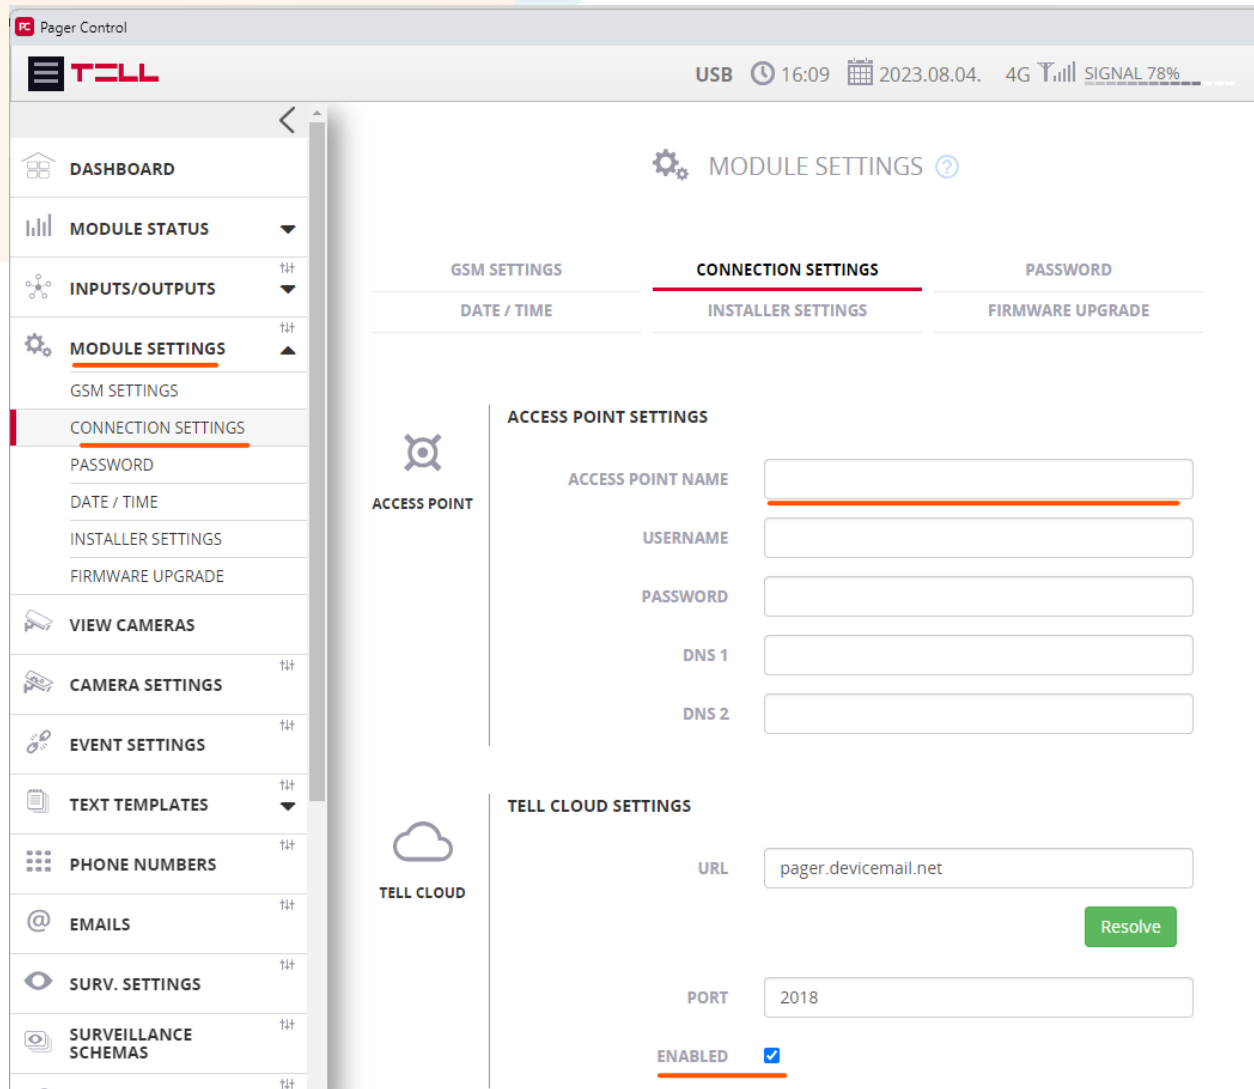

The screenshot displays the 'Pager Control' web interface. At the top, there is a status bar showing 'USB', '16:09', '2023.08.04', '4G', and 'SIGNAL 78%'. The main content area is titled 'MODULE SETTINGS' and has three tabs: 'GSM SETTINGS', 'CONNECTION SETTINGS' (which is selected), and 'PASSWORD'. Under 'CONNECTION SETTINGS', there are sub-tabs: 'DATE / TIME', 'INSTALLER SETTINGS', and 'FIRMWARE UPGRADE'. The 'ACCESS POINT SETTINGS' section includes fields for 'ACCESS POINT NAME', 'USERNAME', 'PASSWORD', 'DNS 1', and 'DNS 2'. The 'TELL CLOUD SETTINGS' section includes a 'URL' field with the value 'pager.devicemail.net' and a 'Resolve' button, a 'PORT' field with the value '2018', and an 'ENABLED' checkbox which is checked. A sidebar menu on the left lists various settings categories like 'DASHBOARD', 'MODULE STATUS', 'INPUTS/OUTPUTS', 'MODULE SETTINGS', 'VIEW CAMERAS', etc.

Kontrollera att enheten ansluter till mobilnätet och ev. Tell Cloud om det används genom att gå till Module status → Status of the connections. Alla ska vara "Connected".

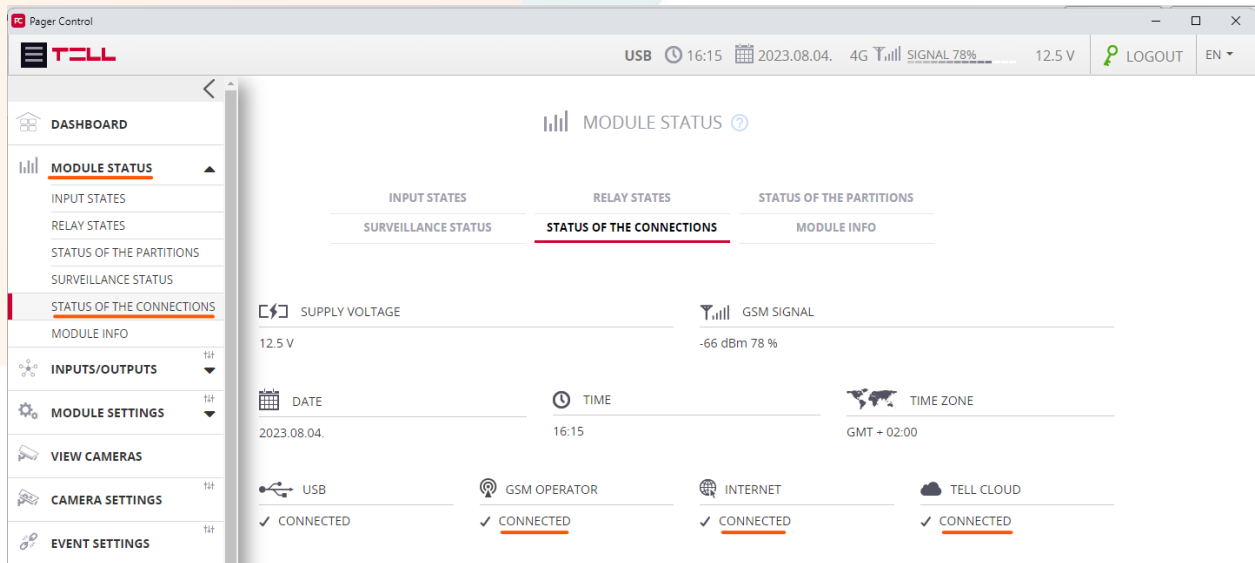

The screenshot shows the TELL Pager Control web interface. The top navigation bar includes the TELL logo, a hamburger menu, and system information: USB, 16:15, 2023.08.04, 4G, SIGNAL 78%, 12.5 V, LOGOUT, and EN. The left sidebar contains a menu with options: DASHBOARD, MODULE STATUS (selected), INPUT STATES, RELAY STATES, STATUS OF THE PARTITIONS, SURVEILLANCE STATUS, STATUS OF THE CONNECTIONS (highlighted), MODULE INFO, INPUTS/OUTPUTS, MODULE SETTINGS, VIEW CAMERAS, CAMERA SETTINGS, and EVENT SETTINGS. The main content area is titled 'MODULE STATUS' and has three tabs: INPUT STATES, RELAY STATES, and STATUS OF THE PARTITIONS. Under 'STATUS OF THE PARTITIONS', there are three sub-sections: SURVEILLANCE STATUS, STATUS OF THE CONNECTIONS (selected), and MODULE INFO. The 'STATUS OF THE CONNECTIONS' section displays the following data:

Category	Value
SUPPLY VOLTAGE	12.5 V
GSM SIGNAL	-66 dBm 78 %
DATE	2023.08.04.
TIME	16:15
TIME ZONE	GMT + 02:00
USB	✓ CONNECTED
GSM OPERATOR	✓ <u>CONNECTED</u>
INTERNET	✓ <u>CONNECTED</u>
TELL CLOUD	✓ <u>CONNECTED</u>

Sen kan du börja konfigurera de funktioner du vill ha.