

Grundkonfiguration av Pager7 - Uppkoppling mot nät och cloud


Här beskriver vi hur man var man hittar programvaran till Pager7 och hur man konfigurerar den för anslutning mot mobilnät och Tell Cloud (för fjärrkonfigurering och app).

Ladda ner programvaran från:

<https://www.tell.hu/en/Pager7-4G-IN4-R2>

Skrolla ner....

Klicka på "Downloads" och sedan "...Software..."

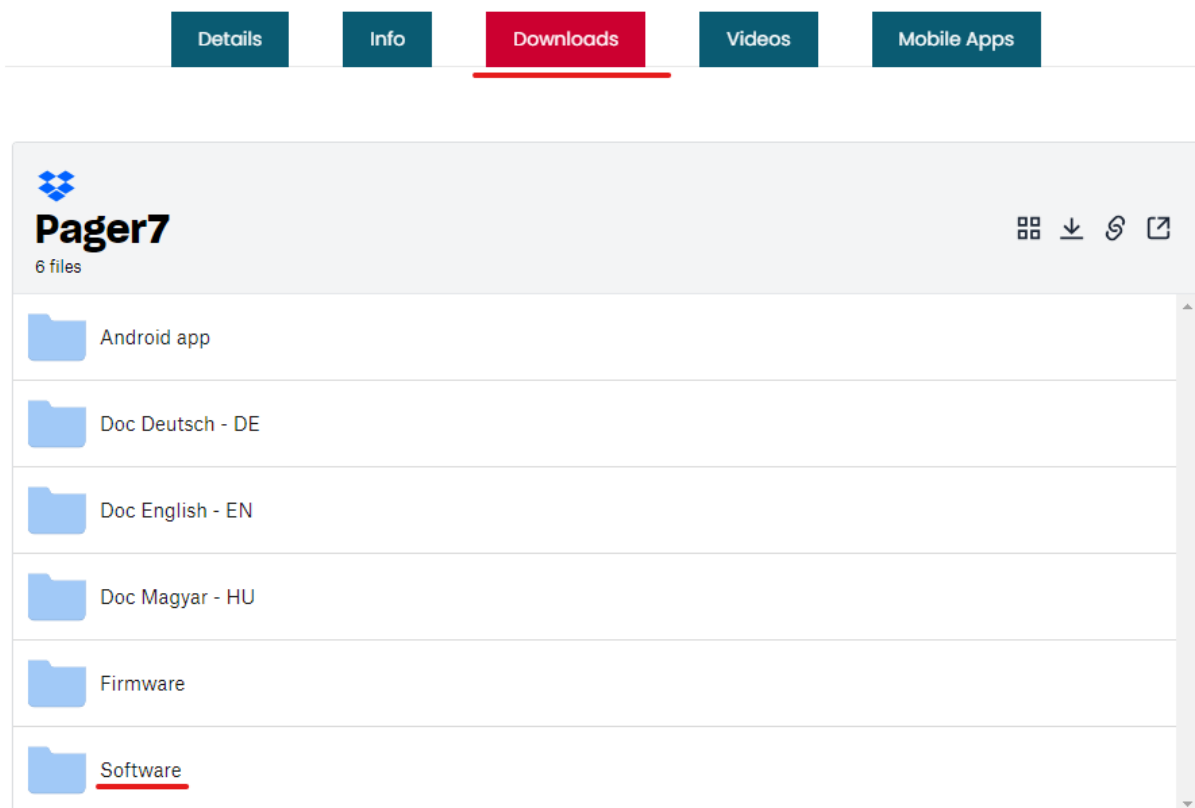


Details Info Downloads Videos Mobile Apps

Pager7
6 files

- Android app
- Doc Deutsch - DE
- Doc English - EN
- Doc Magyar - HU
- Firmware
- Software

Sedan "Pager7-8 Prog....." och ladda ner med pilen längst till höger (det finns även versioner för Mac, Linux och Win 32).

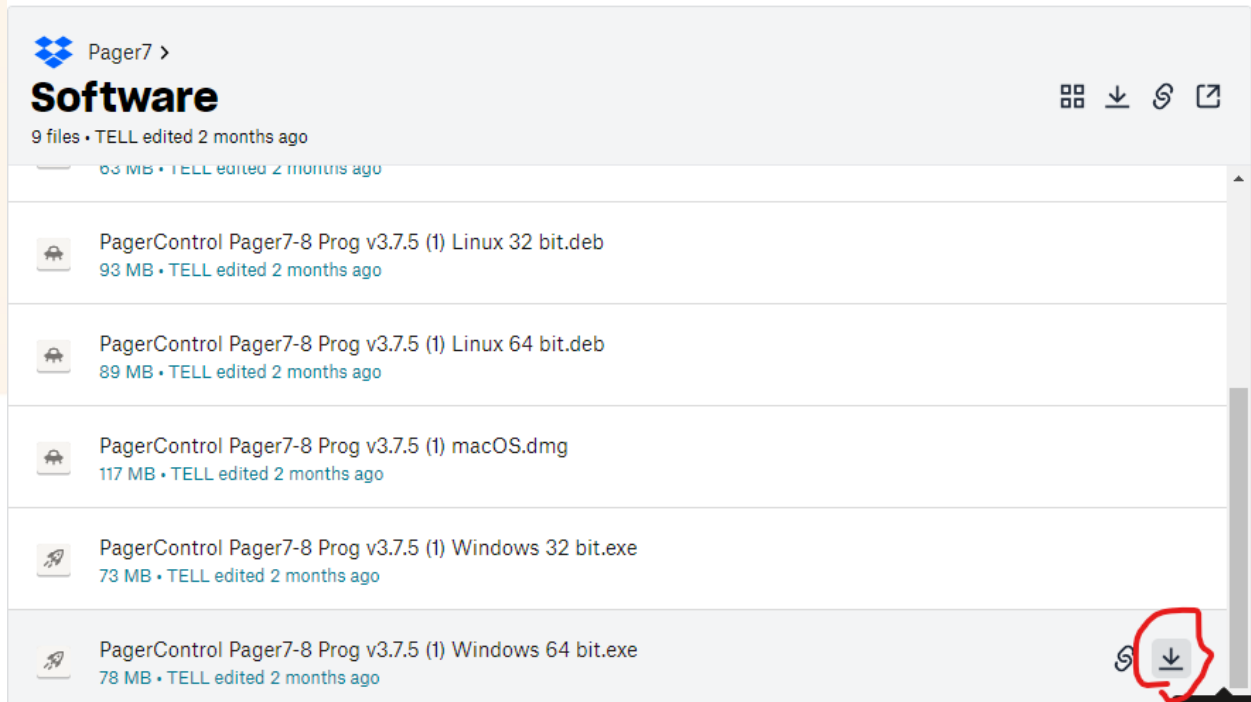

Pager7 >
Software
9 files • TELL edited 2 months ago


- 63 MB • TELL edited 2 months ago
- PagerControl Pager7-8 Prog v3.7.5 (1) Linux 32 bit.deb
93 MB • TELL edited 2 months ago
- PagerControl Pager7-8 Prog v3.7.5 (1) Linux 64 bit.deb
89 MB • TELL edited 2 months ago
- PagerControl Pager7-8 Prog v3.7.5 (1) macOS.dmg
117 MB • TELL edited 2 months ago
- PagerControl Pager7-8 Prog v3.7.5 (1) Windows 32 bit.exe
73 MB • TELL edited 2 months ago
- PagerControl Pager7-8 Prog v3.7.5 (1) Windows 64 bit.exe
78 MB • TELL edited 2 months ago

Spara filen och installera.

Om det inte redan är gjort så stoppa i ett aktivt SIM-kort i enheten och anslut spänningsmatning.

Starta programvaran Pager Control med Pager7 ansluten via USB-kabel.

Logga in med "Device password": 1111

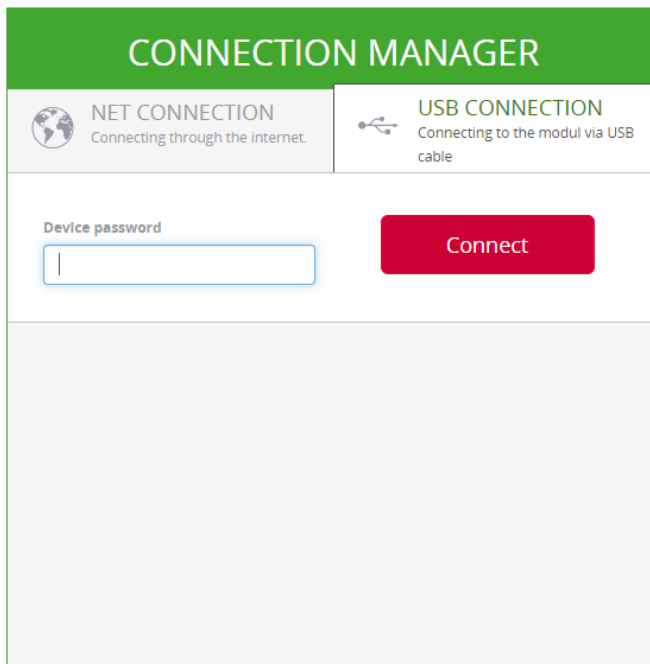

CONNECTION MANAGER

NET CONNECTION
Connecting through the internet.

USB CONNECTION
Connecting to the modul via USB cable


Device password

Connect

Öppna menyn genom att klicka på menysymbolen uppe till vänster.




Om ditt SIM-kort har PIN-kod så anges den under Module settings → GSM-settings-→ PIN Code. Övriga inställningar i vyn kan man bortse från. Ev. kan man lägga in en limit för SMS per dag. Klicka på SAVE för att spara.

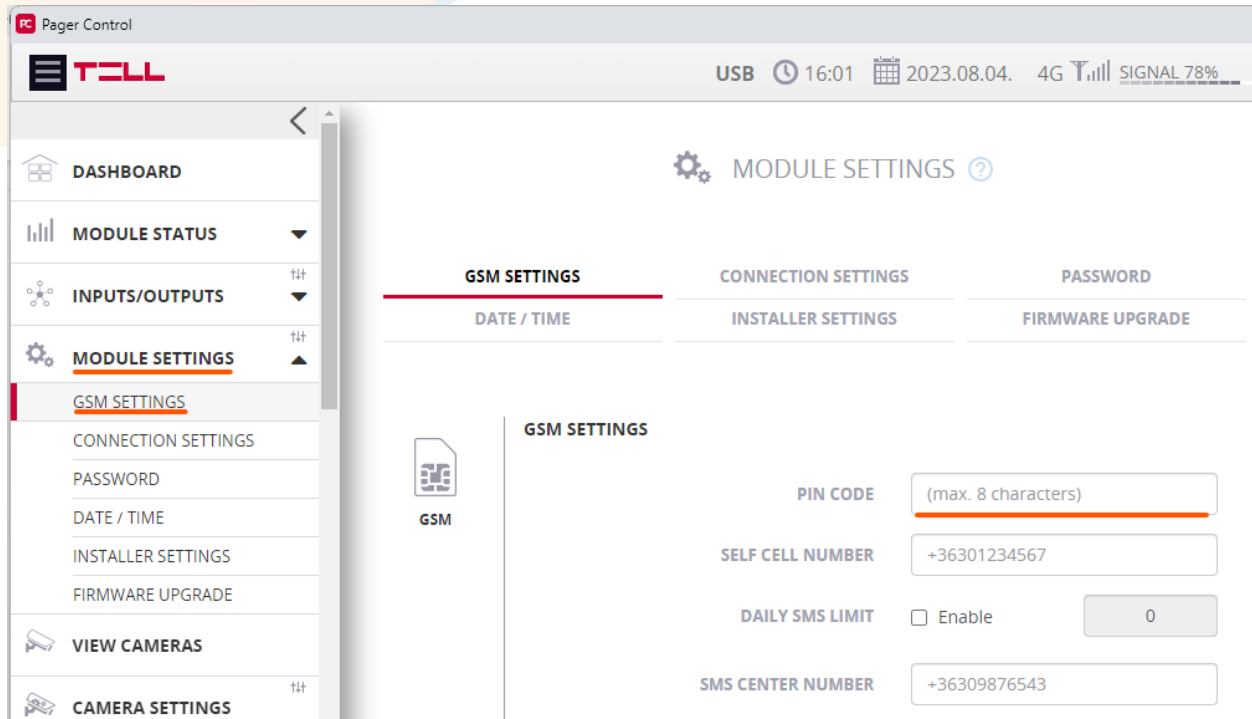

The screenshot shows the TELL Pager Control web interface. At the top, there is a status bar with 'USB', '16:01', '2023.08.04.', '4G', and 'SIGNAL 78%'. The main navigation menu on the left includes: DASHBOARD, MODULE STATUS, INPUTS/OUTPUTS, MODULE SETTINGS (highlighted), GSM SETTINGS (sub-highlighted), CONNECTION SETTINGS, PASSWORD, DATE / TIME, INSTALLER SETTINGS, FIRMWARE UPGRADE, VIEW CAMERAS, and CAMERA SETTINGS. The main content area is titled 'MODULE SETTINGS' and contains three tabs: 'GSM SETTINGS' (active), 'CONNECTION SETTINGS', and 'PASSWORD'. Under 'GSM SETTINGS', there are sub-sections for 'DATE / TIME', 'INSTALLER SETTINGS', and 'FIRMWARE UPGRADE'. The 'GSM SETTINGS' section includes a 'GSM' icon and the following fields: 'PIN CODE' (with a note '(max. 8 characters)'), 'SELF CELL NUMBER' (value: +36301234567), 'DAILY SMS LIMIT' (checkbox 'Enable' is unchecked, value: 0), and 'SMS CENTER NUMBER' (value: +36309876543).


Välj Module settings → Connection settings och ange APN (Access Point Name) för SIM-kortet. T.ex. för operatören Tre så är det: data.tre.se och för Telia: online.telia.se

Om du vill kunna styra Pager7 från en app eller fjärrkonfigurera med programvaran Pager Control så måste TELL CLOUD vara aktiverat. Kryssa i så fall i Enabled längst ner på sidan.

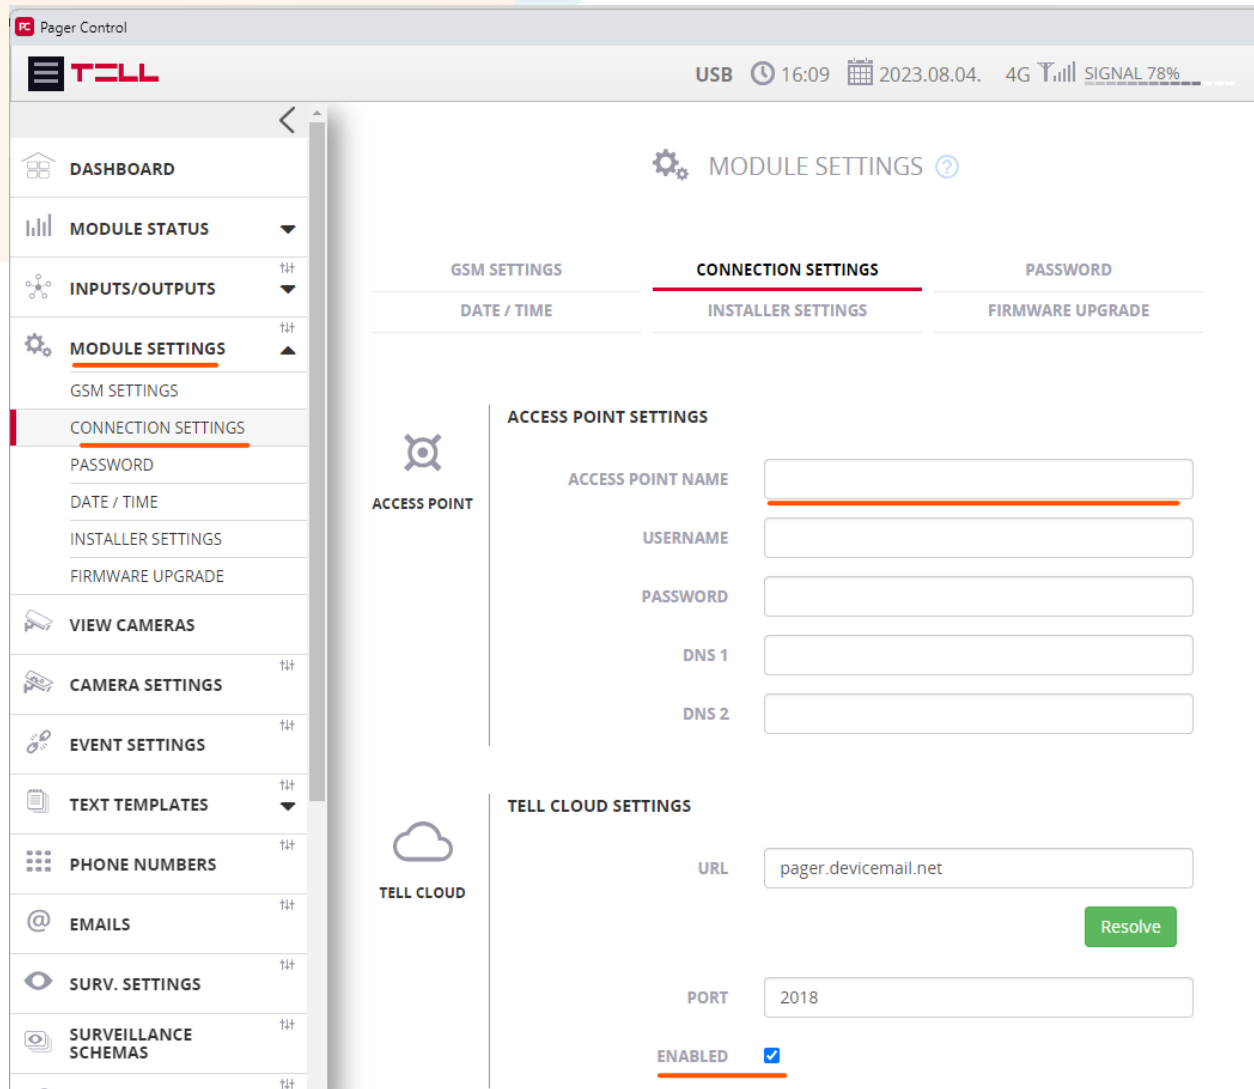

The screenshot shows the Pager Control web interface. The top navigation bar includes the TELL logo, a hamburger menu, and system information: USB, 16:09, 2023.08.04, 4G, and SIGNAL 78%. The left sidebar contains a menu with items like DASHBOARD, MODULE STATUS, INPUTS/OUTPUTS, MODULE SETTINGS (selected), GSM SETTINGS, CONNECTION SETTINGS (selected), PASSWORD, DATE / TIME, INSTALLER SETTINGS, FIRMWARE UPGRADE, VIEW CAMERAS, CAMERA SETTINGS, EVENT SETTINGS, TEXT TEMPLATES, PHONE NUMBERS, EMAILS, SURV. SETTINGS, and SURVEILLANCE SCHEMAS. The main content area is titled 'MODULE SETTINGS' and has three tabs: GSM SETTINGS, CONNECTION SETTINGS (active), and PASSWORD. Under CONNECTION SETTINGS, there are sub-tabs: DATE / TIME, INSTALLER SETTINGS, and FIRMWARE UPGRADE. The 'ACCESS POINT SETTINGS' section includes fields for ACCESS POINT NAME, USERNAME, PASSWORD, DNS 1, and DNS 2. The 'TELL CLOUD SETTINGS' section includes a URL field (pager.devicemail.net), a PORT field (2018), and an ENABLED checkbox (checked). A green 'Resolve' button is located below the URL field.

Kontrollera att enheten ansluter till mobilnätet och ev. Tell Cloud om det används genom att gå till Module status → Status of the connections. Alla ska vara "Connected".

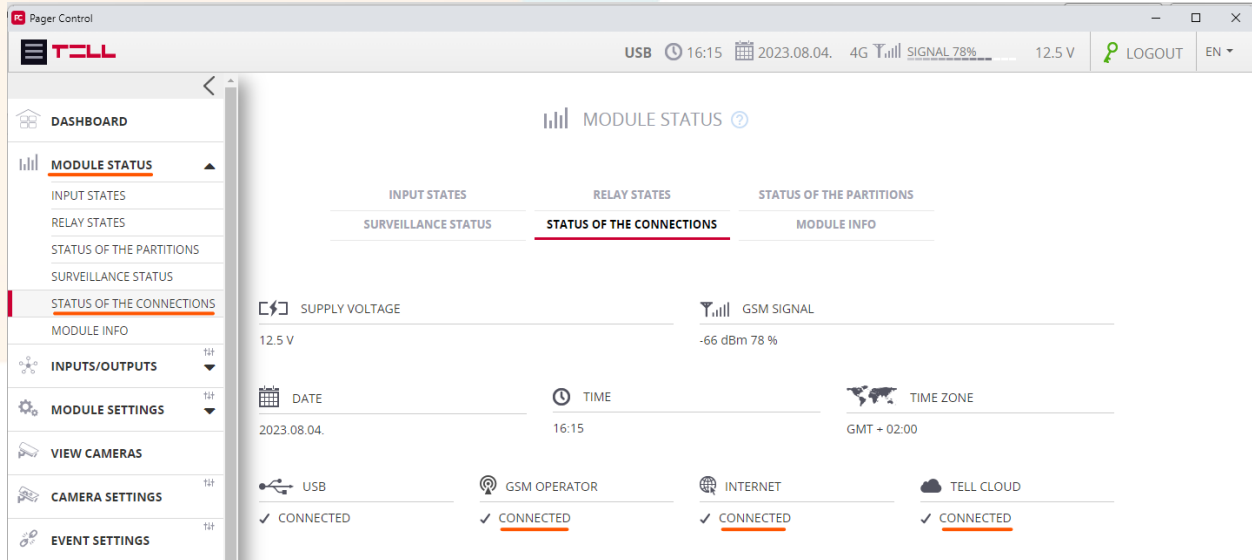

The screenshot shows the TELL Pager Control web interface. The top navigation bar includes the TELL logo, a hamburger menu, and system information: USB, 16:15, 2023.08.04, 4G, SIGNAL 78%, 12.5 V, LOGOUT, and EN. The left sidebar contains a menu with options: DASHBOARD, MODULE STATUS (selected), INPUT STATES, RELAY STATES, STATUS OF THE PARTITIONS, SURVEILLANCE STATUS, STATUS OF THE CONNECTIONS (highlighted), MODULE INFO, INPUTS/OUTPUTS, MODULE SETTINGS, VIEW CAMERAS, CAMERA SETTINGS, and EVENT SETTINGS. The main content area is titled 'MODULE STATUS' and has three tabs: INPUT STATES, RELAY STATES, and STATUS OF THE PARTITIONS. Under 'STATUS OF THE PARTITIONS', there are three sub-sections: SURVEILLANCE STATUS, STATUS OF THE CONNECTIONS (selected), and MODULE INFO. The 'STATUS OF THE CONNECTIONS' section displays the following data:

Category	Value
SUPPLY VOLTAGE	12.5 V
GSM SIGNAL	-66 dBm 78 %
DATE	2023.08.04.
TIME	16:15
TIME ZONE	GMT + 02:00
USB	✓ CONNECTED
GSM OPERATOR	✓ <u>CONNECTED</u>
INTERNET	✓ <u>CONNECTED</u>
TELL CLOUD	✓ <u>CONNECTED</u>

Sen kan du börja konfigurera de funktioner du vill ha.