

Instruktion för uppgradering av firmware i Adapter2

Detta dokument förutsätter att programvaran för konfiguration av Adapter2 redan är installerad.

Surfa till https://www.tell.hu/en/Adapter2-4G-IN4-R1

Skrolla ner och ladda ner senaste Firmware (exe-filen).

Details Info Downloads		
★↓ Adapter2 5 files	# ± ∅ []	
Doc Deutsch - DE	*	
Doc English - EN		
Doc Magyar - HU		
Firmware	8 <u>+</u>	
Software		
Adapter2 > Firmware		⊞ <u>≁</u> ⊗ []
Korábbi verziók HU - Earlier versions EN - Vorherige Versionen DE		A
Adapter2 Firmware v8.02.0.8311 (USB-IP).tf3 1 MB • TELL edited 9 days ago		
Adapter2 Firmware v8.02.0.8311 (USB).exe 747 KB • TELL edited 9 days ago		Connoda
Firmware-frissítés HU - Firmware upgrade EN - Firmware-Update DE.txt 357 bytes • TELL edited Oct 6, 2022		

Anslut till enheten med en USB-kabel och starta programvaran "Adapter2...".



Ange device password 1234 och välj Connect.

Adapter2 programming software v7						
Connect Disconnect Offline of	++† evice selector					
Connection	∧ Connection type					
Connection type Device register						
Server register	Connection parameters					
Device settings	Device password					
General	Details					
Reporting channels	Date/Time	▼ Event				
Notification templates	▶ 2022-11-29 15:20:58	Connection type:				
Inputs						

Därefter ska du vara ansluten som superadmin.

Connection type @							
USB TEX protocol							
Connection parameters							
Device password **** Details							
Date/Time							
▶ 2023-02-09 10:34:00 Connected							
2023-02-09 10:33:59 Superadmin level access							
2023-02-09 10:33:59 Adapter 3, Variant with a modem							
2023-02-09 10:33:59 Successful device identification, device ID: FC:0F:E7:63:AS	i:F7						
2023-02-09 10:33:59 Connecting							
2023-02-09 10:33:30 Connection type: USB							



Klicka sedan på Firmware update.....

	😪 Adapter2 programming software v8							
	40	₩ <mark>⊗</mark>	8		*9	0	1	
(Connect	Disconnect	Change Admin p	assword	Change Superadmin password	Firmware update	Restart the device	Restore fac
Connection			^	Conn	ection type 📀			
	 Connection type Device register 			USB	-	TEX protocol		
	Server register			Connection parameters				
	Device settings ^		****					
	c	General		Details				
	Reporting channels Notification templates		Date	/Time	▼ Event			
			ites	2024	-03-28 15:19:13	Connected		
	Inputs			2024	-03-28 15:19:13	Superadmin level access		
	Input events		2024	-03-28 15:19:13	Adapter2, Variant with a modem			
	Service events		2024	-03-28 15:19:13	Successful device identification, device ID: FC:0F:			
	Custom events		2024	-03-28 15:19:02	Connecting			
				2024	2024-03-28 15:18:42 Connection type: USB			
	1	oice messages						
	ļ	Admin access						

... och välj filen som du laddade ner nyss

1	> Downloads >		∨ C Sea	arch Downloads	م
fold	ler			≣ ▼	
	Name	Date modified	Туре	Size	1
I	∼ Today				
	Adapter2 Firmware v8.02.0.8311 (USB-IP).tf3	2024-03-28 15:21	TF3 File	951 KB	
	\sim Farlier this month				
le name: V				rmware (*.tf3)	~
				Open C	ancel

Därefter installeras den nya firmwaren, enheten startar om och programvaran ansluter igen när det är klart. Den processen tar några minuter.



När den är klar välj Status Monitoring och kontrollera att enheten har den senaste firmwareversionen.

∜⊘ ∜⊗	<u>@</u>	-15	_/v~	V 🖌	7
Connect Disconnect	Time synchronizatio	on Activate output	Periodic test report	AT log Moden	n soros
Connection	^	Status monitor	ring		
		Property	Status / Va	lue	
Connection type		Device			
Device register Server register		Firmware version	V8.02.0.83	311	
		SIM identifier		(i)	
		Model	Adapter 2 -	4G.IN4.R1	
		Device ID	FC:0F:E7:0	53:99:E6	<u> </u>
Device settings	^	Supply voltage	11,87 V		
General		Simulated line statu	s Idle		
Beneraline alterna		Counters			
Reporting channe	eis	System time	time 2024-03-14 14:47:32		
Notification temp	ates	IP uptime	0 seconds		
Inputs		Device uptime	124 second	124 seconds	
Input events Service events Custom events Voice messages		GSM uptime 0 seconds			
		Data traffic 115011 B			
		Network			
		GSM operator			
Admin accord		Data connection typ	e		_
Admin access		GSM signal	None / Ver	y low	
Advanced setting	ļs	IP address			
		Number of connection	ons 0 pcs		
Alarm system e	vents ^	Modem status	Disabled		
		Inputs / Outputs	Disableu		
Alarm system eve	ents	TN1	Inactive		
Custom event co	de names	IN2	Inactive		1
Custom user nam	es	IN3	Inactive		
Custom partition	names	IN4	Inactive		
Custom paradom		Output Inactive			
Custom zone nam	les	Reporting channels			
		IP1	Not configu	ured	
Device status	^	IP2	Not configu	ured	
-		IP3	Not configu	ured	
Status monitoring	1	IP4	Not configu	ured	

Klart!