



Installing the WeatherLink Serial into the Weather Envoy


1. Remove the three screws from the back of the Envoy case.

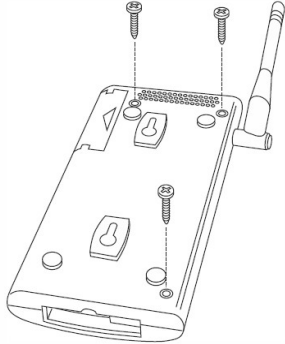

2. Separate the case halves to expose the data logger connector.

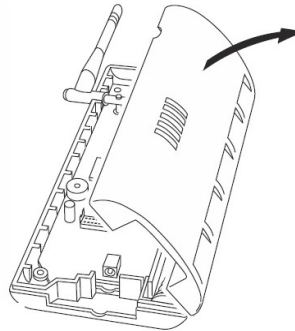

3. Carefully inset the data serial logger into the connector slot, making sure to push the data logger firmly into place.

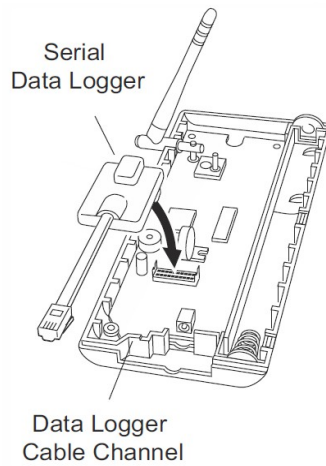


KTA-282 RS232 Port or
GWY-141 RS232 Port 2




9-Pin
Connector
(DB-9)




Optional 40' (12 m) 4-Conductor
Extension Cable and Coupler

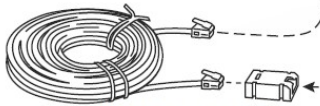

8' (2.5 m) Cable

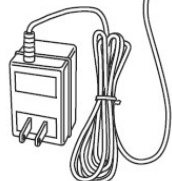


Integrated Sensor Suit
PRODUCT #6322C

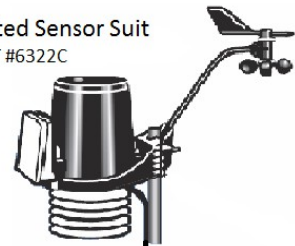


Wired Link

Weather Envoy
Data Logger

AC Power
Adapter

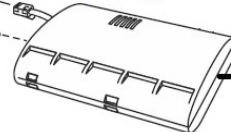

Installing the WeatherLink Serial into the Vantage Vue console

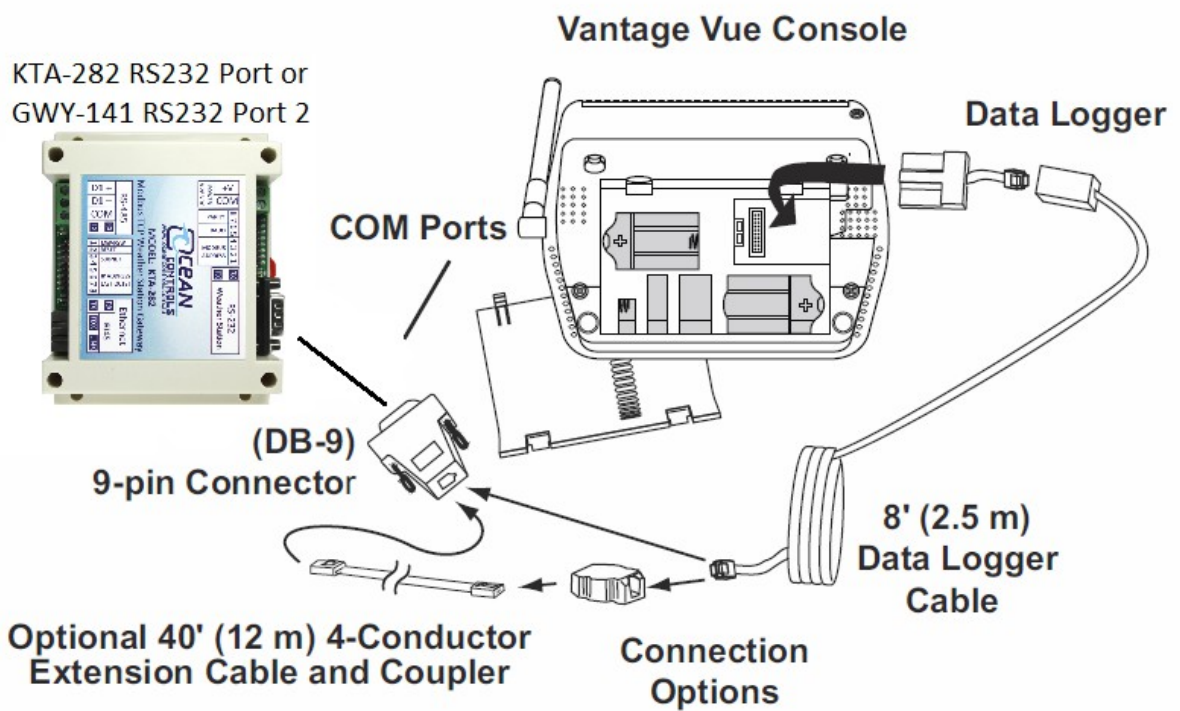

Installing the WeatherLink Serial into the Vantage Pro2 console

