




control solutions

TERACOM

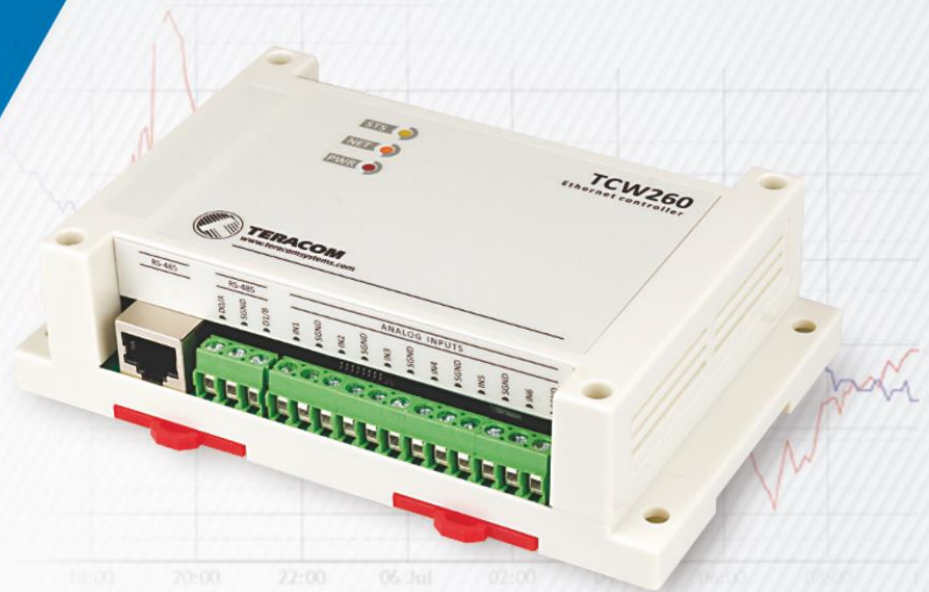

TCW260 Energy monitoring module

Version 1.2 / June 2019

USER MANUAL

1. Introduction

TCW260 is an energy monitoring module with Ethernet connectivity and data logging capability. All monitored parameters can be seen as numbers and as graphs.

The device has 4 digital inputs, S0+ compatible. The inputs can work in two modes – OPEN/CLOSED for a reading of “dry contact” outputs and COUNTER mode for direct connection of energy meters with pulse outputs.

The energy monitoring module has also 6 analog inputs. Every analog input can work either in voltage (0/10V) or current loop (0/20mA) modes. The mode is changed over the user interface.

All digital and analog inputs are fully isolated from the power supply.

TCW260 supports MODBUS RTU interface for up to 24 Teracom and third-party sensors. The used RS-485 interface is fully isolated from the power supply.

The user can arrange up to 24 independent monitoring channels from the inputs and sensor readings. Every channel can be set up using up to 2 input parameters and/or constants. There are three type of channels – discrete (for OPEN/CLOSED outputs monitoring), general (for general monitoring) and cumulative (for energy, volume, etc. monitoring).

The user can also arrange up to 24 independent alarms with 5 different user selectable states. Every alarm can be set up using up to 2 limits and hysteresis. The alarm can be assigned to a specific channel. In this case, in an alarm state, the assigned channel is colored on the monitoring page and graphs.

The device supports SNMP, HTTP API and MODBUS/TCP as machine-to-machine (M2M) communication.

2. Features

- 10/100 Mb Ethernet connectivity with Auto-MDIX;
- Password protected, web-based configuration and control;
- 4 digital inputs, S0-pulse interface compatible;
- 6 analog inputs with 0/10V and 0/20mA modes;
- MODBUS RTU interface for up to 24 sensors (registers);
- Up to 24 channels for monitoring;
- Up to 24 independent alarms;
- SNMP v.2 support;
- SNMP traps sending for alert conditions;
- HTTP and SNMP port changing;
- HTTP API commands;
- Periodical HTTP Post of XML/JSON status files for client-server systems;
- MODBUS TCP/IP support;
- Dynamic DNS with DynDNS, No-IP and DNS-O-Matic support;
- NTP protocol support;
- Data logger for up to 70000 records;
- DIN Rail Mountable;
- Wide power supply voltage range;
- Backup/restore of settings;
- Remote firmware update.

3. Applications

The energy monitoring module TCW260 is dedicated to monitoring and recording the parameters of the measurement of resources - electricity meters, gas meters, water meters, and others. Rising resource costs require reliable analysis and optimization. Depending on the search result, this can be done at a micro level (separate machine) or macro level (company).

The monitoring module can integrate seamlessly into already working objects. With proper selection of sensors, this can happen even without interrupting the production process.

Of course, the module can be used also for general monitoring of industrial processes.

A few example applications include:

- Energy analysis and optimization;
- Water consumption analysis;
- Gas consumption optimization;
- A building management system;
- Industrial processes monitoring;
- General SCADA systems.

4. Specifications

- Physical characteristics
Dimensions: 145 x 90 x 40 mm
Weight: 200 g
- Environmental limits
Operating temperature range: -20 to 55°C
Storage temperature range: -25 to 60°C
Operating relative humidity range: 10 to 80% (non-condensing)
- Warranty
Warranty period: 3 years
- Power requirements
Supply Voltage: 10 to 32 VDC
Input Current: 220 mA @ 12 VDC (without RS-485 powering)
- RS-485 interface
Isolation: Isolated (1000VDC)
Output voltage (pin 7 of RJ-45): 5.0 ± 0.3 VDC
Maximum output current (pin 7 of RJ-45): 0.2 A
- Digital inputs
Isolation: Isolated (1000VDC)
Mode: OPEN/CLOSED ("Dry contact") or COUNTER (S0-pulse interface outputs)
Maximum input voltage: +5.5VDC
Sampling rate: 1mS
Digital filtering time interval: 5 to 60000mS

- Analog inputs
Isolation: Isolated (1000VDC)
Type: Single ended
Resolution: 10 bits
Mode: Voltage or current loop
Input Range: 0/10V or 0/20mA
Accuracy: $\pm 1\%$
Sampling Rate: 600mS per channel (averaged value of 100 samples)
Input Impedance: 1 mega-ohm (min.)
- Internal FLASH memory
Settings segment endurance: 100 000 cycles (Every setting change is a memory cycle).
Data logger segment endurance: 100 000 cycles of 70000 records.
Update segment endurance: 100 000 cycles (updates).

5. LED indicators

The following indicators show the status of the controller:

- **PWR** (red) – in working mode shines, blinks together with STS if there is a hardware error;
- **STS** (yellow) – flashes when the main program of the controller is executed;
- **NET** (orange) – network status - ON when a link is established, blinks if there is an activity.

6. Installation and setup

This device must be installed by qualified personnel.

This device must not be installed directly outdoors.

The Installation consists of mounting the device, connecting to an IP network, connecting inputs and outputs, providing power and configuring via a web browser.

6.1. Mounting

TCW260 should be mounted in a clean and dry location on a not flammable surface. Ventilation is recommended for installations where the ambient air temperature is expected to be high.

Mount the device to a wall by using two plastic dowels 8x60mm (example Würth GmbH 0912 802 002) and two dowel screws 6x70mm (example Würth GmbH 0157 06 70). Attach the screws to the surface vertically. See Appendix-A, fig. 1 for mechanical details.

Maintain spacing from adjacent equipment. Allow 50 mm of space on all sides, as shown in fig. 2 in Appendix A, this provides ventilation and electrical isolation

TCW260 can be mounted to a standard (35mm by 7.55mm) DIN rail. Attach the controller to the DIN rail by hooking the hook on the back of the enclosure to the DIN rail and then snap the bottom hook into place.


6.2. Connection

Attention! Disconnect power supply before wiring.

The correct wiring procedure is as follows:

- Make sure power is turned off;
- Make wiring connections to the terminals;
- Apply power.

Make sure that the wires are properly attached to the terminals and that the terminals are tightened. Not the proper wiring and configuration can cause permanent damage to TCW260 or the equipment to which it is connected or both.

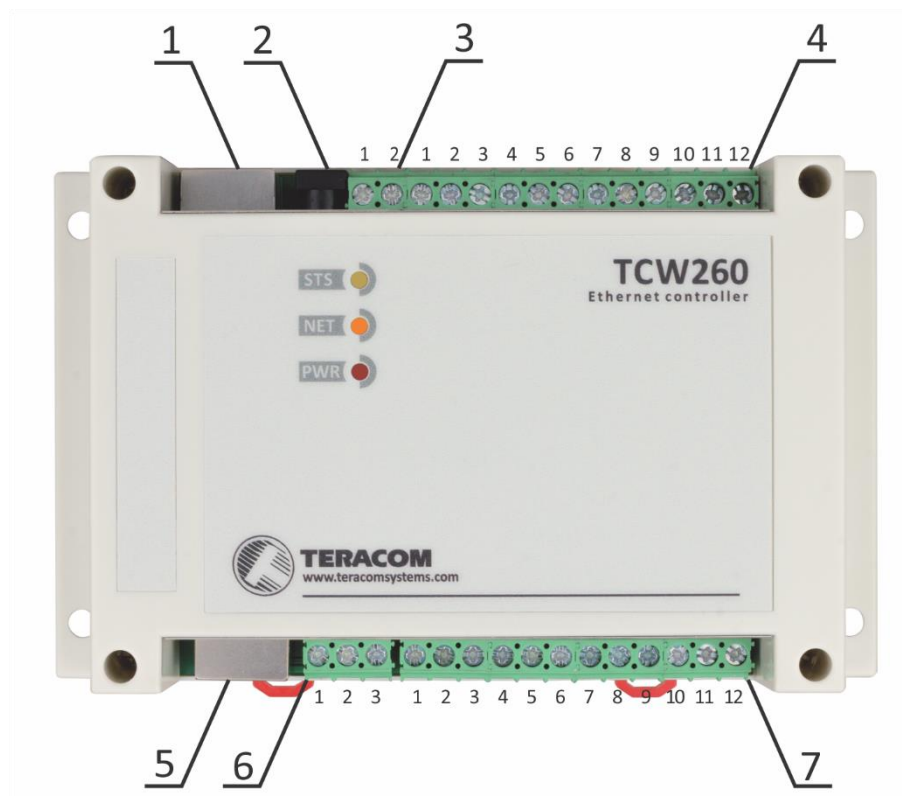

- | | | | |
|--------------------|---|--------------------|---|
| Connector 1 | Ethernet - RJ45 | Pin4 | – Line B- |
| Connector 2 | Power - 2.1x5.5mm connector,
(Central positive) | Pin5 | – Line A+ |
| Connector 3 | Pin1 – Power positive
Pin2 – Power negative (GND) | Pin6 | – not connected |
| Connector 4 | Pin1 – S04- (SGND)
Pin2 – not connected
Pin3 – S04+ (Digital in 4)
Pin4 – S03- (SGND)
Pin5 – not connected
Pin6 – S03+ (Digital in 3)
Pin7 – S02- (SGND)
Pin8 – not connected
Pin9 – S02+ (Digital in 2)
Pin10 – S01- (SGND)
Pin11 – not connected
Pin12 – S01+ (Digital in 1) | Pin7 | – +VDD |
| Connector 5 | Pin1 – not connected (most left)
Pin2 – not connected
Pin3 – not connected | Pin8 | – SGND |
| | | Connector 6 | Pin1 – D0/A+
Pin2 – SGND
Pin3 – D1/B- |
| | | Connector 7 | Pin1 – Analog in 1
Pin2 – SGND
Pin3 – Analog in 2
Pin4 – SGND
Pin5 – Analog in 3
Pin6 – SGND
Pin7 – Analog in 4
Pin8 – SGND
Pin9 – Analog in 5
Pin10 – SGND
Pin11 – Analog in 6
Pin12 – SGND |

It is recommended using grounding configuration with isolated local ground and PE.

6.2.1. Power supply connection

TCW260 is designed to be supplied by adapter SYS1421-0612-W2E or similar, intended for use in the conditions of overvoltage category II, and prior assessed for compliance with safety requirements. The power supply equipment shall be resistant to short circuit and overload in a secondary circuit.

When in use, do not position the equipment so that it is difficult to disconnect the device from the power supply.

6.2.2. Digital inputs connection

All inputs are galvanic isolated from the power supply.


The digital inputs of TCW260 in OPEN/CLOSED mode can be used for monitoring of devices with “dry contact” outputs – door contact switch, push button, PIR detector, etc.

The following picture illustrates how a dry contact switch can be connected to the input of TCW260. One side of the contact is connected to “S0+” and another side is connected to “S0-” terminals.



The digital inputs of TCW260 in COUNTER mode can be used for monitoring of devices with S0-pulse interface – energy meters, water meters, etc.

The following picture illustrates how an energy meter is connected to the input of TCW260. One side of the contact is connected to “S0+” and another side is connected to “S0-” terminals.

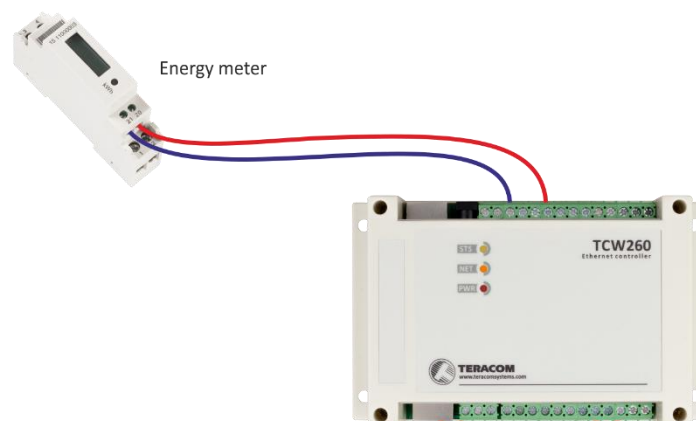


The maximum cable length should be up to 30 meters.

6.2.3. Analog inputs connection


All inputs are galvanic isolated from the power supply.

Analog inputs of TCW260 can be used for monitoring of devices with voltage and current loop outputs. They can be connected directly to analog sensors for temperature, humidity, current/voltage transducers, etc.

The following picture illustrates how a battery can be connected to the analog input of TCW260 in voltage mode. The positive terminal is connected to “Analog In” and the negative terminal to “GND”.

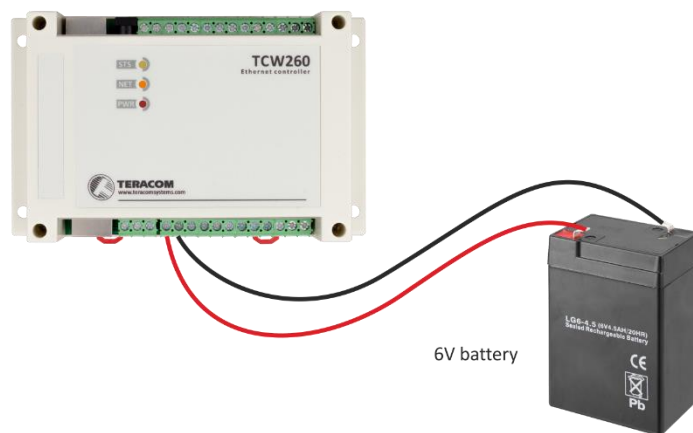

The following picture illustrates how an analog sensor for temperature with current loop output is connected to the analog input. The active terminal is connected to “Analog In” while the shield terminal to “GND”.

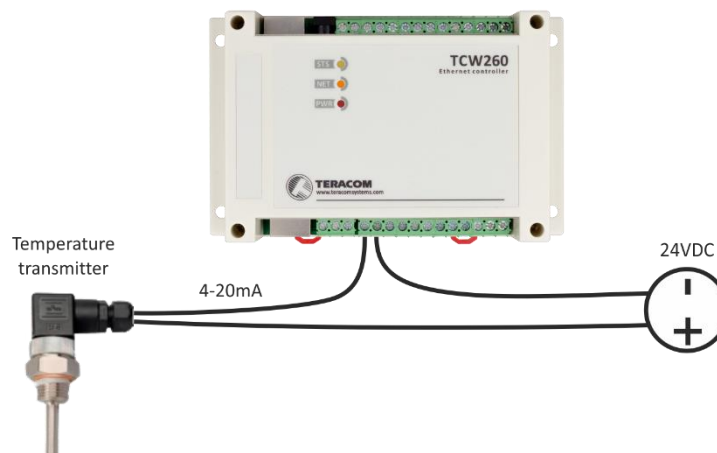

The maximum cable length should be up to 30 meters.

6.2.4. RS-485 connection

RS-485 interface is galvanic isolated from the power supply.

Up to 24 MODBUS RTU sensors can be connected to TCW260. The device supports Teracom and third-party sensors.


Connections can be realized by a standard RJ-45 connector. The used pinout is that one recommended in the document “MODBUS over Serial Line Specification and Implementation Guide” available on www.modbus.org.

It is mandatory to use 120ohms line terminators at both ends of the bus. TCW260 incorporates one of the terminators and should be placed at one end. So the client should only take care of terminating at the other end of the line.

It is strongly recommended using “daisy-chained” (linear topology) for multiple sensors:




For sensors with screw terminals following connection is possible:

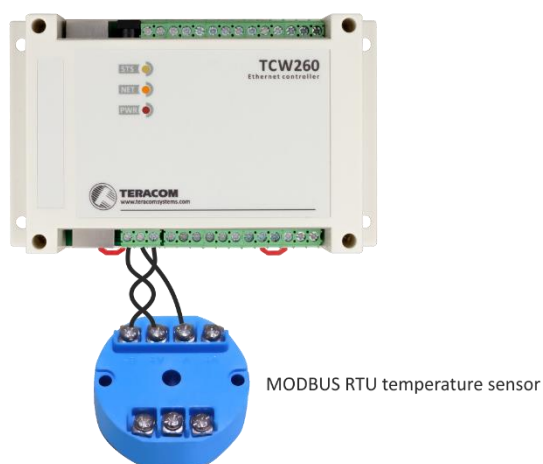


It is recommended to use only UTP/FTP cables and keep total cable length up to 30 m, although functionality has been achieved on a longer distance.

6.2.5. Network connection


The Ethernet port of TCW260 should be connected to 10/100 Base-T Ethernet hub, switch or router.

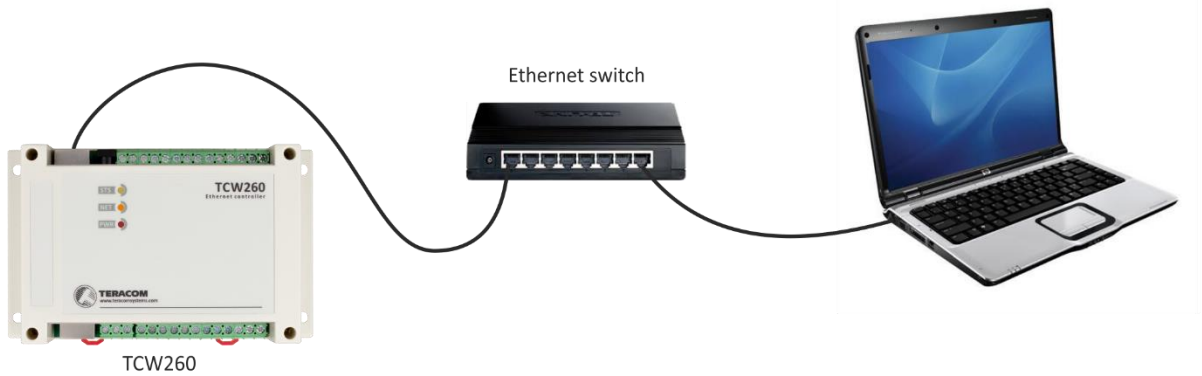

For configuration, TCW260 may be connected directly to the Ethernet port on a computer. The device support Auto-MDIX and it is not necessary to use “crossover” cable, standard “straight-through” can be also used.

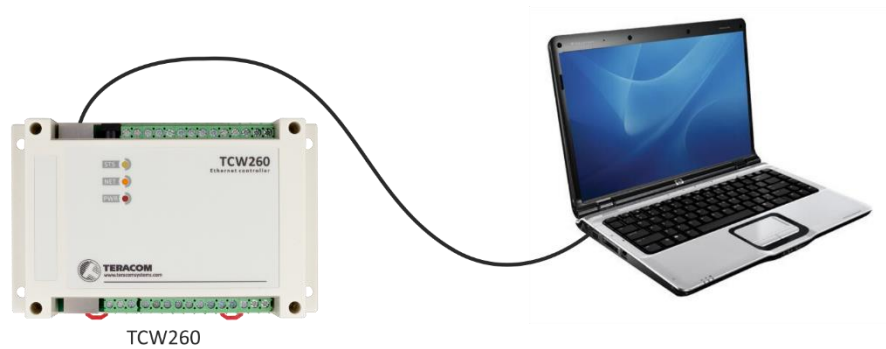

TCW260 can be used in a wireless network by connecting through a wireless router.

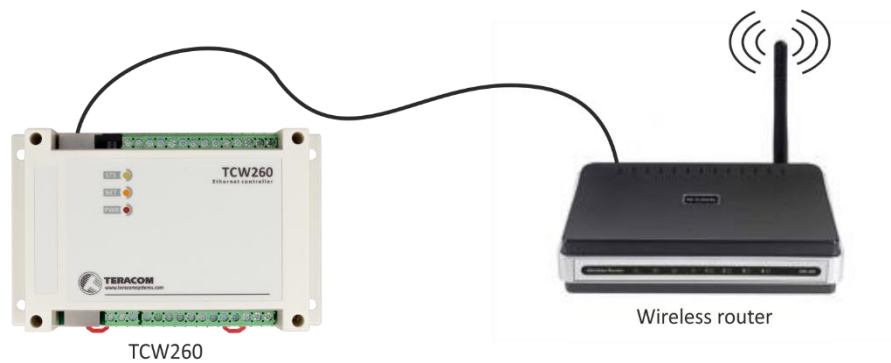


6.3. Communication setup


By default TCW260 is delivered with the following network settings:

IP address: 192.168.1.2, Subnet Mask: 255.255.255.0, Default Gateway: 192.168.1.1


Communication with TCW260 can be established by assigning a temporary IP address to the computer. For computers with Windows OS assigning of IP address is made in “Local area connection properties”:

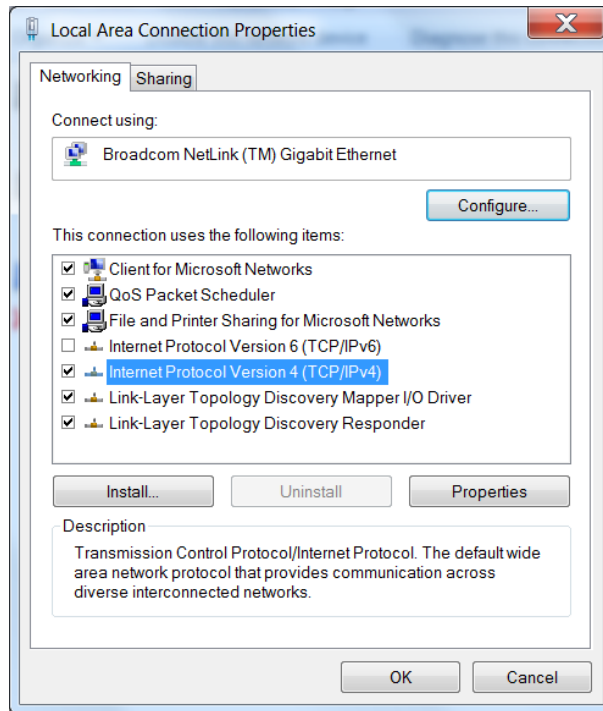


This address should be on the same network - for example 192.168.1.3:

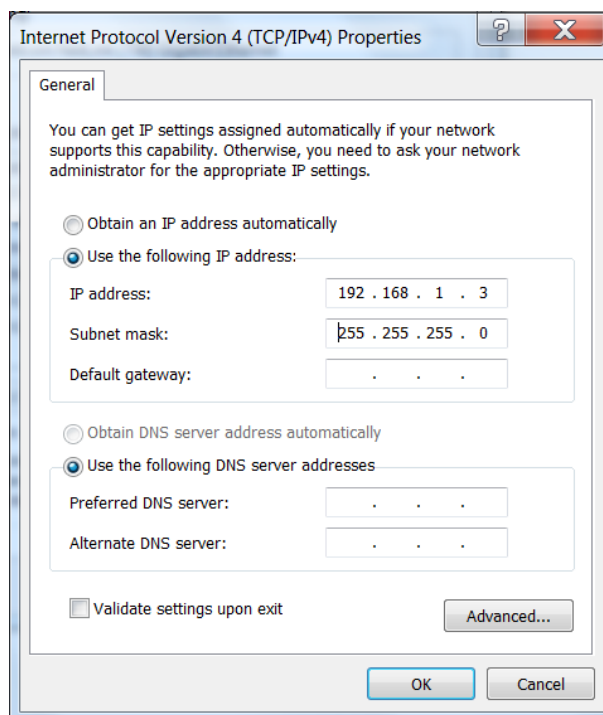

To get access to the web interface, you should type <http://192.168.1.2> into the browser.

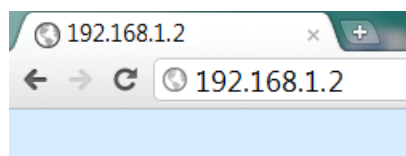

If the network settings are correct, the login pop-up window will appear:

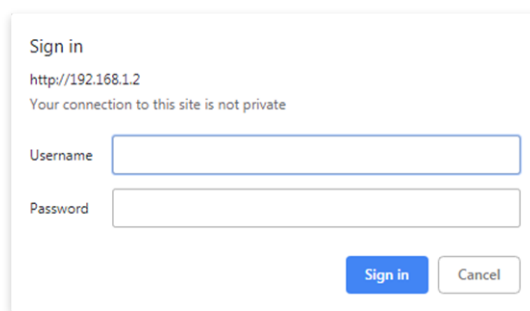

Authorization data must be entered (by default username=admin, password=admin).

It is recommended to change the username and password to prevent unauthorized access to the controller.

All TCW controllers connected to LAN can be easily found by a free tool “TCW discoverer”. It is available for Win and Mac operating systems and can be downloaded from www.teracomsystems.com.

7. Set up concept

The main set up channel of the device is the web interface. It is recommended to use it, even more of the settings are available through SNMP and HTTP API commands.

 
The device set up begin with network settings.

Then the so-called primary parameters (MODBUS RTU sensors/registers, analog inputs, and digital inputs) are set up.

The channels are formed from already set up primary parameters. Every channel can combine up to two primary parameters and constants with math operations. It is possible that a channel is formed by only one primary parameter.

Once all channels have been tuned, the alarm can be set up. It is important to remember that alarms work with channels, not with primary parameters. Each alarm can have up to two conditions. Different channels may be involved in the conditions. Alarms are independent of the channels but can also be assigned to a channel.

In other words, the right set up should follow the following order:



Once everything above is set correctly, the wanted services (data logger, SNMP, HTTP API, etc.) can be turned on.

8. Web interface

The web interface allows configuration and monitoring. All pages are UTF-8 encoded.

The controller supports a few active session.

8.1. Monitoring

This section displays the status of all channels and alarms – textually and graphically.

The pages “Channels” and “Alarms” are automatically refreshed on an interval of 0 to 253 seconds. Zero means no automatic refresh. This parameter is set in section “Setup-System- Refresh of channels and alarms pages”. By default, the refresh interval is 1 second.

8.1.1. Channels

This page displays the status of all monitored channels – their values and alarm status. The information is updated on the refresh interval.

Channels	Description	Value	Unit	Status
1	Temperature	25.876	°C	Warning
2	Humidity	45.967	RH	Normal
3	Digital Input 1	OPEN		Critical
5	V05-Voltage	229.877	V	Minor
6	V06-Current	4.006	A	Normal
7	V07-Energy	6122.271	kWh	


8.1.2. Alarms

This page displays the status of all alarms. The information is updated on the refresh interval.

Alarms	Description	Status
1	AL01-Temp.	Warning
2	AL02	Minor
3	AL03	Normal
4	AL04-DI1	Critical
5	AL05-Humidity	Normal

8.1.3. Graphs

All channels together with their alarm statuses can be monitored graphically in tabs Graph-1 to Graph-6. Every graph supports up to 4 channels with up to 2 different dimensions. The curve's color for every channel is selectable. The alarms status colors are fixed. There are a few checkboxes for display modification.

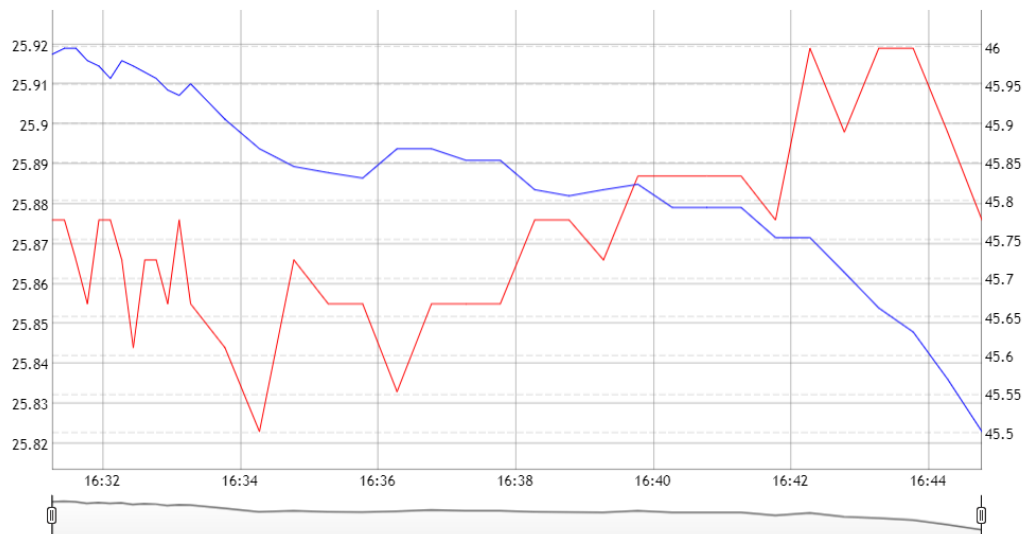

Graphs show information from the past, so it is mandatory that the logger is active.

It is important to know that the information on graphs is static, it is not updated with the newest values. If you want to see the last information, the page should be reloaded. The information can be exported in CSV file.

Graph Name

Graph-1

Temperature ■

Humidity ■

none ■

none ■

Save

Period

Last 12 hours

Highlight alarm values

Highlight series

Highlight weekends

Temperature

Humidity

none

none

From

To

Export

8.2. Setup

8.2.1. Network

The network parameters can be set on this page.

Network setup	
Hostname	<input type="text" value="TCW260"/>
Static/DHCP	<input type="text" value="Static"/>
IP address	<input type="text" value="192.168.32.191"/>
Subnet mask	<input type="text" value="255.255.255.0"/>
Default gateway	<input type="text" value="192.168.32.1"/>
DNS	<input type="text" value="8.8.8.8"/>
MAC address	54:10:ec:4f:59:f6

The controller supports static and dynamic IP addresses.

It is good practice to change the default IP address of the controller immediately after first power-on. This will avoid collisions if many devices are used on the same network.

It may be necessary to clear the arp cache, each time you connect a new device to the network. This is done by typing `arp -d` in the command prompt window of the computer.

The “Hostname” is up to 15 characters. It is shown in search results of TCW discoverer.

It is recommended to use public DNS server (8.8.8.8, 8.8.4.4, etc.) rather than the default gateway.

8.2.2. Modbus sensors

8.2.2.1. Modbus RTU communication setup

This section allows you to set the communication parameters of the RS-485 interface – bit rate, parity, and a number of stop bits. By default, the settings are 19200, even parity, and 1 stop bit. It is mandatory that all sensors on the bus use the same bit rate, parity, and a number of stop bits. Before to add any sensor to the interface its parameters should be set up properly.

In the right part of the section, there is a tool which scans the bus and reports the number of the found sensor together with their addresses. It is very useful at a time when you add new sensors. It is recommended to use a small address segment to speed up the scan process.

Playing with “Scan time-out for sensor answer” it is possible to find this parameter for an unknown sensor. The test starts with a large time-out (for example 500ms) and gradually decreases the time until the sensor stops responding. In order for the operation sustainability, the found time should be increased with for example 20%.

Modbus RTU communication setup			
Bit rate	<input type="text" value="19200"/>	Scan time-out for sensor answer, ms	<input type="text" value="100"/> Max scan time: 24700
Parity	<input type="text" value="even"/>	First address	<input type="text" value="1"/>
Stop bits	<input type="text" value="1"/>	Last address	<input type="text" value="247"/>
<input type="button" value="Scan"/>			
Found:		1	
sensors with following addresses:		1	

8.2.2.2. Modbus RTU sensors

This section allows you to add, delete or edit MODBUS RTU sensors/registers. All they are primary parameters and can be used in forming of channels.

It is recommended to add sensors/registers one by one using the scan tool described in 8.2.2.1.

Up to 24 sensors/registers can be added. All they are shown in the table.

#	Description	Sensor address	Data type	Data order	Register address	Time-out	Multiplier	Offset	Value	Actions
1	S01-Temperature	1	float	MSW first	100	50	1.000	0.000	25.770	Edit Delete
2	S02-Humidity	1	float	MSW first	102	50	1.000	0.000	45.083	Edit Delete

[Add](#)

Max response time-out: 100

Polling time: 1000

[Save](#)

According to MODBUS convention, possible addresses for sensors are in the range from 1 to 247.

The Multiplier and offset works as follows:

$$\text{Value} = (\text{Raw_Value} * \text{Multiplier}) + \text{Offset}.$$

If you want to see the raw value of the sensor/register set Multiplier=1 and Offset=0.

During operation, all sensors are polled consecutively. The controller expects an answer in "response time-out". If the sensor does not respond for that time, the controller addresses the next sensor. If the same sensor does not respond in series 3 times, the device assumes that it is not present in the system but continues to polls it.

According to the above paragraph, special attention should be paid for response time-out. On the one hand, the time-out should be large enough for the sensor to respond, but on the other hand, the sum of all sensor time-outs forms the "maximum response time-out" of the whole system. The "maximum response time-out" determines the response of the system.

For the sustainable system operation, polling of every sensor is made at a fixed time - "Polling time". It is user selectable and can be 1, 2, 3 or 4 seconds. By default, it is 1 second.

It is recommended that "Polling time" ≥ "Maximum response time-out".

8.2.2.3. Sensor setup tool

The device has also a simple but useful tool for configuration and control of MODBUS RTU sensors. It can change the addresses and communication parameters of sensors from different manufacturers.

Communication setup

Bit rate	<input type="text" value="19200"/>		Time-out	<input type="text" value="100"/>
Parity	<input type="text" value="even"/>		First address	<input type="text" value="1"/>
Stop bits	<input type="text" value="1"/>		Last address	<input type="text" value="247"/>

Found: 1
sensors with following addresses: 1

MB Address

Sensor communication register setup

Bit rate register #	<input type="text" value="10"/>	Value	<input type="text" value="1"/>	
Parity, stop register #	<input type="text" value="11"/>	Value	<input type="text" value="19200"/>	
Address register #	<input type="text" value="12"/>	Value	<input type="text" value="1"/>	(1 -:: 247)

Transfer successful.

Sensor register check

Start address	Data type	Number of registers to read	Data order	Row value
<input type="text" value="100"/>	<input type="text" value="float"/>	<input type="text" value="2"/>	<input type="text" value="MSW first"/>	<input type="text" value="25.834"/>

Transfer successful.

8.2.3. Inputs

This page is used for parameterization of analog and digital inputs

8.2.3.1. Analog inputs

TCW260 has 6 analog inputs. All they are isolated from the power supply but use the same ground. Every analog input can work in voltage (0/10V) or current loop mode (0/20mA).

For every analog input Multiplier and Offset can be set. They work as follows:

$$\text{Value} = (\text{Raw_Value} * \text{Multiplier}) + \text{Offset}.$$

If you want to see the raw value of the sensor/register set Multiplier=1 and Offset=0.

Analog inputs						
#	Description	Multiplier	Offset	Mode	Value	Actions
1	A01	46.000	0.000	0-10V	0.000	Edit
2	A02	1.000	0.000	0-20mA	0.000	Edit
3	A03	1.000	0.000	0-20mA	0.000	Edit
4	A04	1.000	0.000	0-10V	0.000	Edit
5	A05	1.000	0.000	0-10V	0.000	Edit
6	A06	1.000	0.000	0-10V	0.000	Edit


8.2.3.2. Digital inputs

TCW260 has 4 digital inputs. All they are isolated from the power supply but use the same ground. Every digital input can work in OPEN/CLOSE or COUNTER mode. In COUNTER mode, counting can be made on rising, falling or both edges.

For the counter mode, there is a possibility for setting up of the counter initial value.

Digital inputs								
#	Description	Closed state	Open state	C/O delay	O/C delay	Mode	Value	Actions
1	D1	CLOSED	OPEN	5	5	Discrete(Open/Closed)	OPEN	Edit
2	D2	CLOSED	OPEN	5	5	Counter(Rising edge)	10158	Edit
3	D3	CLOSED	OPEN	5	5	Counter(Falling edge)	11	Edit
4	D4	CLOSED	OPEN	5	5	Counter(Both edges)	16	Edit

There are two delays – Open-to Close and Close-to-Open. The delays are in the range of 5 to 60000mS. These delays can be used for additional digital filtering. The delays are applied in both modes.

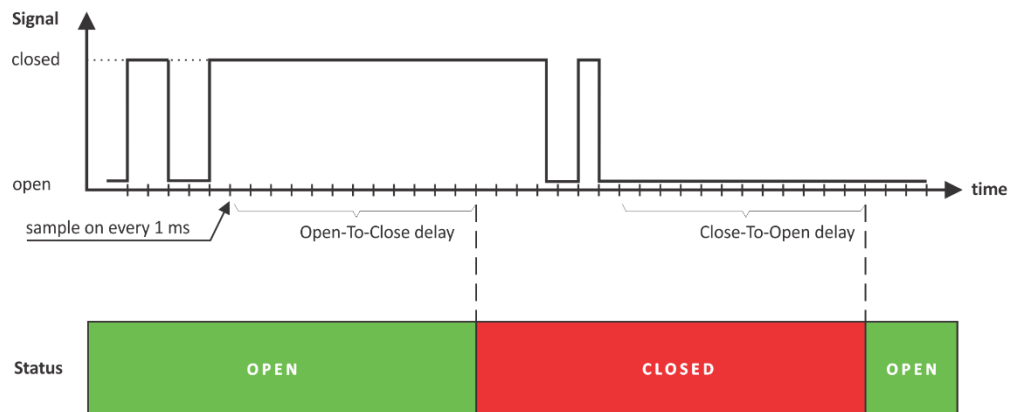

On the picture above Open-to Close and Close-to-Open delays are set to 13mS.

8.2.4. Channels

This section allows you to add, delete or edit channels. All they can be monitored on monitoring pages and their values can be recorded periodically by the data logger.

Up to 24 channels can be set up.

#	Description	Parameter 1	OP 1	Parameter 2	OP 2	Coefficient 1	OP3	Coefficient 2	Units	Cumulative	Actions
1	Temperature	S01-Temperature							°C		Edit Delete
2	Humidity	S02-Humidity							RH		Edit Delete
3	Digital Input 1	D1									Edit Delete
5	V05-Voltage	A01							V		Edit Delete
6	V06-Current	A02							A		Edit Delete
7	V07-Energy	A01	*	A02	*	1.000	+	0.000	kWh	✓	Edit Delete

[Create](#)

There are three types of channels – discrete (it forms by one digital input in OPEN/CLOSE mode), general (it forms by up to 2 primary parameters and constants) and cumulative (same as a general channel but with cumulating the value in time).

Cumulative channels are used for energy, volume, etc. monitoring. For them, there is a possibility for setting up of the initial value.

It is important to know that for general and cumulative channels, the sequence of operations is OP1, then OP2 and finally OP3.

It is possible to use a digital input in OPEN/CLOSE mode to form a general or cumulative channel. In this case, its values for operations are 0 (for CLOSE) and 1 (for OPEN). For example, this is useful if you want to stop the integration for the cumulative channel from an external signal.

8.2.5. Alarms

This section allows you to add, delete or edit alarms. Up to 24 alarms can be set up.

There is four types of alarms – Warning, Minor, Major and Critical.

Only channels can be used to form the alarms.

The alarms are independent but can be assigned to a channel. There isn't a restriction to which channel to assign the alarm.

For every alarm up to 2 conditions can be used. Both conditions can be logically joined using the logical operators AND and OR.

It is not mandatory to use the same channel in both conditions. In this case, conditions for two different channels can be combined in one alarm.

#	Description	Condition 1			Func	Condition 2			Type	Assigned to	Action			Actions	
		Channel	Sign	Limit / State		Channel	Sign	Limit / State			Action 1	Action 2	Action 3		
1	AL01-Temp.	Temperature	<	20.000	Or	Temperature	≥	24.000	Minor	Temperature	Trap C1 / 2	HTTP Post	None	Edit	Delete
2	AL02	V05-Voltage	≥	225.000					Major	V05-Voltage	HTTP Post	None	None	Edit	Delete
3	AL03	V06-Current	≥	10.000					Major	V06-Current	Trap C1	None	None	Edit	Delete
4	AL04-DI1	Digital Input 1	=	CLOSED					Critical	Digital Input 1	Trap C1 / 2	HTTP Post	None	Edit	Delete
5	AL05-Humidity	Humidity	<	30.000	Or	Humidity	≥	75.000	Warning	Humidity	Trap C1	Trap C2	HTTP Post	Edit	Delete
6	AL06	Digital Input 1	=	CLOSED					Warning		None	None	None	Edit	Delete

Create


The “Limit” indicates the border of the working range for the observed channel.

A trigger condition occurs when the value goes higher (“Sign” is “≥”) and lower (“Sign” is “<”) than the limit. In both cases, the monitored parameter goes out of range.

Coming back in range for the observed channel is considered when the value goes higher than Limit + Hysteresis (“Sign” is “<”) or lower than Limit – Hysteresis (“Sign” is “≥”).


The hysteresis is used to prevent excessively triggering when the value vacillates around the trigger point.

It is strongly recommended not to use Hysteresis=0.0.

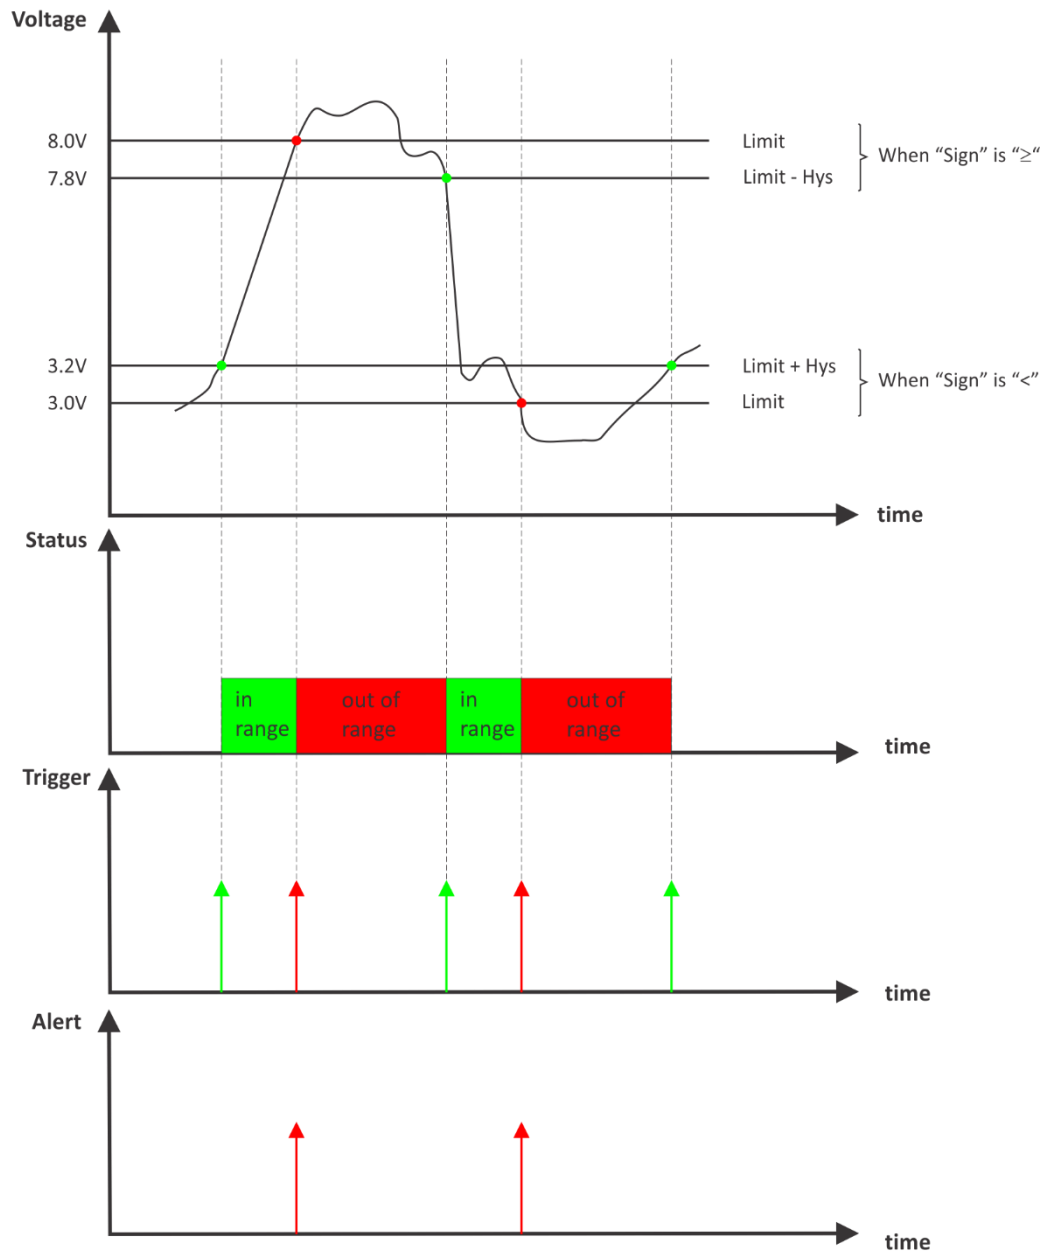


For every alarm “Return notification” option is available. If this option is chosen there will be notification also when parameter returns in range.

For every alarm, there is “Notification delay” parameter. It is very useful as a filter for short alarm conditions.

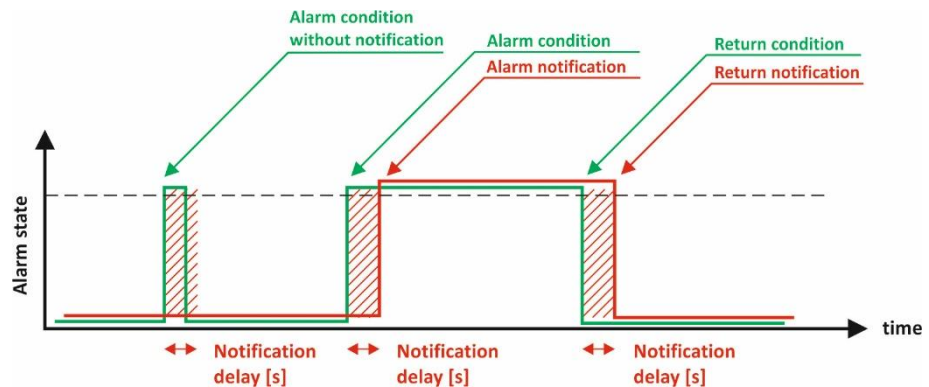

8.2.6. System

On this page, some general system parameters can be set up.

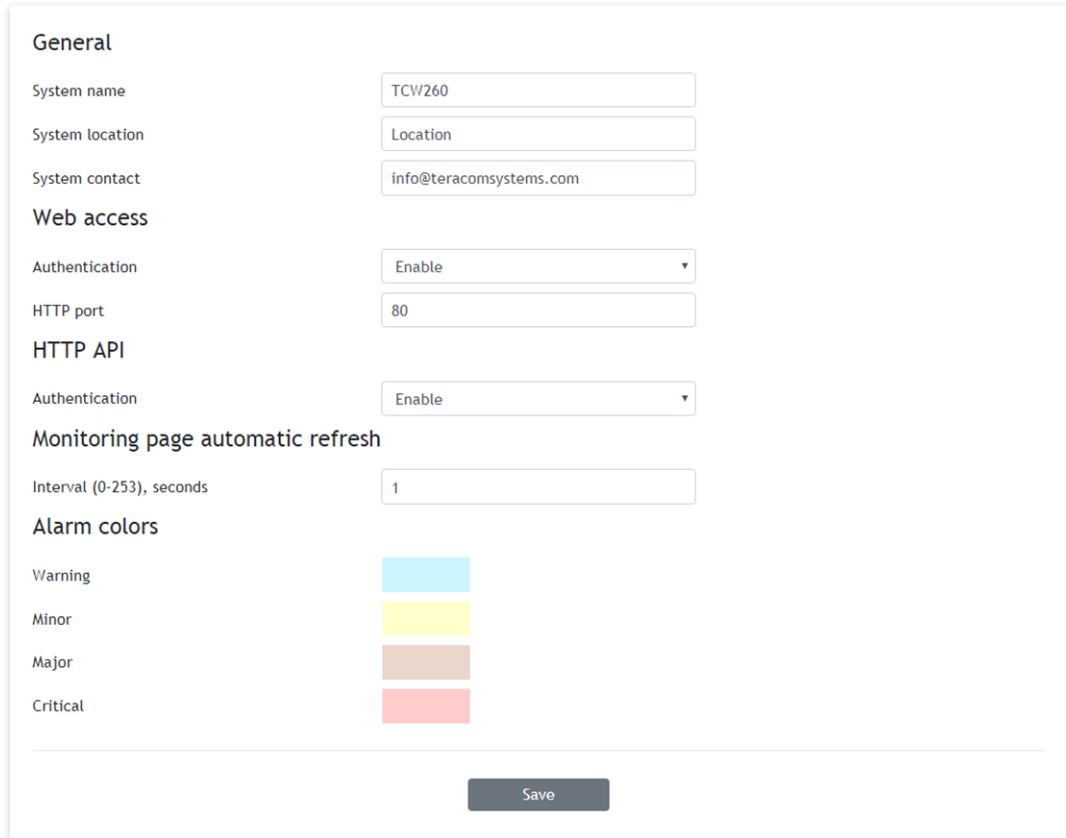

The screenshot displays a configuration interface for the TCW260 system. It is organized into several sections:

- General:** Includes text input fields for 'System name' (containing 'TCW260'), 'System location' (containing 'Location'), and 'System contact' (containing 'info@teracomsystems.com').
- Web access:** Features a dropdown menu for 'Authentication' set to 'Enable' and a text input for 'HTTP port' set to '80'.
- HTTP API:** Features a dropdown menu for 'Authentication' set to 'Enable'.
- Monitoring page automatic refresh:** Includes a text input for 'Interval (0-253), seconds' set to '1'.
- Alarm colors:** Shows four color swatches corresponding to 'Warning' (light blue), 'Minor' (yellow), 'Major' (brown), and 'Critical' (red).

A 'Save' button is located at the bottom center of the form.

System name, system location, and system contact are used for device identification. They are presented in SNMP three and XML/JSON status file.

WEB access authentication by default is active with admin/admin details.

HTTP port for WEB access by default is 80 but it can be changed. This is useful for some routers which don't support different outside/inside ports for port forwarding.

HTTP API access authentication by default it is active. Authentication details are same as WEB access. The controller support two types of authentication – see the explanation for HTTP API below.

The refresh interval can be set between 0 and 253 seconds. Zero means no automatic refresh.

Alarms colors are fixed and are presented here just for information.

8.3. Services

8.3.1. NTP

The internal real-time clock of the controller can be set either manually or automatically.

For automatic clock synchronization, the controller supports NTP (Network Time Protocol).

Time setup

Time configuration: Manual

NTP server IP/URL: time.google.com

Time zone: +00:00

Interval (h): 12

If not found (h): 1

Set time: 15.05.2019,13:54:13

Uptime

Uptime: 0days,00:03:31

Save

Current time: 15.05.2019,13:54:26

Last updated: ---

Status: Undefined

Stratum: 0

By default NTP synchronization is disabled, server – time.google.com, Time zone +00:00 and interval of 12 hours.

8.3.2. SNMP

TCW260 supports SNMP V2. With this M2M protocol, the device can be part of SNMP monitoring and control systems.

SNMP setup

SNMP: Enable

SNMP port: 161

Read community: public

Write community: private

SNMP traps

IP	Port	Community	Status	Action
192.168.32.30	162	public	Enable	Test
0.0.0.0	162	public	Disable	Test
0.0.0.0	162	public	Disable	Test
0.0.0.0	162	public	Disable	Test
0.0.0.0	162	public	Disable	Test

Save

[Download MIB File](#)

By default SNMP is disabled, the port is 161, read community is public and write community is private.

In an alarm condition, an SNMP trap can be sent up to 5 independent recipients. For every trap different port and community can be used.

SNMP trap is sent after reset.

Actual MIB file can be downloaded from here.

8.3.3. Logger

Logger setup

Logger: Enable

Logger mode: Time mode

Log interval (10-3600), seconds: 30

HTTP upload setup

HTTP upload: Disable

Server: [Greyed out]

Upload interval (h): 12h

Sync time: 00:00:00

Buttons: Upload test log, Force upload, Download full log, Save

The logger works in three modes – Time, Alarm and Time&Alarm. The mode specifies what initiates a record in the logger’s memory.

In Time mode, records are made periodically on “Log interval” time. In Alarm mode, records are made on every alarm condition. In Time&Alarm mode, a mix of both conditions for records is used.

The log interval is between 10 and 3600 seconds. It is good to remember that by reducing the log interval, we increase the resolution, but we also reduce the past period for which we have records.

There are two ways to reach the logger records:

- download of the full log file, using “Download full log” in the WEB interface;
- periodical upload the last unsent records to the dedicated HTTP server.

The records are uploaded in CSV file format. The period of the upload can be chosen from the menu between 1 and 24 hours. If you enable this service, take care of the real-time clock (NTP service).

The HTTP server for upload can be domain or IP address but take care about DNS settings.

“Sync time” is a moment in the day when a period of upload is synchronized.

Example:

Current time is 19:31, Upload period is 3 hours and Sync time is 9:00.

To synchronize the logger to 9:00 it means that time for uploads will be: 09:00, 12:00, 15:00, 18:00, 21:00, 24:00, 03:00 and 06:00. The first upload, after enabling the logger in 19:31, will be in 21:00.


The button “Force upload” initiates upload recorded information between previous periodical upload and now.

By default, the logger is disabled.

More about the logger can be found in the Data logger section.

8.3.4. HTTP Post

HTTP Post is used for periodically upload an XML/JSON file to HTTP server by HTTP requests (POST method). The XML/JSON file contains the current status of all monitored parameters and extra system information. The file format is chosen from the drop-down menu.

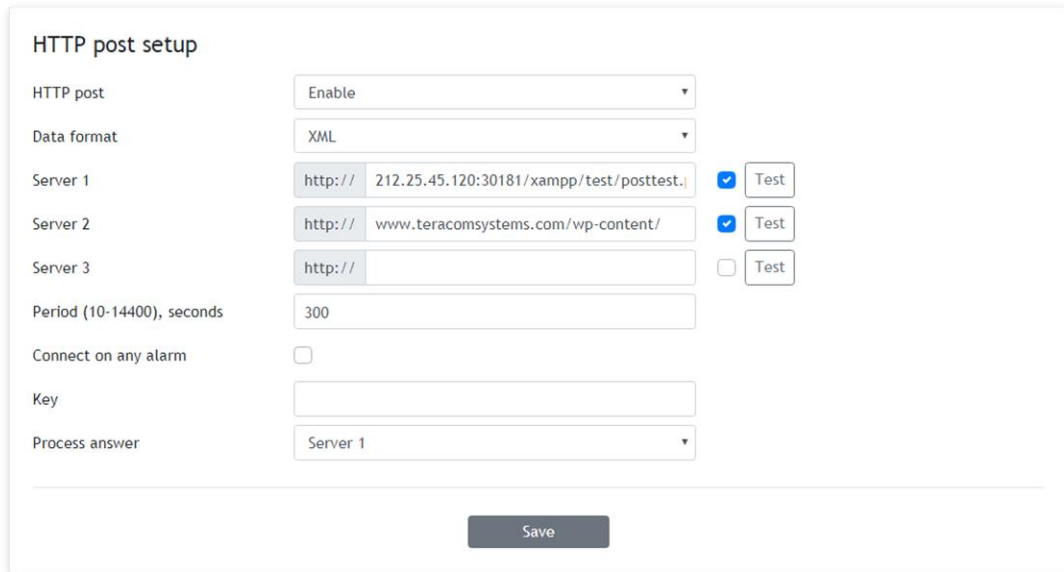

The screenshot shows the 'HTTP post setup' configuration window. It includes the following fields and options:

- HTTP post:** A dropdown menu set to 'Enable'.
- Data format:** A dropdown menu set to 'XML'.
- Server 1:** A text input field containing 'http:// 212.25.45.120:30181/xampp/test/posttest.', with a checked checkbox and a 'Test' button.
- Server 2:** A text input field containing 'http:// www.teracomsystems.com/wp-content/', with a checked checkbox and a 'Test' button.
- Server 3:** A text input field containing 'http://', with an unchecked checkbox and a 'Test' button.
- Period (10-14400), seconds:** A text input field containing '300'.
- Connect on any alarm:** An unchecked checkbox.
- Key:** An empty text input field.
- Process answer:** A dropdown menu set to 'Server 1'.

A 'Save' button is located at the bottom center of the window.

The HTTP Post can be sent up to 3 independent servers. The HTTP servers can be addressed either by domain name or IP address.

The "Period" can be set between 10 and 14400 seconds. This parameter can be changed remotely also by HTTP API. The "Period" determines at what time the control software receives up-to-date information from TCW260 and can, therefore, make changes to some of the parameters. The shorter is "Period", the closer to the real-time operation is the system. On the other hand, as shorter is the "Period" as higher is the data traffic through the network.

If the checkbox "Connect on any alarm" is selected, the HTTP Post request will be sent in an alarm condition.

The "Key" field is user defined. Its value is sent in XML/JSON file and can be used for device identification.

If "Process Answer" option is enabled, TCW260 will execute the commands, sent by the remote server as an answer of HTTP Post.

More about HTTP Post can be read in HTTP API section.

8.3.5. Dynamic DNS

TCW260 supports the following DNS services – DynDNS, No-IP, and DNS-O-Matic.

The screenshot shows the 'Dynamic DNS setup' configuration page. It includes the following fields and options:

- Dynamic DNS:** A dropdown menu set to 'Enable'.
- Service:** A dropdown menu set to 'DynDNS'.
- Hostname:** An empty text input field.
- User:** An empty text input field.
- Password:** An empty text input field.
- Maintainer e-mail:** An empty text input field. A note to the right states: 'The email is required of some providers for client's identification'.
- DDNS last status:** A text label with the message 'The current configuration is not valid.' below it.
- Save:** A dark grey button at the bottom center.

With dynamic DNS, TCW260 can be accessed from the Internet having only a dynamic public IP address.

8.3.6. MODBUS

TCW260 supports MODBUS TCP/IP.

The screenshot shows the 'Modbus TCP setup' configuration page. It includes the following fields and options:

- Modbus TCP:** A dropdown menu set to 'Enable'.
- Port:** A text input field containing the value '502'.
- Save:** A dark grey button at the bottom center.

The standard port for this protocol is 502.

By default, Modbus is disabled.

More about this functionality can be read at MODBUS section.

8.4. Administration

8.4.1. User/Pass

The TCW260 supports one user only. It has administrative rights.

The screenshot shows the 'Admin access' configuration page. It includes the following fields and options:

- Username:** A text input field containing the value 'admin'.
- Password:** An empty text input field.
- Confirm password:** An empty text input field.
- Save:** A dark grey button at the bottom center.

8.4.2. Backup/Restore

The TCW260 supports backup and restore of all user setting. All settings are saved in XML backup file. This file can be used after this to restore on many devices. This is very useful for multiplying similar settings to a batch of controllers.

8.4.3. FW update

The TCW260 can be updated via a WEB interface.

To update the device follow the steps below:

- Go to www.teracomsystems.com and download the latest firmware;
- From Administration->FW update select downloaded .cod file and press “UPLOAD” button;
- After the firmware update is completed, the Login page will appear.

Attention! Don’t turn off the power supply during the update. Turning off the power supply will damage the device.

8.5. Logout

The TCW260 support a few session, but the good practice is to log out after finishing the work.

9. Protocols and API

9.1. SNMP

Simple Network Management Protocol (SNMP) is a standard internet protocol for managing devices on IP networks. In typical usage of SNMP, one or more administrative computers, called managers, monitor and control devices on LAN. Each controlled device, at all times, executes a software component called an agent which reports information via SNMP to the manager.

The TCW260 can be configured and monitored through SNMP.

This could be done using every SNMP v.2 compatible program. Parameters that can be changed, are grouped according to their functions in the tables below. To obtain a valid OID number, replace symbol “!” with “1.3.6.1.4.1.38783”.

To save the changes **configurationSaved** (OID !.6.6.3.0) should be set to "1".

product

OID	Name	Access	Description	Syntax
!.6.1.1.0	name	read-only	Device name	DisplayString
!.6.1.2.0	version	read-only	Firmware version	DisplayString
!.6.1.3.0	date	read-only	Release date	DisplayString

setup -> network

replace “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
!6.2.1.1.0	deviceID	read-only	Device ID (default MAC address)	MacAddress
!6.2.1.2.0	hostName	read-only	Hostname	DisplayString (SIZE (0..38))
!6.2.1.3.0	deviceIP	read-only	Device IP address	IpAddress

setup -> parameters -> mbrtu -> sensor 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
!6.2.2.1.?1.0	s?description	read-write	Sensor ? description	DisplayString
!6.2.2.1.?2.0	s?Mult	read-write	Sensor ? multiplier x1000 in Integer format	Integer32
!6.2.2.1.?3.0	s?Offset	read-write	Sensor ? offset x1000 in Integer format	Integer32
!6.2.2.1.?4.0	s?Val	read-only	Sensor ? value x1000 in Integer format	Integer32

setup -> parameters -> mbrtu -> analogInputs -> analogInput 1 to 6

replace “?” with a number from 1 to 6 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
!6.2.2.2.?1.0	analog?description	read-write	Analog input ? description	DisplayString
!6.2.2.2.?2.0	analog?Mult	read-write	Analog input ? multiplier x1000 in Integer format	Integer32
!6.2.2.2.?3.0	analog?Offset	read-write	Analog input ? offset x1000 in Integer format	Integer32
!6.2.2.2.?4.0	analog?Mode	read-write	Analog input ? mode - 0-10V or 4-20mA	Integer32
!6.2.2.2.?5.0	analog?Value	read-only	Analog input ? value x1000 in Integer format	Integer32

setup -> parameters -> mbrtu -> digitalInputs -> digitalInput 1 to 4

replace “?” with a number from 1 to 4 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
!6.2.2.3.?1.0	digIn?description	read-write	Digital Input ? description	DisplayString
!6.2.2.3.?2.0	digIn?lowLevel	read-write	Digital Input ? closed state	DisplayString
!6.2.2.3.?3.0	digIn?highLevel	read-write	Digital Input ? open state	DisplayString
!6.2.2.3.?4.0	digIn?Mode	read-write	Digital Input ? mode - Discrete or Counter	INTEGER { openClosed(0), risingEdge(1), fallingEdge(2), bothEdges(3) }
!6.2.2.3.?5.0	digIn?CloseToOpenDelay	read-write	Close To Open delay	Integer32(0..60000)
!6.2.2.3.?6.0	digIn?OpenToCloseDelay	read-write	Open To Close delay	Integer32(0..60000)
!6.2.2.3.?7.0	digIn?Value	read-only	Digital input ? value	Integer32

monitorNcontrol -> channels -> channel 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.1.?.1.0	ch?type	read-write	Channel ? type	INTEGER {general(0), cumulative(1), discrete(2)}
1.6.3.1.?.2.0	ch?description	read-write	Channel ? description	DisplayString
1.6.3.1.?.3.0	ch?Param1	read-write	Channel ? parameter 1	INTEGER {none(0), s01(3), s02(4), s03(5), s04(6), s05(7), s06(8), s07(9), s08(10), s09(11), s10(12), s11(13), s12(14), s13(15), s14(16), s15(17), s16(18), s17(19), s18(20), s19(21), s20(22), s21(23), s22(24), s23(25), s24(26), a01(27), a02(28), a03(29), a04(30), a05(31), a06(32), d01(33), d02(34), d03(35), d04(36)}
1.6.3.1.?.4.0	ch?OP1	read-write	Channel ? operand 1	INTEGER {multiplication(0), division(1), sum(2), subtract(3)}
1.6.3.1.?.5.0	ch?Param2	read-write	Channel ? parameter 2	INTEGER {none(0), one(1), null(2), s01(3), s02(4), s03(5), s04(6), s05(7), s06(8), s07(9), s08(10), s09(11), s10(12), s11(13), s12(14), s13(15), s14(16), s15(17), s16(18), s17(19), s18(20), s19(21), s20(22), s21(23), s22(24), s23(25), s24(26), a01(27), a02(28), a03(29), a04(30), a05(31), a06(32), d01(33), d02(34), d03(35), d04(36)}
1.6.3.1.?.6.0	ch?OP2	read-write	Channel ? operand 2	INTEGER {multiplication(0), division(1), sum(2), subtract(3)}
1.6.3.1.?.7.0	ch?Coef1	read-write	Channel ? coefficient 1 x1000 in Integer format	Integer32
1.6.3.1.?.8.0	ch?OP3	read-write	Channel ? operand 3	INTEGER {none(0), one(1), null(2), s01(3), s02(4), s03(5), s04(6), s05(7), s06(8), s07(9), s08(10), s09(11), s10(12), s11(13), s12(14), s13(15), s14(16), s15(17), s16(18), s17(19), s18(20), s19(21), s20(22), s21(23), s22(24), s23(25), s24(26), a01(27), a02(28), a03(29), a04(30), a05(31), a06(32), d01(33), d02(34), d03(35), d04(36)}
1.6.3.1.?.9.0	ch?Coef2	read-write	Channel ? coefficient 2 x1000 in Integer format	Integer32
1.6.3.1.?.10.0	ch?Unit	read-write	Channel ? unit	DisplayString
1.6.3.1.?.11.0	ch?CumulInitValue	read-write	Channel ? cumulative initial value	Integer32
1.6.3.1.?.12.0	ch?Value	read-only	Channel ? value x1000 in Integer format	Integer32
1.6.3.1.?.13.0	ch?AlarmStatus	read-only	Channel ? alarm status	INTEGER {undefined(0), normal(1), indeterminate(2), warning(3), minor(4), major(5), critical(6)}

monitorNcontrol -> alarms -> alarm 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.2.?1.0	al?description	read-write	Alarm ? description	DisplayString

monitorNcontrol -> alarms -> Condition1 for Alarm 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.2.?2.1.0	al?Cond1Channel	read-write	Alarm ? condition 1 channel	INTEGER {none(0), v01(1), v02(2), v03(3), v04(4), v05(5), v06(6), v07(7), v08(8), v09(9), v10(10), v11(11), v12(12), v13(13), v14(14), v15(15), v16(16), v17(17), v18(18), v19(19), v20(20), v21(21), v22(22), v23(23), v24(24)}
1.6.3.2.?2.2.0	al?Cond1Operand	read-write	Alarm ? condition 1 operand	INTEGER{larger(1), less(2)}
1.6.3.2.?2.3.0	al?Cond1Limit	read-write	Alarm ? condition 1 limit x1000 in Integer format	Integer32
1.6.3.2.?2.4.0	al?Cond1Hys	read-write	Alarm ? condition 1 hysteresis x1000 in Integer format	Integer32
1.6.3.2.?2.5.0	al?Cond1AlarmState	read-write	Alarm ? condition 1 discrete alarm state	INTEGER {open(0), closed(1)}

monitorNcontrol -> alarms -> alarm 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.2.?3.0	al?CondLogic	read-write	Alarm ? conditions logic	INTEGER{none(0), and(1), or(2)}

monitorNcontrol -> alarms -> Condition2 for Alarm 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.2.?4.1.0	al?Cond2Channel	read-write	Alarm ? condition 2 channel	INTEGER {none(0), v01(1), v02(2), v03(3), v04(4), v05(5), v06(6), v07(7), v08(8), v09(9), v10(10), v11(11), v12(12), v13(13), v14(14), v15(15), v16(16), v17(17), v18(18), v19(19), v20(20), v21(21), v22(22), v23(23), v24(24)}
1.6.3.2.?4.2.0	al?Cond2Operand	read-write	Alarm ? condition 2 operand	INTEGER{larger(1), less(2)}
1.6.3.2.?4.3.0	al?Cond2Limit	read-write	Alarm ? condition 2 limit x1000 in Integer format	Integer32
1.6.3.2.?4.4.0	al?Cond2Hys	read-write	Alarm ? condition 2 hysteresis x1000 in Integer format	Integer32
1.6.3.2.?4.5.0	al?Cond2AlarmState	read-write	Alarm ? condition 2 discrete alarm state	INTEGER {open(0), closed(1)}

monitorNcontrol -> alarms -> alarm 1 to 24

replace “?” with a number from 1 to 24 and “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.2.?5.0	al?Type	read-write	Alarm ? type	INTEGER {warning(3), minor(4), major(5), critical(6)}
1.6.3.2.?6.0	al?Assigned	read-write	Alarm ? assigned to	INTEGER {none(0), v01(1), v02(2), v03(3), v04(4), v05(5), v06(6), v07(7), v08(8),v09(9), v10(10), v11(11), v12(12), v13(13), v14(14), v15(15), v16(16),v17(17), v18(18), v19(19), v20(20), v21(21), v22(22), v23(23), v24(24)}
1.6.3.2.?7.0	al?ActionDelay	read-write	Alarm ? action delay	Integer32
1.6.3.2.?8.0	al?ActionOnReturn	read-write	Alarm ? action on return	INTEGER {no(0), yes(1)}
1.6.3.2.?9.0	al?Action1	read-write	Alarm ? action 1	INTEGER {none(0), trapcond1(1), trapcond2(2), trapcond1and2(3), postiostate(4)}
1.6.3.2.?10.0	al?Action2	read-write	Alarm ? action 2	INTEGER {none(0), trapcond1(1), trapcond2(2), trapcond1and2(3), postiostate(4)}
1.6.3.2.?11.0	al?Action3	read-write	Alarm ? action 3	INTEGER {none(0), trapcond1(1), trapcond2(2), trapcond1and2(3), postiostate(4)}
1.6.3.2.?12.0	al?Status	read-write	Alarm ? status	INTEGER {undefined(0), normal(1), indeterminate(2), warning(3), minor(4), major(5), critical(6)}

monitorNcontrol

replace “!” with “1.3.6.1.4.1.38783” in the table below

OID	Name	Access	Description	Syntax
1.6.3.3.0	configurationSaved	read-write	Configuration save status SAVED/UNSAVED	INTEGER { unsaved(0), saved(1) }
1.6.3.4.0	restartDevice	read-write	Restart Device	INTEGER { cancel(0), restart(1) }
1.6.3.5.0	hardwareErr	read-only	Hardware Error	INTEGER { noErr(0), hwErr(1) }


9.2. HTTP API

9.2.1. HTTP Post

TCW260 can execute HTTP Post to upload XML/JSON file to a dedicated server.

This functionality is very useful if the controller is behind the router without a public IP address or the user don't have access to router configuration. The server should have a public IP address.

The typical monitoring application is shown in the picture below:

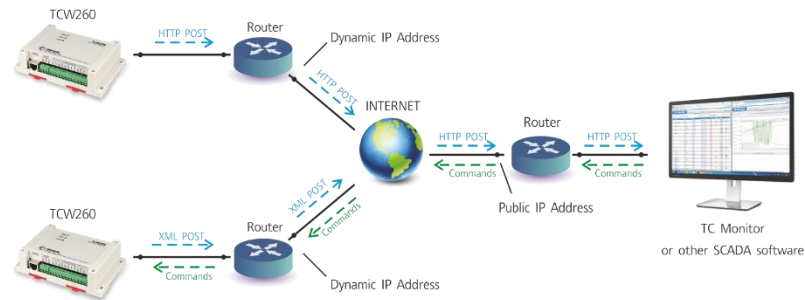

HTTP post can be sent periodically or periodically plus on an alarm condition. As an answer, the server can send HTTP Get with the appropriate command.

To test HTTP Post follow the steps below:

- Save following code like post.php:

```
<?php
define("FILENAME", 'status.xml');
define("FOLDER", "");
define("SEPARATOR", "");
define("STR_SUCCESS", 'set FIN');
define("STR_ERROR", 'error');

if($_SERVER['REQUEST_METHOD'] == 'POST'){
    $datePrefix = date('YmdHis', strtotime('now'));
    $pathname = FOLDER.SEPARATOR.$datePrefix.'.'.FILENAME;
    $postdata = file_get_contents("php://input");
    $handle = fopen($pathname, 'w+');
    $content = var_export($postdata, true);
    fwrite($handle, substr($content, 1, strlen($content)-2));
    fclose($handle);
    echo (($handle === false) ? STR_ERROR : STR_SUCCESS)."\r\n";
}
else {
    echo "The PHP script is working!";
}
?>
```

- Copy the post.php file on a public web server with PHP support. To verify that the script is working properly, you can type the URL (for example www.yourserverURL.com/post.php) in your web browser. If all is OK, a web page with “The PHP script is working!” will be shown.
- Set the controller to send an HTTP POST to your web server. Enter the address (yourserverURL.com/post.php) in the URL field. Click on “Test HTTP Post” button.
- If the HTTP POST is received and processed, “OK” will be shown close to the button. Along with this, an XML file will be created in the same directory, where post.php is located. The file name will contain time information and looks like 20190420103318_status.xml.

9.2.2. HTTP Get

HTTP Get can be used to monitor TCW260 via XML or JSON files. The format is as follows:

`http://device.ip.address/status.xml`

`http://device.ip.address/status.json`

See sections **8.2.4 XML file structure** and **8.2.5 JSON file structure** for details of files.

HTTP Get can be sent at any time to TCW260 if it is on the same network or it has appropriate routing.

If there isn't direct access to the device, HTTP Get can be sent immediately after HTTP Post receiving from the same device.

9.2.2.1. Commands

All command used with HTTP Post can be used also with HTTP Get. The right format is:

`http://device.ip.address/status.xml?yyy=xxx`

Where:

yyy is the command;

xxx is the parameter.

Example:

`http://device.ip.address/status.xml?pper=300`, will set Post period = 300 sec.

9.2.2.2. HTTP GET authentication

If HTTP API authentication is enabled, basic access authentication is required to access the status.xml file. The format of the command is shown in the table below:

XML/HTTP API authentication	Format
enabled	<code>http://device.ip.address/status.xml?a=uuuu:pppp</code>
disabled	<code>http://device.ip.address/status.xml</code>

Example:

`http://device.ip.address/status.xml?a=admin:admin&pper=120` will set post period on 120 sec in case the username=admin and pass=admin

9.2.3. List of HTTP API commands

Command	Description
<code>pmet=x</code>	Enable/disable HTTP Post - 0 disable, 2 enable
<code>dataf=x</code>	Data format XML/JSON for HTTP Post – 0 XML, 1 JSON
<code>purl1=yyy</code>	URL for HTTP Post to Server 1, where yyy is a full path to php file. Example: <code>purl=212.25.45.120:30181/xampp/test/posttest1.php</code>
<code>purl2=yyy</code>	URL for HTTP Post to Server 1, where yyy is a full path to php file. Example: <code>purl=212.25.45.120:30181/xampp/test/posttest2.php</code>
<code>purl3=yyy</code>	URL for HTTP Post to Server 1, where yyy is a full path to php file. Example: <code>purl=212.25.45.120:30181/xampp/test/posttest3.php</code>
<code>pper=x</code>	HTTP Post period in seconds (x is between 10 and 14400)
<code>dk=xxx</code>	HTTP Post key – xxx is up to 17 characters
<code>pans=x</code>	HTTP Post process answer, where x=0 - No, x=1 – Server1, x=2 – Server2, x=3 – Server 3
FIN	Terminate session (it makes sense only for HTTP Post)

9.2.4. XML file structure

```
<Monitor>
  <DeviceInfo>
    <DeviceName>TCW260</DeviceName>
    <HostName>TCW260 </HostName>
    <ID>54:10:ec:4f:59:f6</ID>
    <FwVer>TCW260-v1.004rc8-197</FwVer>
    <MnflInfo>www.teracomsystems.com</MnflInfo>
    <SysContact>info@teracomsystems.com</SysContact>
    <SysName>TCW260</SysName>
    <SysLocation>Location</SysLocation>
  </DeviceInfo>
  <CH>
    <CH1>
      <type>0</type>
      <description>Temperature</description>
      <value>24.386</value>
      <unit>°C</unit>
      <alarmbin>4</alarmbin>
      <alarm>Minor</alarm>
      <selch>3</selch>
    </CH1>
    <CH2>
      <type>0</type>
      <description>Humidity</description>
      <value>51.323</value>
      <unit>RH</unit>
      <alarmbin>1</alarmbin>
      <alarm>Normal</alarm>
      <selch>4</selch>
    </CH2>
    <CH3>
      <type>2</type>
      <description>Digital Input 1</description>
      <value>OPEN</value>
      <unit/>
      <alarmbin>1</alarmbin>
      <alarm>Normal</alarm>
      <selch>33</selch>
    </CH3>
    <CH4>
      <type>0</type>
      <description>V04</description>
      <value>----</value>
      <unit/>
      <alarmbin>0</alarmbin>
      <alarm/>
      <selch>0</selch>
    </CH4>
    <CH5>
      <type>0</type>
      <description>V05-Voltage</description>
      <value>0.000</value>
      <unit>V</unit>
      <alarmbin>1</alarmbin>
      <alarm>Normal</alarm>
      <selch>27</selch>
    </CH5>
    <CH6>
      <type>0</type>
      <description>V06-Current</description>
      <value>0.000</value>
      <unit>A</unit>
      <alarmbin>1</alarmbin>
      <alarm>Normal</alarm>
      <selch>28</selch>
    </CH6>
    <CH7>
      <type>1</type>
      <description>V07-Energy</description>
      <value>6587.396</value>
      <unit>kWh</unit>
      <alarmbin>0</alarmbin>
      <alarm/>
      <selch>27</selch>
  </CH>
</Monitor>
```

```

</CH7>
<CH8>
  <type>0</type>
  <description>V08</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH8>
<CH9>
  <type>0</type>
  <description>V09</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH9>
<CH10>
  <type>0</type>
  <description>V10</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH10>
<CH11>
  <type>0</type>
  <description>V11</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH11>
<CH12>
  <type>0</type>
  <description>V12</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH12>
<CH13>
  <type>0</type>
  <description>V13</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH13>
<CH14>
  <type>0</type>
  <description>V14</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH14>
<CH15>
  <type>0</type>
  <description>V15</description>
  <value>---</value>
  <unit/>
  <alarmbin>0</alarmbin>
  <alarm/>
  <selch>0</selch>
</CH15>
<CH16>
  <type>0</type>
  <description>V16</description>
  <value>---</value>

```

```

<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH16>
<CH17>
<type>0</type>
<description>V17</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH17>
<CH18>
<type>0</type>
<description>V18</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH18>
<CH19>
<type>0</type>
<description>V19</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH19>
<CH20>
<type>0</type>
<description>V20</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH20>
<CH21>
<type>0</type>
<description>V21</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH21>
<CH22>
<type>0</type>
<description>V22</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH22>
<CH23>
<type>0</type>
<description>V23</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH23>
<CH24>
<type>0</type>
<description>V24</description>
<value>---</value>
<unit/>
<alarmbin>0</alarmbin>
<alarm/>
<selch>0</selch>
</CH24>

```

```

</CH>
<AL>
  <AL1>
    <description>AL01-Temp.</description>
    <alarmbin>4</alarmbin>
    <alarm>Minor</alarm>
    <assign>1</assign>
  </AL1>
  <AL2>
    <description>AL02</description>
    <alarmbin>1</alarmbin>
    <alarm>Normal</alarm>
    <assign>5</assign>
  </AL2>
  <AL3>
    <description>AL03</description>
    <alarmbin>1</alarmbin>
    <alarm>Normal</alarm>
    <assign>6</assign>
  </AL3>
  <AL4>
    <description>AL04-DI1</description>
    <alarmbin>1</alarmbin>
    <alarm>Normal</alarm>
    <assign>3</assign>
  </AL4>
  <AL5>
    <description>AL05-Humidity</description>
    <alarmbin>1</alarmbin>
    <alarm>Normal</alarm>
    <assign>2</assign>
  </AL5>
  <AL6>
    <description>AL06</description>
    <alarmbin>1</alarmbin>
    <alarm>Normal</alarm>
    <assign>3</assign>
  </AL6>
  <AL7>
    <description>AL07</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL7>
  <AL8>
    <description>AL08</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL8>
  <AL9>
    <description>AL09</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL9>
  <AL10>
    <description>AL10</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL10>
  <AL11>
    <description>AL11</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL11>
  <AL12>
    <description>AL12</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL12>
  <AL13>
    <description>AL13</description>
    <alarmbin>0</alarmbin>

```



```

    <alarm/>
    <assign>0</assign>
  </AL13>
  <AL14>
    <description>AL14</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL14>
  <AL15>
    <description>AL15</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL15>
  <AL16>
    <description>AL16</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL16>
  <AL17>
    <description>AL17</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL17>
  <AL18>
    <description>AL18</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL18>
  <AL19>
    <description>AL19</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL19>
  <AL20>
    <description>AL20</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL20>
  <AL21>
    <description>AL21</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL21>
  <AL22>
    <description>AL22</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL22>
  <AL23>
    <description>AL23</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL23>
  <AL24>
    <description>AL24</description>
    <alarmbin>0</alarmbin>
    <alarm/>
    <assign>0</assign>
  </AL24>
</AL>
<HTTPPost>
  <Key/>
  <PostPeriod>300</PostPeriod>
</HTTPPost>
<Sys>
  <hwerr/>
  <HighAlarmbin>4</HighAlarmbin>

```

```

    <HighAlarm>Minor</HighAlarm>
  </Sys>
</Time>
  <Date>15.05.2019</Date>
  <Time>10:32:44</Time>
</Time>
</Monitor>

```

Where:

<CH1>... <CH24> - channels;
 <AL1> ... <AL24> - alarms;
 <alarmbin> - number values from 0 to 6;
 <alarm> - Undefined, Normal, Indeterminate, Warning, Minor, Major, Critical;
 <assign>0</assign> - alarm not assigned to any channel;
 <selch>0</selch> - channel is not displayed on Monitoring -> Channels section

9.2.5. JSON file structure

```

{
  "Monitor": {
    "DeviceInfo": {
      "DeviceName": "TCW260",
      "HostName": "TCW260",
      "ID": "54:10:ec:4f:59:f6",
      "FwVer": "TCW260-v1.004rc8-197",
      "MnflInfo": "www.teracomsystems.com",
      "SysContact": "info@teracomsystems.com",
      "SysName": "TCW260",
      "SysLocation": "Location"
    },
    "CH": {
      "CH1": {
        "type": "0",
        "description": "Temperature",
        "value": "24.268",
        "unit": "°C",
        "alarmbin": "4",
        "alarm": "Minor",
        "selch": "3"
      },
      "CH2": {
        "type": "0",
        "description": "Humidity",
        "value": "52.490",
        "unit": "RH",
        "alarmbin": "1",
        "alarm": "Normal",
        "selch": "4"
      },
      "CH3": {
        "type": "2",
        "description": "Digital Input 1",
        "value": "OPEN",
        "unit": "",
        "alarmbin": "1",
        "alarm": "Normal",
        "selch": "33"
      },
      "CH4": {
        "type": "0",
        "description": "V04",
        "value": "---",
        "unit": "",
        "alarmbin": "0",
        "alarm": "",
        "selch": "0"
      },
      "CH5": {
        "type": "0",
        "description": "V05-Voltage",
        "value": "0.000",
        "unit": "V",
        "alarmbin": "1",

```

```

    "alarm": "Normal",
    "selch": "27"
  },
  "CH6": {
    "type": "0",
    "description": "V06-Current",
    "value": "0.000",
    "unit": "A",
    "alarmbin": "1",
    "alarm": "Normal",
    "selch": "28"
  },
  "CH7": {
    "type": "1",
    "description": "V07-Energy",
    "value": "6587.396",
    "unit": "kWh",
    "alarmbin": "0",
    "alarm": "",
    "selch": "27"
  },
  "CH8": {
    "type": "0",
    "description": "V08",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH9": {
    "type": "0",
    "description": "V09",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH10": {
    "type": "0",
    "description": "V10",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH11": {
    "type": "0",
    "description": "V11",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH12": {
    "type": "0",
    "description": "V12",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH13": {
    "type": "0",
    "description": "V13",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH14": {
    "type": "0",

```

```

    "description": "V14",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH15": {
    "type": "0",
    "description": "V15",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH16": {
    "type": "0",
    "description": "V16",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH17": {
    "type": "0",
    "description": "V17",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH18": {
    "type": "0",
    "description": "V18",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH19": {
    "type": "0",
    "description": "V19",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH20": {
    "type": "0",
    "description": "V20",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH21": {
    "type": "0",
    "description": "V21",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH22": {
    "type": "0",
    "description": "V22",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",

```

```

    "selch":"0"
  },
  "CH23": {
    "type": "0",
    "description": "V23",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  },
  "CH24": {
    "type": "0",
    "description": "V24",
    "value": "---",
    "unit": "",
    "alarmbin": "0",
    "alarm": "",
    "selch": "0"
  }
},
"AL": {
  "AL1": {
    "description": "AL01-Temp.",
    "alarmbin": "aa(0)",
    "alarm": "Minor",
    "assign": "1"
  },
  "AL2": {
    "description": "AL02",
    "alarmbin": "aa(1)",
    "alarm": "Normal",
    "assign": "5"
  },
  "AL3": {
    "description": "AL03",
    "alarmbin": "aa(2)",
    "alarm": "Normal",
    "assign": "6"
  },
  "AL4": {
    "description": "AL04-DI1",
    "alarmbin": "aa(3)",
    "alarm": "Normal",
    "assign": "3"
  },
  "AL5": {
    "description": "AL05-Humidity",
    "alarmbin": "aa(4)",
    "alarm": "Normal",
    "assign": "2"
  },
  "AL6": {
    "description": "AL06",
    "alarmbin": "aa(5)",
    "alarm": "Normal",
    "assign": "3"
  },
  "AL7": {
    "description": "AL07",
    "alarmbin": "aa(6)",
    "alarm": "",
    "assign": "0"
  },
  "AL8": {
    "description": "AL08",
    "alarmbin": "aa(7)",
    "alarm": "",
    "assign": "0"
  },
  "AL9": {
    "description": "AL09",
    "alarmbin": "aa(8)",
    "alarm": "",
    "assign": "0"
  },
  "AL10": {

```

```
"description": "AL10",
"alarmbin": "aa(9)",
"alarm": "",
"assign": "0"
},
"AL11": {
  "description": "AL11",
  "alarmbin": "aa(10)",
  "alarm": "",
  "assign": "0"
},
"AL12": {
  "description": "AL12",
  "alarmbin": "aa(11)",
  "alarm": "",
  "assign": "0"
},
"AL13": {
  "description": "AL13",
  "alarmbin": "aa(12)",
  "alarm": "",
  "assign": "0"
},
"AL14": {
  "description": "AL14",
  "alarmbin": "aa(13)",
  "alarm": "",
  "assign": "0"
},
"AL15": {
  "description": "AL15",
  "alarmbin": "aa(14)",
  "alarm": "",
  "assign": "0"
},
"AL16": {
  "description": "AL16",
  "alarmbin": "aa(15)",
  "alarm": "",
  "assign": "0"
},
"AL17": {
  "description": "AL17",
  "alarmbin": "aa(16)",
  "alarm": "",
  "assign": "0"
},
"AL18": {
  "description": "AL18",
  "alarmbin": "aa(17)",
  "alarm": "",
  "assign": "0"
},
"AL19": {
  "description": "AL19",
  "alarmbin": "aa(18)",
  "alarm": "",
  "assign": "0"
},
"AL20": {
  "description": "AL20",
  "alarmbin": "aa(19)",
  "alarm": "",
  "assign": "0"
},
"AL21": {
  "description": "AL21",
  "alarmbin": "aa(20)",
  "alarm": "",
  "assign": "0"
},
"AL22": {
  "description": "AL22",
  "alarmbin": "aa(21)",
  "alarm": "",
  "assign": "0"
},
}
```

```

    "AL23": {
      "description": "AL23",
      "alarmbin": "aa(22)",
      "alarm": "",
      "assign": "0"
    },
    "AL24": {
      "description": "AL24",
      "alarmbin": "aa(23)",
      "alarm": "",
      "assign": "0"
    }
  },
  "HTTPPost": {
    "Key": "",
    "PostPeriod": "300"
  },
  "Sys": {
    "hwerr": "",
    "HighAlarmbin": "4",
    "HighAlarm": "Minor"
  },
  "Time": {
    "Date": "15.05.2019",
    "Time": "10:30:00"
  }
}
}
}

```

9.3. MODBUS TCP/IP

Modbus protocol is a serial communications protocol originally published by Modicon in 1979. It is used to establish master-slave/client-server communication between intelligent devices. Modbus is often used to connect a supervisory computer with a remote terminal unit (RTU) in supervisory control and data acquisition (SCADA) systems.

9.3.1. Codes and answers

9.3.1.1. Read Holding Registers (FC=03)

Request

This command is requesting the content of holding registers 400 – Channel 1 value..

03 0190 0002

03: The Function Code 3 (read Holding Registers)

0064: The Data Address of the first register requested (0190 hex = 400)

0002: The total number of registers requested. (read 2 registers each 2 bytes = 4 bytes)

Response

03 04 41 C3 B0 21

03: The Function Code 3 (read Channel 1 Holding Registers)

04: The number of data bytes to follow (2 registers x 2 bytes each = 4 bytes)

41C3 B021: 4 bytes value

All holding registers with float value are sent in big-endian.

In the example above, the value of 24.4610004 is sent.

Request

This command is requesting the content of holding registers 5000 – Channel 1 description.

03 1388 0008

03: The Function Code 3 (read Holding Registers)

1388: The Data Address of the first register requested (1388 hex = 5000)

0008: The total number of registers requested (read 8 registers each 2 bytes = 16 bytes)

Response

03 10 54 65 6D 70 65 72 61 74 75 72 65 00 00 00 00 00

03: The Function Code 3 (read Analog Output Holding Registers)

10: The number of data bytes to follow (8 registers x 2 bytes each = 16 bytes)

54 65 6D 70 65 72 61 74 75 72 65 00 00 00 00 00: 16 bytes value

All holding registers with strings are sent in big-endian.

The answer is padded with 0.

In the example above, the string “Temperature” is sent.

9.3.1.2. Exception codes

All exceptions are signaled by adding 0x80 to the function code of the request, and following this byte by a single reason byte for example as follows:

01 Illegal function

The function code received in the query is not an allowable action for the controller.

02 Illegal data address

The data address received in the query is not an allowable address for the slave. More specifically, the combination of the reference number and the transfer length is invalid. For a controller with 100 registers, a request with offset 96 and length 4 would succeed, a request with offset 96 and length 5 will generate exception 02.

9.3.2. Address table

Parameter	FC	Address (Decimal)	Data size
Read Channel 1	03	400	32-bit Float
Read Channel 2	03	402	32-bit Float
Read Channel 3	03	404	32-bit Float
Read Channel 4	03	406	32-bit Float
Read Channel 5	03	408	32-bit Float
Read Channel 6	03	410	32-bit Float
Read Channel 8	03	412	32-bit Float
Read Channel 9	03	414	32-bit Float
Read Channel 10	03	416	32-bit Float
Read Channel 11	03	418	32-bit Float
Read Channel 12	03	420	32-bit Float
Read Channel 13	03	422	32-bit Float
Read Channel 14	03	424	32-bit Float
Read Channel 15	03	426	32-bit Float
Read Channel 16	03	428	32-bit Float

Read Channel 17	03	430	32-bit Float
Read Channel 18	03	432	32-bit Float
Read Channel 19	03	434	32-bit Float
Read Channel 20	03	436	32-bit Float
Read Channel 21	03	438	32-bit Float
Read Channel 22	03	440	32-bit Float
Read Channel 23	03	442	32-bit Float
Read Channel 24	03	444	32-bit Float
Read Channel 1 Dimension	03	1000	16 bytes UTF-8
Read Channel 2 Dimension	03	1008	16 bytes UTF-8
Read Channel 3 Dimension	03	1016	16 bytes UTF-8
Read Channel 4 Dimension	03	1024	16 bytes UTF-8
Read Channel 5 Dimension	03	1032	16 bytes UTF-8
Read Channel 6 Dimension	03	1040	16 bytes UTF-8
Read Channel 7 Dimension	03	1048	16 bytes UTF-8
Read Channel 8 Dimension	03	1056	16 bytes UTF-8
Read Channel 9 Dimension	03	1064	16 bytes UTF-8
Read Channel 10 Dimension	03	1072	16 bytes UTF-8
Read Channel 11 Dimension	03	1080	16 bytes UTF-8
Read Channel 12 Dimension	03	1088	16 bytes UTF-8
Read Channel 13 Dimension	03	1096	16 bytes UTF-8
Read Channel 14 Dimension	03	1104	16 bytes UTF-8
Read Channel 15 Dimension	03	1112	16 bytes UTF-8
Read Channel 16 Dimension	03	1120	16 bytes UTF-8
Read Channel 17 Dimension	03	1128	16 bytes UTF-8
Read Channel 18 Dimension	03	1136	16 bytes UTF-8
Read Channel 19 Dimension	03	1144	16 bytes UTF-8
Read Channel 20 Dimension	03	1152	16 bytes UTF-8
Read Channel 21 Dimension	03	1160	16 bytes UTF-8
Read Channel 22 Dimension	03	1168	16 bytes UTF-8
Read Channel 23 Dimension	03	1176	16 bytes UTF-8
Read Channel 24 Dimension	03	1184	16 bytes UTF-8
Read Channel 1 Description	03	5000	16 bytes UTF-8
Read Channel 2 Description	03	5008	16 bytes UTF-8
Read Channel 3 Description	03	5016	16 bytes UTF-8
Read Channel 4 Description	03	5024	16 bytes UTF-8
Read Channel 5 Description	03	5032	16 bytes UTF-8
Read Channel 6 Description	03	5040	16 bytes UTF-8
Read Channel 7 Description	03	5048	16 bytes UTF-8
Read Channel 8 Description	03	5056	16 bytes UTF-8
Read Channel 9 Description	03	5064	16 bytes UTF-8
Read Channel 10 Description	03	5072	16 bytes UTF-8
Read Channel 11 Description	03	5080	16 bytes UTF-8
Read Channel 12 Description	03	5088	16 bytes UTF-8
Read Channel 13 Description	03	5096	16 bytes UTF-8
Read Channel 14 Description	03	5104	16 bytes UTF-8
Read Channel 15 Description	03	5112	16 bytes UTF-8
Read Channel 16 Description	03	5120	16 bytes UTF-8

11. Factory default settings

TCW260 can be restored to its original factory default settings in 3 different ways.

11.1. Factory default from the WEB interface

If the button “Factory default” from Administration->Backup/Restore is pressed, all parameters return to factory default except Network settings.

11.2. Factory default with the reset button

If the reset button is pressed for more than 5 seconds, while the device is working, all Network settings go to factory default.

11.3. General factory default with the reset button

For factory default reset of all parameters following steps should be executed:

- Press and hold the RESET button, then turn on the power supply;
- Yellow LED shines and red LED blinks about 5 times on a second;
- After about 5 seconds red LED will turn off, the button can be released;
- Yellow LED flashes on 1 second and red LED shines – the device is in working mode, with factory default settings.



The factory default settings are:

Username	admin
Password	admin
IP Address	192.168.1.2
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
SNMPConfiguration	disabled
readCommunity	public
writeCommunity	private
Analog inputs unit	voltage
Analog inputs multiplier	1.000
Analog inputs ofset	0.000
Analog inputs mode	Voltage
Digital inputs mode	Open/Closed

12. Environment information

This equipment is intended for use in a Pollution Degree 2 environment, at altitudes up to 2000 meters. When the controller is a part of a system, the other elements of the system shall comply with the EMC requirements and shall be intended for use in the same ambient conditions.

13. Safety

This device must not be used for medical, life-saving purposes or for any purpose where its failure could cause serious injury or the loss of life.

To reduce the risk of fire, only flexible stranded wire, with cross section 0.5mm² or larger for wiring of digital and analog inputs and relay output of the device should be used.

To avoid electric shock and fire hazard, do not expose this product to liquids, rain, or moisture. Objects filled with liquids, such as vases, should not be placed on this device.

There is a risk of overheating (damage) of the controller if recommended free spaces to adjacent devices are not ensured. The joint part with external component shall have space for attachment/removal of the cable after installation.

Teracom does not guarantee the successful operation of the product if the product was used under conditions deviating from the product specifications.

To ensure that the device works correctly follow the steps below:

- ensure that the device is installed correctly, refer this user manual;
- log into the devices via a browser program;
- make proper setup;
- go to SETUP->INPUTS and set up Digital input 1 as “Discrete OPEN/CLOSED”;
- short the “S01+ (Digital in 1)” and “S01- (SGND)”;
- in the field “Value for Digital input 1 proper value should be displayed;
- at the same time flashing “STS” led should indicate the proper operation.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Teracom Ltd. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

14. Maintenance

Upon completion of any service or repairs to the device or once per year, a safety check must be performed to determine that this product is in proper operating condition.

Clean the device only with dry cloth. Do not use a liquid cleaner or an aerosol cleaner. Do not use a magnetic/static cleaning device (dust remover) or any kind of abrasive materials to clean the device.

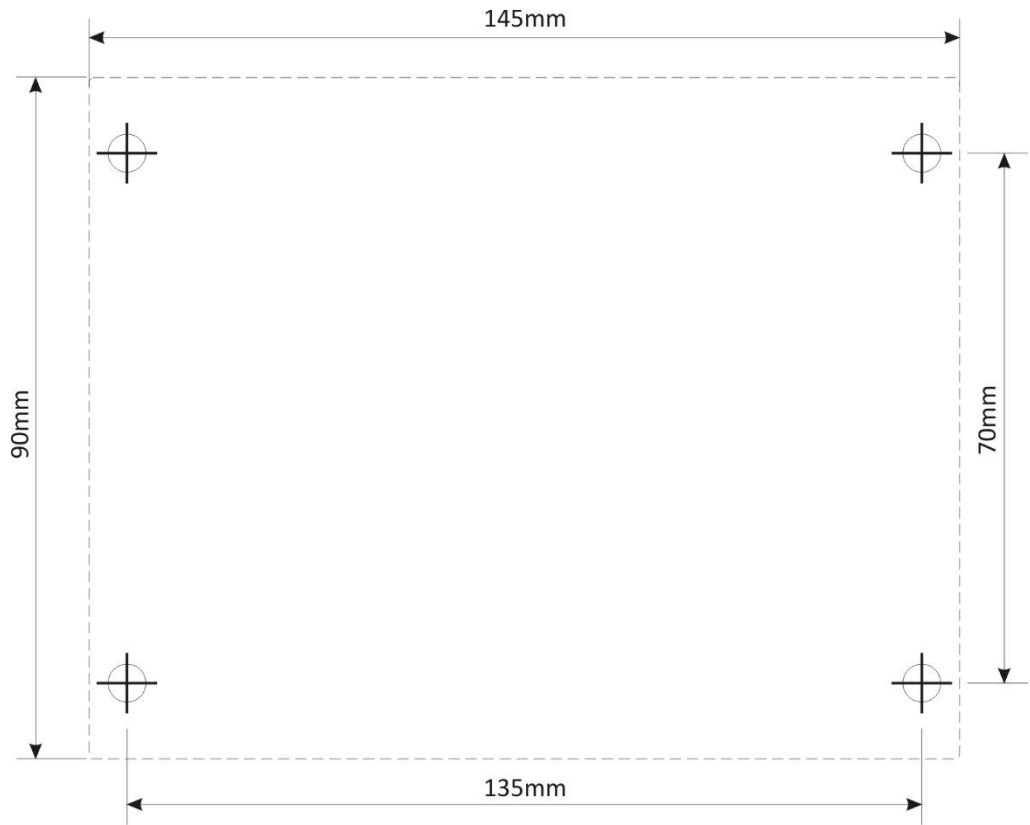


Fig.1

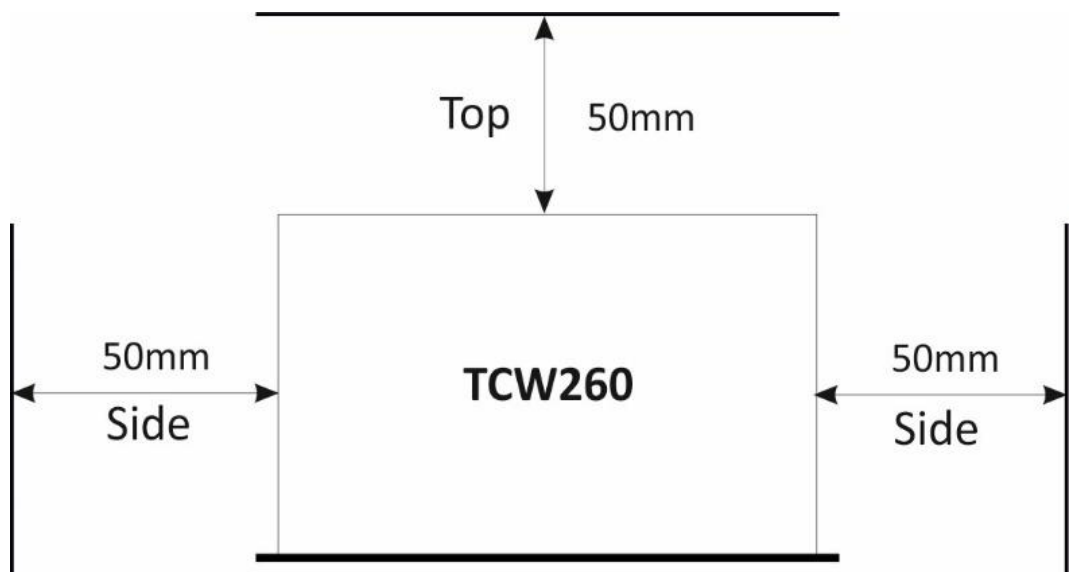


Fig.2