

Air Force 4 Inflator Instruction Sheet

IMPORTANT

Do not operate for more than 30 minutes on continuous run mode without resting machine for 10 minutes or overheating and damage can occur.



Getting Started - Air Force 4





 To attach the Friction Fit Filling Outlets, firmly press each outlet onto their ports. The extension tips enable the unit to inflate 5-inch and entertainer balloons.



2. Attach the power cord below the power switch. Do not use the Air Force 4 near water or in wet conditions.



3. Attach the foot pedal to the outlet on the side of the Air Force 4.

Air Force 4 Large Balloon Inflation Hose



Inflating 5-Inch and Larger Balloons



To inflate 5-inch and smaller balloons, place the blue extension tips over three of the filling outlets. Leave one outlet uncovered to prevent the unit from overheating.



To inflate large balloons, remove the blue extension tips from the filling outlets. To ensure an even flow or air remove the extension tips from all four outlets.



Air Force 4's four outlets allow two people to inflate four balloons at the same time.

A IR PORTE

To attach the Large Balloon Inflation Hose, firmly press the hose onto the port.

Inflating Entertainer Balloons

To inflate an entertainer balloon, place it over the filling tip and lightly stretch the balloon upward as it is being inflated.

To prevent over- heating, remove one Extension Tip from a Filling Outlet on the Air Force 4.

How to Make Corkscrew Balloons







Pre-stretch the entertainer balloon by inflating it fully and releasing the air. Hold the end of the balloon against the Large Balloon Inflation Hose as you wrap it around.

(Note: Be sure the balloon is free of kinks or twists.) Place the balloon on one of the filling outlets and press the foot pedal to inflate.



Service & Warranty