

## Jack Stand | 3 t

### TECHNICAL DATA

Rated load: 3000 kg per jack stand  
Saddle dimensions: 60 x 80 mm  
Min. support height: 440 mm  
Max. support height: 720 mm  
Base dimension: 295 x 295 mm  
Support foot: 80 x 80 x 3.5 mm  
Saddle tube: Ø 48 mm  
Locking pin: Ø 14 mm  
Net weight: 8.5 kg



### ATTENTION

Read the operating instructions and all safety instructions contained therein carefully before using the product. Use the product correctly, with care and only according to the intended purpose. Non-compliance of the safety instructions may lead to damage, personal injury and to termination of the warranty. Keep these instructions in a safe and dry location for future reference. Enclose the operating instructions when handing over the product to third parties.

### SAFETY INFORMATIONS

- Study, understand, and follow all instructions before operating this device.
- Keep children and other persons out of the working area.
- Do not allow children to play with this product or its packaging.
- Do not use the product if parts are missing or damaged.
- Use the product for the intended purpose only.
- Do not exceed rated capacity.
- Use only on hard, level surfaces, with less than 3 degrees of slope.
- Center load on saddle.
- Use as a matched pair only.
- Stands are not to be used to simultaneously support both ends of a vehicle.
- No alterations shall be made to this product.
- Support only on areas of the vehicle as specified by the vehicle manufacturer.
- Only attachments and/or adapters supplied by the manufacturer shall be used.
- Use wheel chocks or other blocking device on opposing wheels before using jack stands.
- Do not use jack stands for any use other than the manufacturer specified usage.
- Never use jack stands on a lawn mower or lawn tractor.
- Do not move or dolly the vehicle while on support stands.
- Do not rock the vehicle while working on or around equipment.
- The following are not recommended for supporting on this equipment: foundations, homes, mobile homes, trailers, campers, nor fifth wheels, etc.
- Failure to heed these markings may result in personal injury and/or property damage.

### ENVIRONMENTAL PROTECTION

Recycle unwanted materials instead of disposing of them as waste. Packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. Contact your local solid waste authority for recycling information.



## PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service. Scope of delivery includes one jack stand.

## BEFORE USE


Inspect stands before each use. Do not use if components are bent, broken or cracked. Ensure that all parts move freely. Verify that the product and the application are compatible. If in doubt, contact Customer Support. Before using this product, read the owner's manual and familiarize yourself thoroughly with the product and the hazards associated with its improper use. Always check the vehicle owners or service manual for location of proper lift and support points.

## INSTRUCTIONS


1. Refer to your vehicle owner's manual for proper jacking procedures.
2. Lift only on areas of vehicle as specified by vehicle manufacturer.
3. Remove the securing tab (4) from supporting bolt (3) and pull out the supporting bolt (3) to adjust the height of the jack stand.
4. Adjust the height of the saddle (1) to desired height.
5. Once the desired height is reached, insert the supporting bolt (3) through the hole in the base (2) and through the hole of the lifting saddle (1) and secure the supporting bolt with the securing tab (4).
6. Place the jack stand under the vehicle contact points specified by the manufacturer.
7. Lower the load carefully onto the stands.

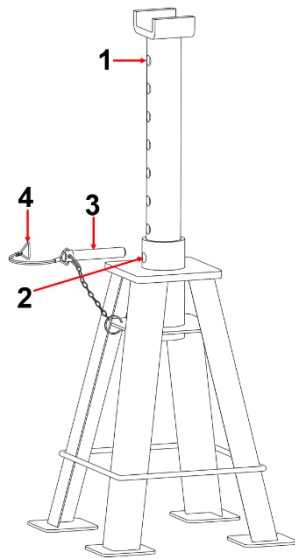

Green = Supporting bolt inserted correctly

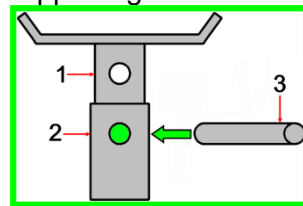

Red = Supporting bolt inserted incorrectly

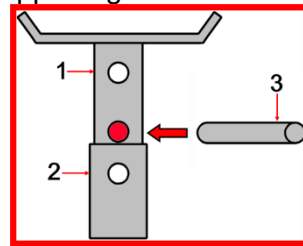

Supporting bolt (3) unsecured



Supporting bolt (3) secured



## CARE AND MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Do not apply oil or grease to any portion of this product. If rust appears, sand affected area and cover with suitable utility paint. Please note that there is no replacement part applicable to this device.

## STORAGE

Store stands in upright position and in a clean, dry area.