

12V MINI DIESEL PUMP 51MM CT5262



TECHNICAL SPECIFICATIONS:

Voltage: 12V(DC)
Power: 60W

Load current: 4Amps
Outlet diameter: 19mm

Motor Racing Speed: 8500r/min

Diameter: 51mm Flowing: 30L/min

Head: 3m

Self-Priming:Yes With longer filter

Length of cable include battery clips:3m

 \triangle **CAUTION:** Please read this manual carefully before operating the pump!

EC DECLARATION OF CONFORMITY

We CANNON TOOLS LTD

20 Station road, Rowley Regis, West Midlands, B65 0JU.U.K.

Declare that the following machine complies with the appropriate basic safety and health requirements of the EC Directive based on its design and type, as brought into circulation by us.

In case of alteration of the machine, not agreed upon by us, this declaration will lose its validity.

Product description: 12V MINI DIESEL PUMP 51MM

Model: CT 5262

Applicable EC Directives:

EC Machinery Directive 2006/42/EC

EC Low Voltage Directive 2014/35/EU

EC Directive of Electromagnetic Compatibility 2014/30/EU

Harmonized standards:

EN ISO 12100, EN 60335-1, EN 60335-2-41, EN 55014-1,

EN 55014-2, EN 61000-3-2, EN 61000-3-3, EN 61000-6-1, EN 61000-6-3

20 Station Road, Rowley Regis, West Midlands, B65 0JU.U.K.

Mr. Gurcharan Tony Singh Sanghera

Managing Director

CANNON TOOLS LTD

G.S.

2019-12-04

 ϵ

Remarks: Correctly install the positive plate and negative plate. Must be ensured that bottom of pump fully submerged into the liquid

WARNING:


- 1. The pump is not explosion- proof. It can not work in explosion danger area.
- 2. The pump is not antiseptic. It can not be used for transporting chemical liquid.
- 3. Pump is applied to diesel, kerosene.

OTHER APPLICATIONS INCLUDE:

Bilge discharging of boats and similar vessels Storage tanks to various vehicles.

FAILURE & REPAIR:

Failure	Reason	Treatment	
No oil comes from diesel	Whether (+) (-) is installed correctly	Check the (+) (-) and adjust	
pump for the first	Whether outlet hose leaks	Repair outlet hose and lock the hose	
use	whether outlet hose leaks	lock tightly	
	Whether the voltage is lower	Increase the voltage, but don't exceed the rated voltage	
oil pump capacity is less	Whether suction or lift exceeds range	Adjust the suction and lift properly	
	Foreign bodies block the filter	Remove the foreign bodies	
	Whether the small impeller is broken	Change new impeller	

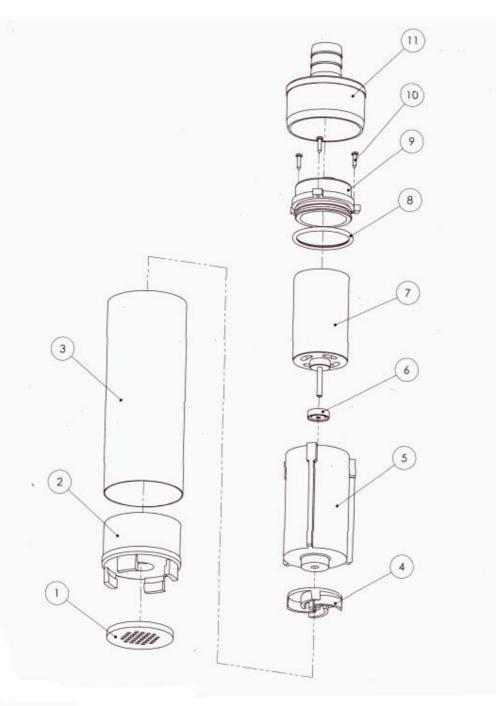

1013-Submersible pump spare parts list.			
₽ Item₽	Name∉	QTY₽	ė.
1₽	Filter₽	1₽	٥
2₽	Base⊬	1∉	ęJ
3₽	Pump case 🔑	1∉	ęJ
40	Impeller ₽	1∉	Ę.
5₽	motor case 🧳	1₽	ę
6₽	oil seal	1₽	Đ
7₽	Motor₽	1₽	Đ
80	seal ring33x21₽	1₽	t)
9₽	Seal cap ₽	1₽	47
10₽	Screw2.5x10₽	1₽	¢3
11₽	Upper cover ₽	1∉	t)