



SLAGGHACKA HRV-95A

1	H-95-01	Mutter	15	H-95-15	Trycke
2	H-95-02	Kolvstång	16	H-90-16	Stödring
3	H-95-03	Spännbackar	17	S-100-17	Kula
4	H-90-04	Styrning	18	H-90-18	Cylinder
5	H-90-05	Hölje	19	S-100-19	Stoppring
6	H-90-06	Stöd	21	F-110-21	Ventil
8	S-100-08	Fjäder	22	S-100-22	Kolvring
9	S-100-09	Pjäder	25	S-100-25	O-ring (2)
12	S-100-12	Kolv	26	F-110-26	Ventilfjäder
13	S-100-13	Kolvring	27	S-100-27	Spännstift
14	H-90-14	Begränsare	28	H-95-28	Hus