

PULV's system is intended for the determination and application of shampoo for automobile bodies.

ACCESORIES AND SPARE PARTS PULV SYSTEM				
Description	Repere	Code		
Back plate PULV system (PVC)	1	LB97.0131		
Anti polution ball valve	2	LB09.003030		
Fittings for hose ring blue	3	LB06.0801		
Black discharge hose L: 10m	4	LB07.0804		
Black discharge hose L: 15m	4	LB07.0805		
Black discharge hose L: 20m	4	LB07.0806		
Fiber gasket 3/4" (bag of 10)	5	LB07.0601		
Nipple for quick coupler F 3/4"	6	LB97.0139		
Brass quick coupler blue	7	LB02.0138		
Brass quick coupler red	8	LB06.0803		
Eductor with yellow injector + check valve	9	LB10.0135J		
Check valve (EPDM)	10	LB00.0111		
Tips (bag of 15)	11	LB97.0103N		
Suction line (cristal hose) Lg: 2m	12	LB09.D692M		
Yellow filter with weight	13	LB02.0103		
Stainless steel wand no-scratch with spray gun L: 30cm	14	LB02.0144		
Stainless steel wand no-scratch with spray gun L: 60cm	14	LB02.0145		
Stainless steel wand no-scratch with spray gun L: 90cm	14	LB02.0146		
Stainless steel wand no-scratch with spray gun L: 1 to 2m	14	LB02.0134		
Filter gasket 3/4" (bag of 5)	15	LB09.0109		
Hose connection. 2m Black	16	LB10.0809		

DILUTION TABLE PULV SYSTEM				
Color	Product	Color	Product	
w ithout	15,7%	green	5,8%	
grey	15,6%	orange	3,8%	
black	15,5%	yellow	2,6%	
beige	13,9%	dark brow n	2,2%	
red	11%	turquoise	2,1%	
w hite	9,2%	purple	1,3%	
blue	8,7%	pink	0,6%	
brow n light	7%	transparent		

TEST CONDITIONS
Dynamic water pressure = 3 bar
Hose length = 15m+ S/St wand 60cm
Injector yellow, flow = 5 l/mn

This table is done to allow you choose a tip in function of the needed concentration.

System PULV - Installation





Plastic hose reel equipped with 13m



LB97.EP13.NOIR

Stainless steel hose reel.

> LB07.ENE.10N LB07.ENE.15N LB07.ENE.10B LB07.ENR.15B

10N=10m black hose 15N=15m black hose 10B=10m blue hose 15B=15m blue hose

BLUE=Washing food BLACK=Industrial wash 3 way distributor. Used to power 3 devices with 1 water inlet.



LB09.V3V468

Blue gun with foam lance. Shock and heat protected




LB07.0119.EMLP

Three angle hydraulic brush



LB04.BROSSE.3F

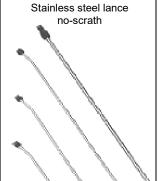


L:30cm = LB97.0144 L:60cm = LB97.0145

L:90cm = LB97.0146 L:1à2m = LB97.0134



L:30cm = LB02.0144 L:60cm = LB02.0145

 L:90cm = LB02.0146 L:1à2m = LB02.0134




Telescopical handle with water channel L: 2x1,5m + Three angle hydraulic brush



LB04.MT215.B3F

Système PULV - Connection

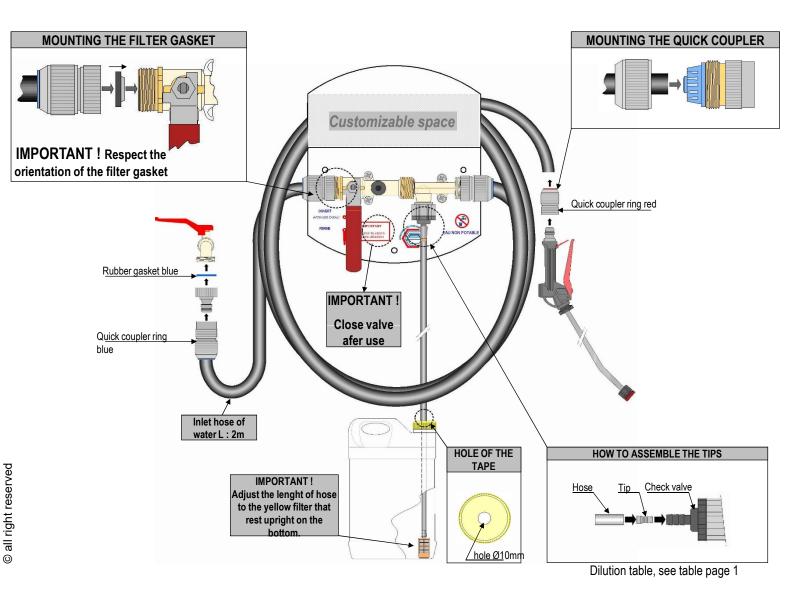

PACKING LIST SYSTEM PULV 06.15		
1_System PULV (PVC)	1_Bag with connection kit =	1_Suction line (crystal hose) L:2,5m
1_Inlet hose of water (L: 2m)		1_Yellow filter with weight.
1_Discharge hose, 10, 15 or 25m according to model		1_Bag of 15 tips
1_Stainless steel lance no-scratch L: 30,60,90cm, 1 to 2m according to model		1_Nipple for quick coupler M-F3/4"
1_Instruction sheet		1_Quick coupler ring blue
		1_Quick coupler ring red
	1_Bag with screws and gaskets	1 Rubber gasket blue 3/4"
		3 Screws TCBC Ø5,5x37 S/St
		3 Wall plugs S7
Packing box: Lenght = 800mm, Width: 400mm, Height: 170mm Weight = 5 K	g (with hose of 15m+lance S/ST of	60cm)
Packing box for lance L 90cm: Lenght = 1100mm, Width: 150mm, Height: 40m	m Weight = 0,7 Kg	
Packing box for lance L 1 to 2m : Lenght = 1300mm, Width : 150mm, Height : 40	mm Weight = 1,14 Kg	

© all right reserved

1) Open the valve inlet water "A"

2) Press the lever "B" handle spraying.

3) Wait a few seconds the rise of product in the suction line.

4) Close the inlet valve of water "A" after use.

MAINTENANCE

The system does not aspire product.

- 1°_ Check the pressure of the water system (minimum: 2 bar, max: 6 bar)
- 2°_ Check that the filter gasket is not dirty or scaled. (clean or replace)
- 3°_ Check that the yellow filter of the suction line is submerged in the product, and the hose is not pinched, folded, or closed.
- **4°**_ Verify that the tip is not clogged. (clean or replace)
- **5°**_ Check that the yellow filter of the suction line is not dirty. (clean or replace)
- **6°**_ Check that the spray handle is not dirty or calcified. (clean or replace)
- 7° Check that the flat spray nozzle is not dirty or calcified. (clean or replace)
- 8°_ Check that the injector venturi does not dirty or calcified. (clean or replace)

The product can filled with water.

9°_ Verify that the check valve is not dirty or calcified. (clean or replace)

NEVER orientate wand in direction of persons, animals or plants

Always wait some seconds for a good generation of foam.

Always close water ball valve after each use.

