


## Torx invändig i bultskalle


**TORX® (T)**



T	T8	T9	T10	T15	T20	T25	T27	T30	T40	T45	T50	T55	T60	T70	T80	T90	T100	
S	(ref. mm)	2.30	2.48	2.72	3.26	3.84	4.40	4.96	5.49	6.60	7.77	8.79	11.17	13.20	15.49	17.51	19.88	22.09

## Torx utvändig bultskalle E hylsa


**TORX® (E)**



E	E4	E5	E6	E7	E8	E10	E11	E12	E14	E16	E18	E20	E22	E24	E26	E28	
S	(ref. mm)	3.83	4.72	5.69	6.17	7.47	9.37	10.03	11.12	12.85	14.71	16.64	18.41	20.24	22.10	23.85	25.65

## XZN 12 kantsfattning invändigt i bultskalle


**XZN**



XZN	M4	M5	M6	M8	M10	M12	M14	M16	M18	
S	(ref. mm)	3.60	4.80	6.00	7.20	9.60	11.41	13.22	15.63	16.85

## Ribe fattning, splines invändigt i bultskalle


**Ribe CV**

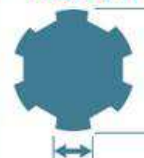

CV	M5	M6	M7	M8	M9	M10	M12	M13	M14	M16	
S	(ref. mm)	5	6	7	8	9	10	12	13	14	16
W	(ref. mm)	1.1	1.3	1.4	1.7	1.9	2.2	2.6	3.0	3.1	3.5

## Five star eller Penta Lobe, vanligt på insprutningar och ABS


**Penta-Lobe (PR)**



PR	8PR	9PR	10PR	15PR	20PR	25PR	27PR	30PR	40PR	45PR	50PR	55PR	
S	(ref. mm)	2.19	2.36	2.58	3.10	3.64	4.12	4.71	5.23	6.30	7.38	8.35	10.63

## Torx Plus invändigt i bultskalle, har redan börjat dyka upp inom industrin.

**TORXplus® (IP)**



IP	8IP	9IP	10IP	15IP	20IP	25IP	27IP	30IP	40IP	45IP	50IP	55IP	60IP	70IP	
S	(ref. mm)	2.29	2.48	2.72	3.25	3.84	4.39	4.95	5.49	6.60	7.77	8.79	11.16	13.20	15.49