


Important Note:

If the LED displays an "F": Check all connections that they are securely fastened. Unplug controller from outlet and wait at least 20 seconds before plugging back into the outlet.

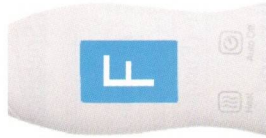


List of Cautions

1. Do not fold or roll the warmer pad when it is switched on. Because any uneven heat spikes will set off the warmer pad's suicide protection system resulting in a permanent demolition. (When abnormal high temperature occurs, the temperature controller has an automatic suicide cut out for user's safety.)
2. This warmer pad cannot be ironed.
3. This warmer pad cannot be used in physical contact with other heating devices such as foot furnace, hot water bag, etc
4. Do not insert needles/pins, or scratch the warmer pad with sharp objects, or strike the warmer pad with blunt objects.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
6. Children shall not play with the appliance
7. Cleaning and user maintenance shall not be made by children without supervision

Cleaning and Storage

1. Clean and dry the pad
Do not wash your warmer pad in a washing machine. It can only be hand wiped with wet towel and small amount of detergent, and never put it in a drier because it can only be dried naturally. Don't connect the pad to power to dry itself either. Nor should you dry it under the sun or iron it because both methods would speed up the aging of the insulating layer.
2. Clean the power cord.
Please clean the surface with neutral detergent when it is dirty and wipe it dry with soft cloth. Don't clean it with industrial solvent like benzene or kerosene.
3. Storage
The warmer pad has to be completely dry from moisture before put away for storage. The dry warmer pad should be folded without any creases. Do not put it underneath any heavy subject or anything at all. Don't apply any mothproofing agent like naphthalene because it will damage the insulation material.

CDR2 Warmer Pad Instructions

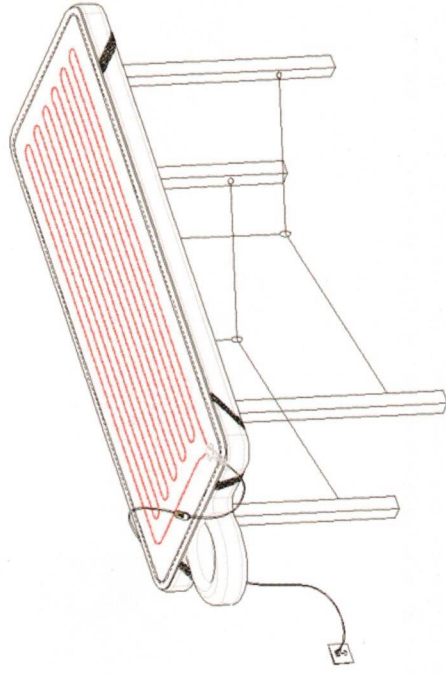


User's Manual

Attention: This warmer pad may not feel hot to the touch. The level of heat was designed to feel warm only when **LAYING** or **SITTING** on top of it.

Introduction

This product uses double-layer helix heating wires with sound insulating properties. The latest temperature control panel provides 8 temperature options and 8 auto-off durations. It brings warmth and comfort to your massage table like nothing else could.

Product Structure and Illustrations

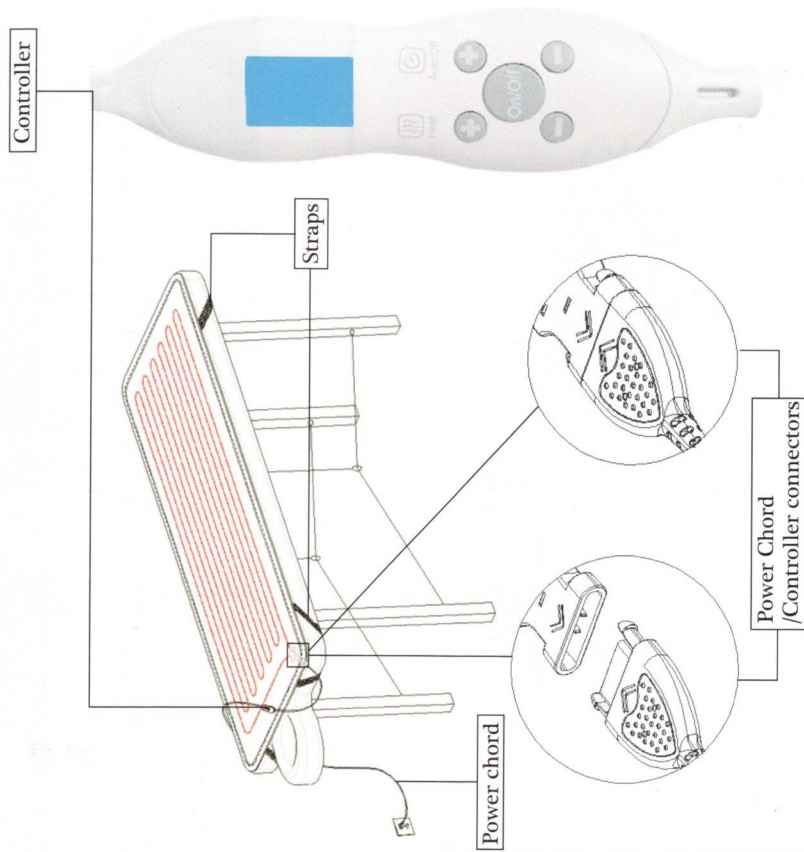

Warning: Always use our brand of controller to connect this pad, no other brand's controller is allowed to connect to this pad. And please make sure the arrows on the each end point to each other.

Technical Specifications

| Models | Product Code | Dimension | Watts | Voltage |
|--------------------------|--------------|------------|-------|---------|
| TX185×76 (English Plug) | CDR2-UK | 185cm×76cm | 115W | 240V |
| TX185×76(American Plug) | CDR2-US | 185cm×76cm | 115W | 120V |
| TX185×76 (European Plug) | CDR2-EU | 185cm×76cm | 105W | 230V |

Preparation and Start

- Make sure there's no foreign object on the table before placing the warmer pad on.
- Roll the warmer pad forward from top to down and strap the four corners onto the table.
- Make sure cover the warmer pad with a sheet to prevent sweats from sinking into the pad.
- Connect the controller to the warmer pad and connect the power chord to the grid.
- Press the on/off button to start.

Set the Temperature

Left set of '+' and '-' underneath the 'HEAT' sign controls the temperature from level 1 to level 10. The temperature represented by different levels as shown on the screen is indicated as below.

| Temperature Level | LCD Display | Centigrade | Fahrenheit |
|-------------------|-------------|------------|------------|
| 1 | L | 37 | 98.6 |
| 2 | 2 | 40 | 104.0 |
| 3 | 3 | 42 | 107.6 |
| 4 | 4 | 45 | 113.0 |
| 5 | 5 | 47 | 116.6 |
| 6 | 6 | 50 | 122.0 |
| 7 | 7 | 52 | 125.6 |
| 8 | 8 | 55 | 131.0 |
| 9 | 9 | 57 | 134.6 |
| 10 | H | 60 | 140.0 |

5.4F (or 3°C) sensitivity is possible.

Set the 'Auto Off' timer

Right set of '+' and '-' underneath the 'AUTO OFF' sign controls the duration of heating before the warmer pad shut itself down automatically. The default 'auto off' duration is 1 hour however if you need longer or shorter usage you can simply tap '+' or '-' to preset 'auto off' timer at 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 hours respectively. Once it shut down automatically you have to push the on/off button again if you want to restart. This function allows you to not worry about leaving the warmer pad on unintentionally.