








Levysoitin ilman RIAA-vahvistinta - Voidaan käyttää Phono Amplifier MK2 for B&O:n kanssa








Product	Image	Vuosi
Beogram 1000V	 A black and silver turntable with a wooden base, featuring a clear dust cover and a prominent tonearm.	1966-72
Beogram 1001	 A black and silver turntable with a wooden base, similar to the 1000V but with a different tonearm design.	1973-74
Beogram 1100	 A silver turntable with a wooden base, featuring a clear dust cover and a tonearm.	1976-77
Beogram 1102	 A silver turntable with a wooden base, similar to the 1100 but with a different tonearm design.	1978
Beogram 1200	 A silver turntable with a wooden base, featuring a clear dust cover and a tonearm.	1969-72
Beogram 1201	 A silver turntable with a wooden base, similar to the 1200 but with a different tonearm design.	1973
Beogram 1202	 A silver turntable with a wooden base, featuring a clear dust cover and a tonearm.	1974-75

Product	Image	Vuosi
Beogram 1203	 A square-shaped turntable with a light-colored top and a dark base, shown from a top-down perspective.	1974-76
Beogram 1204		1976
Beogram 1500	 A square turntable with a dark top and a light base, shown from a top-down perspective with the lid open.	1968-74
Beogram 1700	 A square turntable with a dark top and a light base, shown from a top-down perspective with the lid open.	1979-82
Beogram 1800	 A square turntable with a light top and a light base, shown from a top-down perspective with the lid open.	1971-73
Beogram 1800 VF	 A square turntable with a light top and a dark base, shown from a top-down perspective.	1968-69
Beogram 1900		1976
Beogram 1902	 A square turntable with a light top and a light base, shown from a top-down perspective with the lid open.	1977-78
Beogram 2000	 A square turntable with a light top and a light base, shown from a top-down perspective with the lid open.	1975-77

Product	Image	Vuosi
Beogram 2000 RD		1983-87
Beogram 2200		1979-80
Beogram 2202		1981
Beogram 2400		1979-80
Beogram 2402		1981
Beogram 2404		1980-83
Beogram 3000		1967-68




Product	Image	Vuosi
Beogram 3000	 A compact, square-shaped CD player with a wooden-grain finish and a clear dust cover.	1972-75
Beogram 3000	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1985-87
Beogram 3300	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1987-90
Beogram 3400	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1975-77
Beogram 3404	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1980-82
Beogram 4000	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1974-75
Beogram 4001	 A compact, square-shaped CD player with a black finish and a clear dust cover, shown with the cover open.	1977-80

Product	Image	Vuosi
Beogram 4002		1975-79
Beogram 4004		1978-80
Beogram 5000		1983-86
Beogram 5005		1985-87
Beogram 5500		1987-89
Beogram 6002		1983-86
Beogram 6006		1981-82

Product	Image	Vuosi
Beogram 8000		1981-82
Beogram 8002		1982-87
Beogram 8500		1990-93
Beogram 9000		1988-90
Beogram 9500		1989-93
Beogram RX		1983-86
Beogram RX2		1985-91

Product	Image	Vuosi
Beogram TX		1983-85
Beogram TX2		1985-91

B&O-levysoittimet, joissa on sisäänrakennettu RIAA-vahvistin - ei voida käyttää ulkoisen RIAA:n kanssa

Model	Image	Year
Beogram 1000VF		1965-73
Beogram 1200 with GF3		1968-73
Beogram 3000 with GF4		1968

Model	Image	Year
Beogram 3400 Quad		1975-77
Beogram 3500		1990-93
Beogram 4500		1988-91
Beogram 6000		1974-78
Beogram 6500		1989-91
Beogram 7000		1992-96