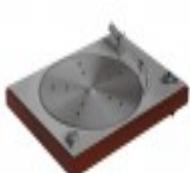
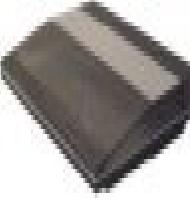


# **Skivspelare utan RIAA-förstärkare - Kan användas med Phono Amplifier MK2 för B&O**

Product	Image	År
Beogram 1000V		1966-72
Beogram 1001		1973-74
Beogram 1100		1976-77
Beogram 1102		1978
Beogram 1200		1969-72
Beogram 1201		1973
Beogram 1202		1974-75

Product	Image	År
Beogram 1203		1974-76
Beogram 1204		1976
Beogram 1500		1968-74
Beogram 1700		1979-82
Beogram 1800		1971-73
Beogram 1800 VF		1968-69
Beogram 1900		1976
Beogram 1902		1977-78
Beogram 2000		1975-77

Product	Image	År
Beogram 2000 RD		1983-87
Beogram 2200		1979-80
Beogram 2202		1981
Beogram 2400		1979-80
Beogram 2402		1981
Beogram 2404		1980-83
Beogram 3000		1967-68


Product	Image	År
Beogram 3000		1972-75
Beogram 3000		1985-87
Beogram 3300		1987-90
Beogram 3400		1975-77
Beogram 3404		1980-82
Beogram 4000		1974-75
Beogram 4001		1977-80

Product	Image	År
Beogram 4002		1975-79
Beogram 4004		1978-80
Beogram 5000		1983-86
Beogram 5005		1985-87
Beogram 5500		1987-89
Beogram 6002		1983-86
Beogram 6006		1981-82

Product	Image	År
Beogram 8000		1981-82
Beogram 8002		1982-87
Beogram 8500		1990-93
Beogram 9000		1988-90
Beogram 9500		1989-93
Beogram RX		1983-86
Beogram RX2		1985-91

Product	Image	År
Beogram TX		1983-85
Beogram TX2		1985-91

## B&O skivspelare med RIAA-förstärkare inbyggd- kan inte användas med extern RIAA

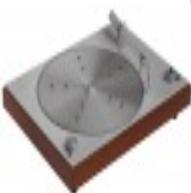Model	Image	Year
Beogram 1000VF		1965-73
Beogram 1200 with GF3		1968-73
Beogram 3000 with GF4		1968

Model	Image	Year
Beogram 3400 Quad		1975-77
Beogram 3500		1990-93
Beogram 4500		1988-91
Beogram 6000		1974-78
Beogram 6500		1989-91
Beogram 7000		1992-96