

OneRemote DabWiFi5

Advanced Tuner for Bang & Olufsen Systems Handling


DAB/DAB+ – FM - Bluetooth - Internet Radio
Spotify Connect- Music Player

User Guide

Control with Bang & Olufsen Remotes



DAILY OPERATION WITH BANG & OLUFSEN REMOTES

Go to "Older Bang & Olufsen Remotes" if  is not a key on your remote.



Press twice to select. Mouse double-click.



Select Source, DAB+, Internet Radio, Bluetooth etc.
BACK to previous screen.



Favorite Channel List.
Save actual radio channel as Favorite wait 2 second



Setup menu.



Select a preset channel.



Stand by key.



See channel info.



Set Bass and Treble.



Maneuver in menus **or** volume level.
*Volume level should always be left at a maximum if not connected **directly** to a Powerlink Speaker.*

CONTENT

Daily Operation with Bang & Olufsen Remotes	2
GET STARTED – QUICK GUIDE	4
Presets - Favorite Channels	5
SELECT OPERATION	6
Internet Radio Channels	6
Presets	6
Selecting a non-preset Internet Radio station.	6
DAB+ Channels	7
FM Channels	8
Bluetooth	9
*1 Pairing a Bluetooth device to DabWiFi5	9
Podcasts	10
Spotify	10
MAIN MENU	11
OLDER BANG & OLUFSEN REMOTES	11
Daily Operation with Older Bang & Olufsen Remotes	11

GET STARTED – QUICK GUIDE

This User Manual is intended for the daily use of the tuner. See the Installation Manual for installation.

Advanced OneRemote circuitry has been added to this tuner, OneRemote DabWiFi5, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.


- DabWiFi5 is a beocompatible tuner.
- DabWiFi5 may be controlled by any Bang & Olufsen system remote terminal from 1988 and on.
- DabWiFi5 may be also controlled via the free app UNDOK in iPhones, iPods, iPads or in Android phones and tablets. Using UNDOK the DabWiFi5 can be controlled from all over the house.

DabWiFi5 may be connected to any Bang & Olufsen system and controlled directly by Bang & Olufsen remotes.

When switching on the DabWiFi5 with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the DabWiFi5 automatically selected.

If the DabWiFi5 is to be used only for handling DAB+, FM channels or music via Bluetooth, no further installation is required.

DabWiFi5 is connected to the system input that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

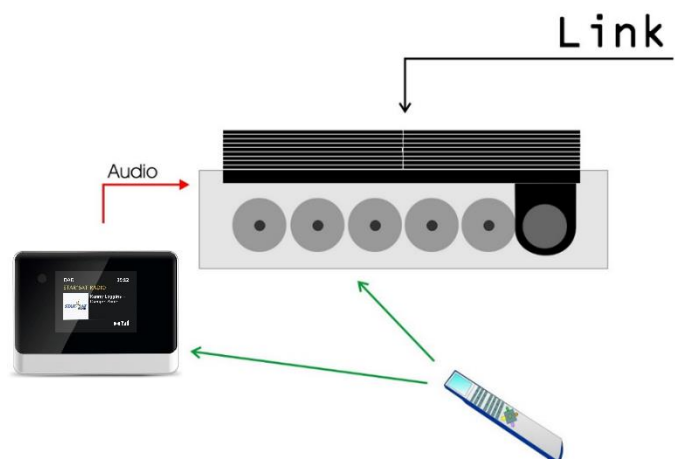

If the Bang & Olufsen system has no **AMEM** or **ATAPE** operated input available, the DabWiFi5 needs to be connected to a different input socket and reprogramming of the DabWiFi5 is required accordingly. **See the Installation Manual.**

- *Bang & Olufsen link-systems do not only allow for listening to system sources from the main room from any connected link room, but also for controlling them remotely. Thus, a link connected kitchen speaker plays music from the main room. DabWiFi5 may be part of that system, controlled via WiFi. See the Installation Manual.*

PRESETS - FAVORITE CHANNELS


Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.

A total of 30 presets are available for FM, DAB+ and Internet Radio each. Presets may be changed at any time by pressing a single key on the Bang & Olufsen remote.



SELECT OPERATION

INTERNET RADIO CHANNELS

Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.



Press  repeatedly until **Internetradio** is shown in the upper left corner of the display.


 


PRESETS

- To select a preset **Internet Radio** channel, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.





The selected preset number and the quality of the WiFi signal are displayed at the very bottom of the display.

SELECTING A NON-PRESET INTERNET RADIO STATION.

From the play screen, Press  or  to access the Radio Search menu. Here the channels are sorted in subcategories for easier location.


In these listings the  (**BACK**) must be used to go back to the previous screen. For ease the  may be used to select an item in the list, but the  must be used to back out. Just as  works in all menus.



Other control options during Internet Radio handling:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info

DAB+ CHANNELS






Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.

Press  repeatedly until **DAB** is shown in the upper left corner of the display.

- To select a preset **DAB+** channel, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.

The preset number and the quality of the antenna signal are displayed at the very bottom of the display.



Other control options during DAB handling:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info
-  **8** Rescan for stations

FM CHANNELS






Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.

Press  repeatedly until **FM** is shown in the upper left corner of the display.

- To select a preset **FM** program, simply press a digit **0** – **9** .
- Press  to get to the presets 11 to 30.
- Press  to get a list of the preset channels.

The preset number and the signal quality are displayed at the very bottom of the display.


Other control options during DAB handling:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-  **4** Info
-  **8** Rescan for stations

BLUETOOTH

Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.

Selecting the Bluetooth mode makes it possible to play music from any paired smartphone, tablet or other device, via the DabWiFi5 and the Bang & Olufsen system. *1

Press  repeatedly until **Bluetooth** is shown in the upper left corner of the display.

In the Bluetooth mode all control of the music is handled directly on the transmitting smartphone, tablet or any other bluetooth connected device.

Playback status and the signal quality are displayed at the very bottom of the display.

Other control options during Bluetooth handling:

 **4** Info

*1 PAIRING A BLUETOOTH DEVICE TO DABWIFI5


For a smartphone, tablet or any other bluetooth device to be able to send music to the DabWiFi5, it must be paired with DabWiFi5. Pairing is only needed initially, as DabWiFi5 will remember the bluetooth device.

To pair a bluetooth transmitter with DabWiFi5:

1. Select the bluetooth mode, as described above.
2. Go to the Setup Menu on the transmitting device and look for the bluetooth menu.
3. Shortly after selecting bluetooth, the DabWiFi5 will show up in the menu as **DIGITRADIO 10 IR**. Select this and music played on the device can be listened to via the Bang & Olufsen system.






PODCASTS

Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.

Press  repeatedly until **Podcast** is shown in the upper left corner of the display.

The selected preset number and the WiFi signal quality are displayed at the very bottom of the display. A Podcast preset is saved in the Internet Radio preset list.

Other control options during Podcast handling:

-   Save the actual channel as a preset.
-  **Back** to return to a previous menu.
-   Info

SPOTIFY

Switch on the DabWiFi5 tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system. Factory setting is **AMEM** or **ATAPE**.

From the Spotify app, simply select the **DIGITRADIO 10 IR** (Default name of the DabWiFi5) to play Spotify via the DabWiFi5 and the Bang & Olufsen system. DabWiFi5 will automatically shift to Spotify.

Playback status and the quality of the WiFi signal are displayed at the very bottom of the display.

Other control options during Podcast handling:

-   Info

MAIN MENU


MENU gives access to the main menu. When chosen various receiver options are available.


Adjustment in this menu is required only during initial installation.

OLDER BANG & OLUFSEN REMOTES

The DabWiFi5 tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example, the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the DabWiFi5 tuner in accordance with below tables.

DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

PLAY PLAY		Press twice to select. Mouse click.
STOP		Select source DAB+, Internet Radio, Bluetooth etc.
GOTO		Get a list of the preset channels.
STORE		BACK to previous screen.
PLAY	▲	Favorite Recall
PLAY	▼	Favorite Save
PLAY 7		Set Bass and Treble.