
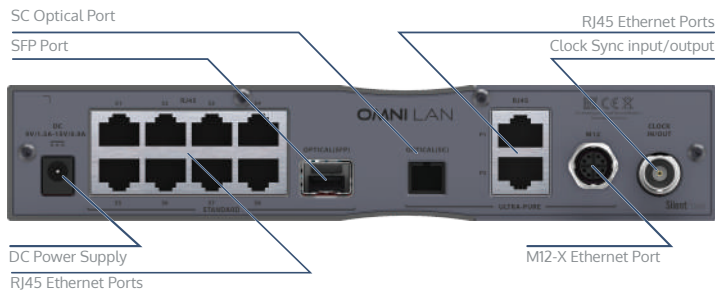



OMNI LAN

SilentPower_™


Quick Start Guide

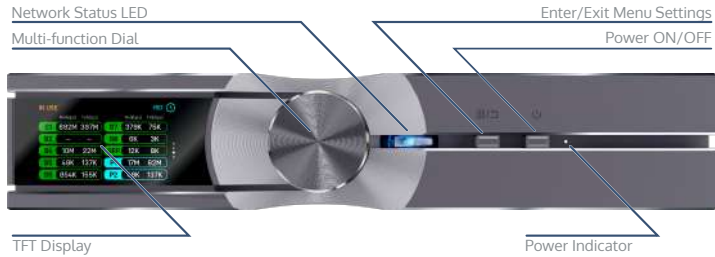


1 Power

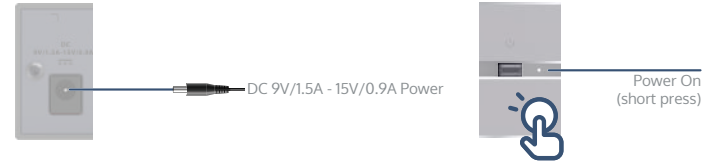


2 Network Ports for General Devices

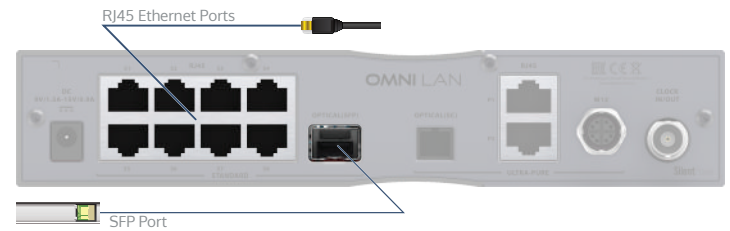

3 Ultra-Pure Ports for Audio Devices

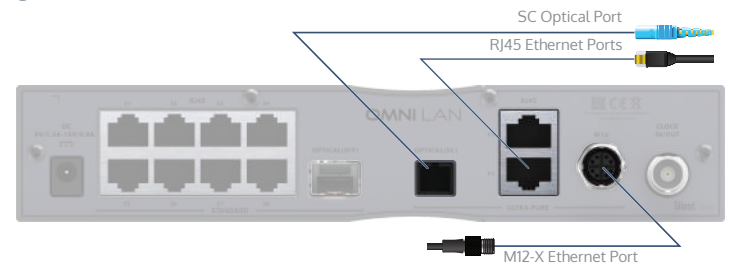

4 TFT Display Screen

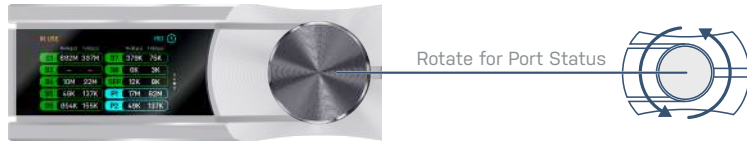

STANDARD

	Rx(bps)	Tx(bps)		Rx(bps)	Tx(bps)
S1	692M	397M	S6	854K	155K
S2	--	--	S7	379K	75K
S3	--	--	S8	6K	3K
S4	10M	22M	SFP	12K	8K
S5	--	--			

S1-8: Standard RJ45 Ethernet Ports 1-8

SFP: SFP Port

PUREPORT

	Rx(bps)	Tx(bps)
P1	17M	82M
P2	692M	397M
SC	--	--
M12	10M	22M

P1-2: Ultra-Pure RJ45 Ethernet Ports 1-2

SC: SC Optical Port

M12: M12-X Ethernet Port

Connected with NEXIS app
 "Clock Sync" enabled and connected
 ISO "ISO" Grounding mode selected

5 Menu



Rotate for Menu Settings



Clock Sync



Brightness



GND



About



Auto Power
Restore



LAN
Signal LED



Factory Reset

