
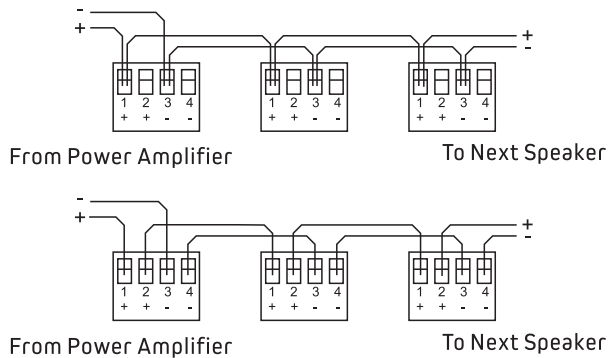


⚠ When installing the speakers outside, do not submerge or place them in direct contact with water (e.g., ponds, waterfalls, fountains).

CONNECTIONS

Unscrew the top cover and connect the wires from the amplifier (or the previous speaker) to the supplied terminal block, using the IN terminal; red to + and black to -.

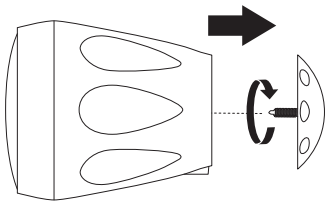

SPECIFICATIONS


MODEL	OGS-104iW
Woofer	4" PP Cone
Tweeter	0.75" Silk Dome
RMS Power	20W
Frequency Response(±3dB)	120Hz-20kHz
Nominal Impedance(ohm)	8
Sensitivity	83
Transformer	2.5W-5W-10W-20W
IP Level	IP66
Product Dimensions	138 x138 x190mm (5.4" x 5.4" x 7.5")

MULTI-PURPOSE SPEAKER

OGS-104iW

CARE AND MAINTENANCE


- Turn off the power to the speaker when unused for long periods of time.
- Ensure all equipment is turned OFF prior to cleaning.
- Surfaces and cabinet need only occasional dusting/cleaning. Never touch the speaker drivers. Never use chemicals or solvents as they may damage the surface. Always clean using a dry cloth.

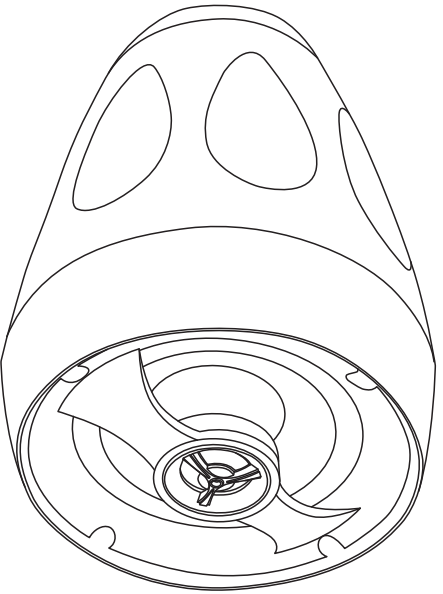

SAFETY INSTRUCTIONS

- 1 Please read the instructions carefully before installation and use. Keep the manual safe for future reference.
- 2 Prior to installing the speakers into any ceiling or wall, check the structure for weight bearing ability and avoid contact with any wiring or plumbing that might be behind the surface area. Installing on soft materials or in areas incapable of supporting the speakers' weight may cause personal injury or damage to the speaker.
- 3 Make sure the speaker is properly secured to the ceiling/wall. Please use the proper screws, bolts, or anchors (not included). Failure to do so may cause the speaker to become unsecured and cause potential damages/injuries.
- 4 Use only approved and certified wiring in your installation, do not stretch or place the wire in contact with sharp objects.
- 5 Damage to the woofer and tweeter may occur if the speaker is dropped or hit - resulting in no sound or distorted sound.
- 6 Never overdrive your speakers to the point of distortion and always reduce volume prior to switching input sources (e.g., FM to CD).
- 7 When installing the speakers outside, choose areas such as the underside of eaves to avoid strong direct sunlight which may affect the color and life of the speaker enclosure.
- 8 When placing the speakers on a wall or shelf, it is recommended that speakers be installed at the level of the ear or slightly higher.
- 9 To tilt the speaker, loosen the adjustment screw found on the bracket. Tilt the speaker to the desired position and tighten the screws securely. Adjustable stand is not recommended to rotate after installation due to its weight.
- 10 Prior to removing cables ensure all power to your amplifier and other components is turned OFF.

PACKING LIST

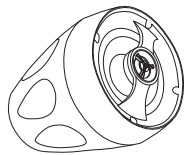


speaker




user manual

Accessories for Wall Mounting

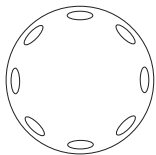


end cap

 

adjustable stand



 
screws X4




1 set

INSTALLATION

Wall Mounting

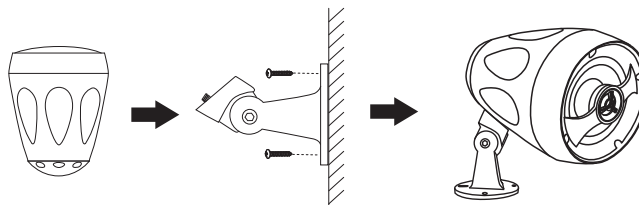


Accessories for Pendant Hanging

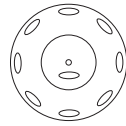


top cover



carabiner & nut

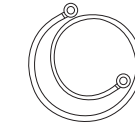


hanging cable

 

hook X2




 screws X2



1 set


Accessories for Landscape Grounding

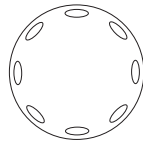


end cap



 steel base plate




landscape spike

 

adjustable stand



 
screws X5




1 set

Pendant Hanging

- 1 Route the speaker cable hanging from the ceiling area through the top cover, and dress the cables to the wire rope using plastic cable ties, strip the ends of the cables approximately 1/8" to 3/16" and, if the wire is stranded, twist the strands.

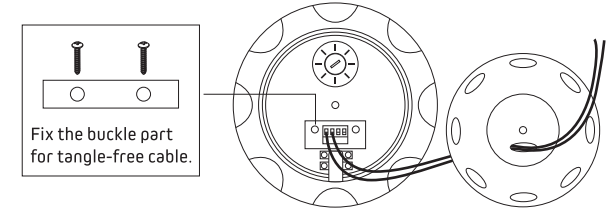

- 2 Fasten the provided hook to the top cover and speaker.

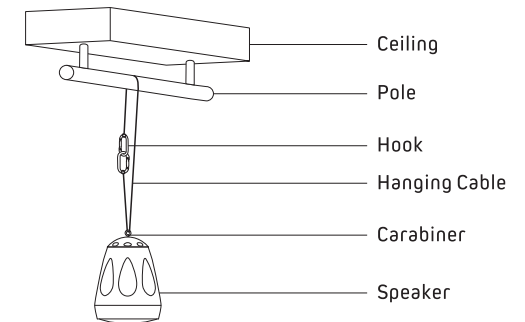

Landscape Grounding

