

INNOTECH®

BEF-203



Instruction manual

DE – ACHTUNG: Die Verwendung des INNOTECH-Produkts ist erst zulässig, nachdem die Gebrauchsanleitung in der jeweiligen Landessprache vollständig gelesen und verstanden wurde.

EN – ATTENTION: Use of the INNOTECH product is only permitted after the instruction manual has been read and fully understood in the respective language.

IT – ATTENZIONE: L'utilizzo del prodotto INNOTECH è permesso solo previa lettura e comprensione dell'intero manuale di istruzioni nella lingua del relativo paese di utilizzo.

FR – ATTENTION : L'utilisation du produit INNOTECH n'est autorisée qu'après avoir entièrement lu et compris la notice d'utilisation dans la langue du pays concerné.

NL – ATTENTIE: Dit INNOTECH-product mag pas gebruikt worden nadat u de gebruikershandleiding in de taal van het betreffende land gelezen en begrepen hebt.

ES – ATENCIÓN: Se autorizará el uso de los productos INNOTECH una vez que se hayan leído y entendido las instrucciones de uso en el idioma del país.

PT – ATENÇÃO: O uso do produto INNOTECH apenas é permitido depois de ter lido e compreendido na totalidade as instruções de uso na respetiva língua nacional.

DK – GIV AGT: Du må først bruge et produkt fra Innotech, efter du har læst og forstået brugsvejledningen i fuldt omfang i dit lands sprog.

SV – O B S : Denna INNOTECH-produkt får inte användas förrän bruksanvisningen på respektive lands språk har lästs igenom och förståtts.

CZ – POZOR: Práce s výrobkem INNOTECH je povolena teprve po kompletním přečtení a porozumění návodu k použití v jazyku daného státu.

PL – UWAGA: Produkty firmy INNOTECH mogą być używane dopiero po dokładnym zapoznaniu się z całą instrukcją obsługi w ojczystym języku.

SL – POZOR: Uporaba izdelka INNOTECH je dovoljena šele po tem, ko ste navodila prebrali v celoti v ustreznem jeziku svoje dežele in jih tudi razumeli.

SK – POZOR: Produkt INNOTECH môžete používať až po prečítaní a porozumení celého návodu na použitie pre príslušnú krajinu.

HU – FIGYELEM: Az INNOTECH termékek használatá csak azt követően engedélyezett, hogy saját nyelvéen elolvasta és megértette a teljes használati utasítást.

TR – DİKKAT: INNOTECH ürününün kullanımına ancak ilgili ülkenin dilinde sunulmuş olan kullanım kılavuzunun tamamen okunmasından ve anlaşılmasından sonra izin verilir.

ZH – 注意 : 只有在仔细阅读并完全理解了当地语言的使用说明后，才能使用 INNOTECH 公司的产品。

1

TABLE OF CONTENTS

| | | |
|------|---------------------------|---|
| [2] | DESCRIPTION OF ICONS | 2 |
| [3] | COMPONENTS/MATERIAL | 3 |
| [4] | DIMENSIONS | 3 |
| [5] | INSTALLATION SUBSTRUCTURE | 3 |
| [6] | INSTALLATION INSTRUCTIONS | 4 |
| [7] | INSTALLATION TOOL | 4 |
| [8] | INSTALLATION | 5 |
| [9] | SAMPLE APPLICATIONS | 7 |
| [10] | DEVELOPMENT & SALES | 8 |

2

DESCRIPTION OF ICONS

Hazard warning/Safety risk



For an IMMEDIATE threat of danger, that can cause serious physical injuries or death.



For a POTENTIALLY dangerous situation, that can cause serious physical injuries or death.



For a POTENTIALLY dangerous situation, that can cause minor physical injuries or damage to property.



Supplementary information/instructions



Correct



Incorrect



Wear eye protection/safety glasses



Wear protective gloves!

3

COMPONENTS/MATERIAL

A)



C)




4x

D)



2x

B)

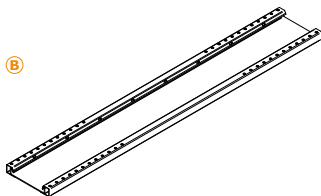

E)

8x



A) Instruction manual

B) Track for pitched roof: Steel, galvanized

C) Hexagonal bolt, self-tapping M10x20: Steel, galvanized


D) Mounting bracket 201x37x30 t = 1.5: Steel, galvanized

E) Wood screw 8.0x220 Tx40: Steel, galvanized

4

DIMENSIONS

[mm]

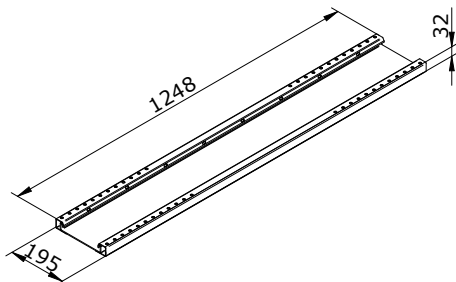


5

INSTALLATION SUBSTRUCTURE

The basic prerequisite for a correct installation is a statically load-bearing wooden structure.

[mm]

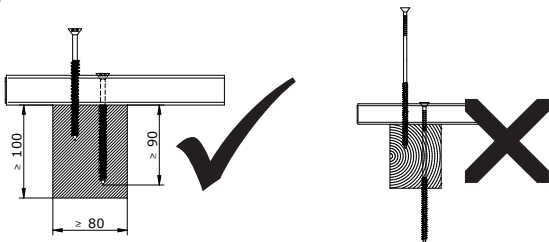


The minimum penetration depth into the load-bearing rafters is 90 mm.


6

INSTALLATION INSTRUCTIONS


INNOTECH "BEF-303" is designed for the installation of INNOTECH-anchorage points as per EN 795 A and for the installation of the INNOTECH-lifeline system as per EN 795 C.

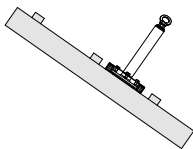


e.g. "EAP-STABIL-10"

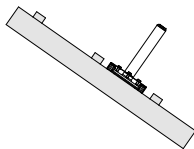

e.g. "AIO-STA-10"

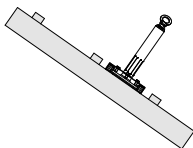

e.g. "EAP-STABIL-15"

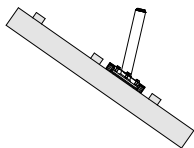


e.g. "AIO-STA-11"


7

INSTALLATION TOOL

[mm]

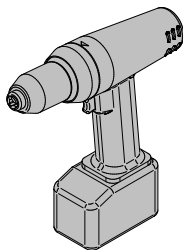

Tx = 40

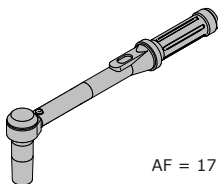

AF = 17


8

INSTALLATION

1.



Push an INNOTECH-standard post with both attachment brackets onto the rail for the pitched roof, and stabilise **lightly** using 4 hexagonal bolts (self-tapping).


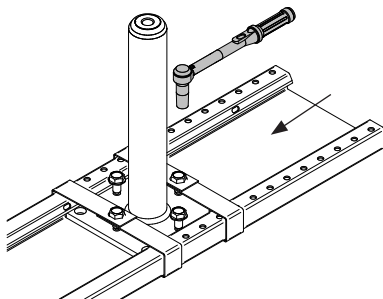


8

INSTALLATION

2.

 Align the track for the pitched roof parallel between two rafters (8/10 cm), **and** attach at left and right using 8 woods screws.

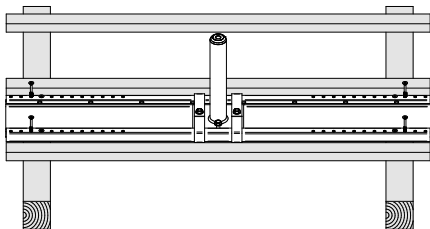


3.


Align the INNOTECH-standard support as far as the rafter (maximum), and tighten using 4 hexagonal bolts (self-tapping).



①

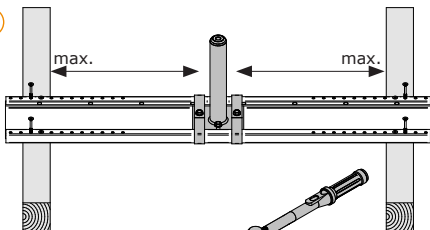


②


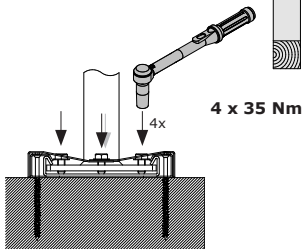


Comply with the specified tightening torque.

on rafter

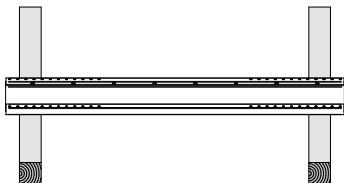

under rafter

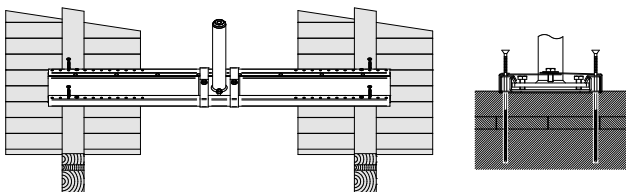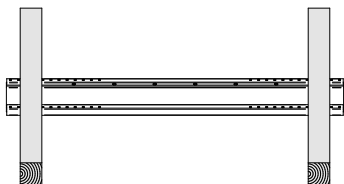

Adapt the length of the wood screws (*not included in the scope of delivery*) to the dimensions of the wooden structure.

INNOTECH® Arbeitsschutz GmbH, Laizing 10, 4656 Kirchham/Austria
www.innotech-safety.eu

