

PICTURE GUIDE


– How to install an additional cooling coil –



- Unscrew the plastic cap and the screw nut
- Remove the washer



- Open the lid of the unit

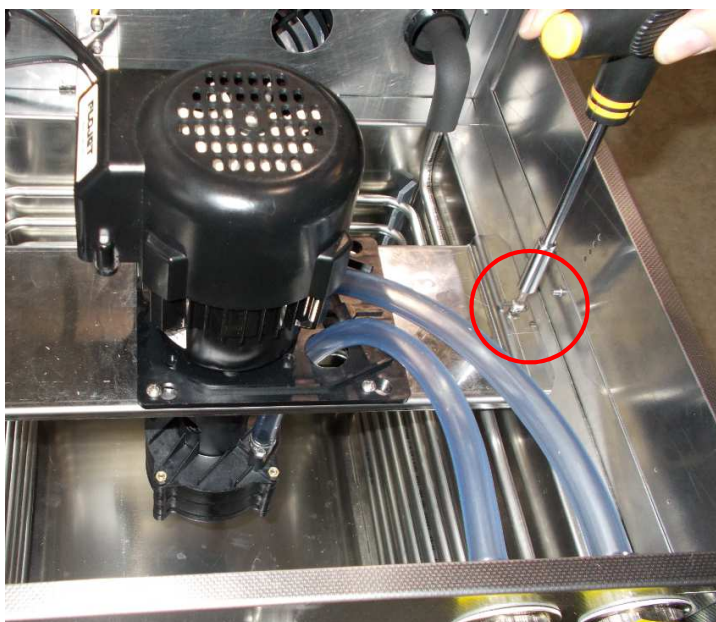

- Remove the Torx screws of the pump holder (on both sides)



- Remove the blind cap of the connection plate



- Disengage the water level device from the bracket



- Remove the Torx screw of the connection plate



- Lift the connection plate carefully




- Lift also the pump with the holder carefully
- Keep attention, that the cables and hoses won't be bent or teared off!



- Place the cooling coil into the water tank



- Place the pump into the water tank again

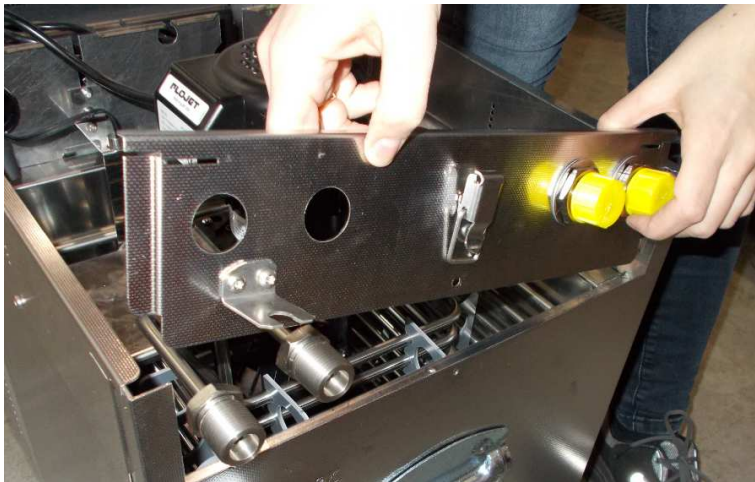


- Plug the endings of the coil through the holes of the connection plate
- Place the connection plate into the device again



- Screw the connection plate in place



- Screw the holder of the pump in place again (on both sides)

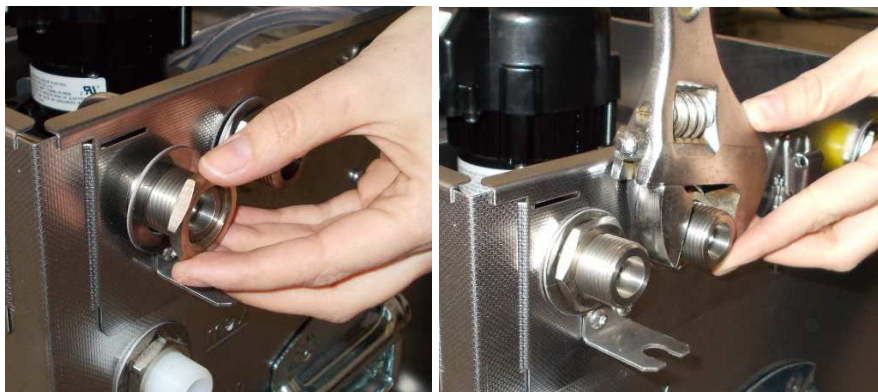

- Screw also the new connections with the washers and the nuts together



- Close the lid
- => The unit and the coil are ready for use now