

---

# How to change the offset temperature on TB31/41/51

---

1

2

3



TEMPERATURE



ECO  
MAX



ON/OFF

ECO

MAX

06.07.2011

## What is the offset?

The offset is the difference between the temperature displayed and the actual temperature in the fridge

N°	Offset function	Range
F1	Temperature set > -6°C	+10°C / -10°C
F2	-12°C > Temperature set > -6°C	+10°C / -10°C
F3	-13°C > Temperature set	+10°C / -10°C

## How to change the offset

- Turn the fridge on and press together 1, 2 & 3 until the display flashes the writing «F1»
- Push the button Up (1) or Down (2) and check that the offset is set as per the above list. If different push either Up or Down to set it to the correct value
- To switch to F2 or F3 push the button Eco/Max (3) and repeat step 2
- Once the values are set the the system goes back into normal functioning after a few seconds

## How to change the display from Celsius to Fahrenheit

- Turn the fridge on and press together 1 & 2 for a couple of seconds