

### **VISION X**



# **About The PC Isolation Washer Kit:**

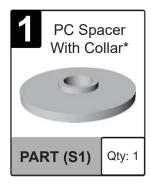

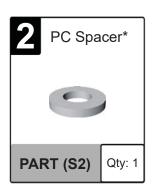

### **FEATURES**


- 1. Heavy Duty Polycarbonate Spacers
- 2. Reduct Corrosion of Dissimilar Metals
- 3. Prolongs Life and Protects Investment

### **PREPARATION**

- 1. We recommend completely reading instructions before installing.
- 2. Consult your local state regulatory agency regarding the use of LED lighting.
- 3. The placement of LED lighting should not restrict airflow to the radiators, block essential access-points, or other lighting sources.

WARNING: Bolts, Nuts, and Washers are Stainless Steel. <u>DO NOT USE</u> Pneumatic or Electric Tools to Tighten and Loosen. The <u>Hardware Will Permanently Lock Together</u>.

## PC ISOLATION WASHER KIT

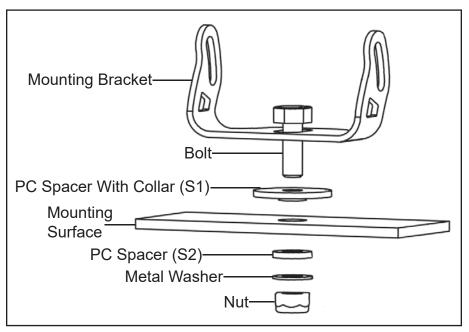

#### **MOUNTING INSTALLATION INSTRUCTION**

- 1. Determine where the light will be placed.
- 2. Place mounting bracket with light to desired location. Using a marker or pick tool, mark the center point of the bolt hole on the mounting surface.
- 3. Set the light aside. Drill out a large enough hole to fit the Collar on the PC Spacer.
- 4. Remove the mounting bracket from the lights by unscrewing or bolting the connective hardware.
- 5. Place PC Spacer with collar, collar side down into the hole.
- 6. Line up the mounting bracket with the hole you just drilled, slide the Bolt through the Mounting Bracket, the PC Spacer and the Mounting Surface in that order.
- 7. On the other side of Mounting Surface, add the PC Spacer (S2), the Metal Washer, and Nylock Nut onto the Bolt.
- 8. Tighten Nut & Bolt after aiming to your desired torque.
- Reassemble the light back on the mounting bracket by reapplying the Connective hardware. Aim and tighten to your desired level.