

Communication solutions

Solar for everybody



One-inverter solutions



Smart management
with Solplanet App




One-inverter solutions with Wi-Fi Stick



Smart management
with Solplanet App



One inverter with Wi-Fi stick for Monitoring

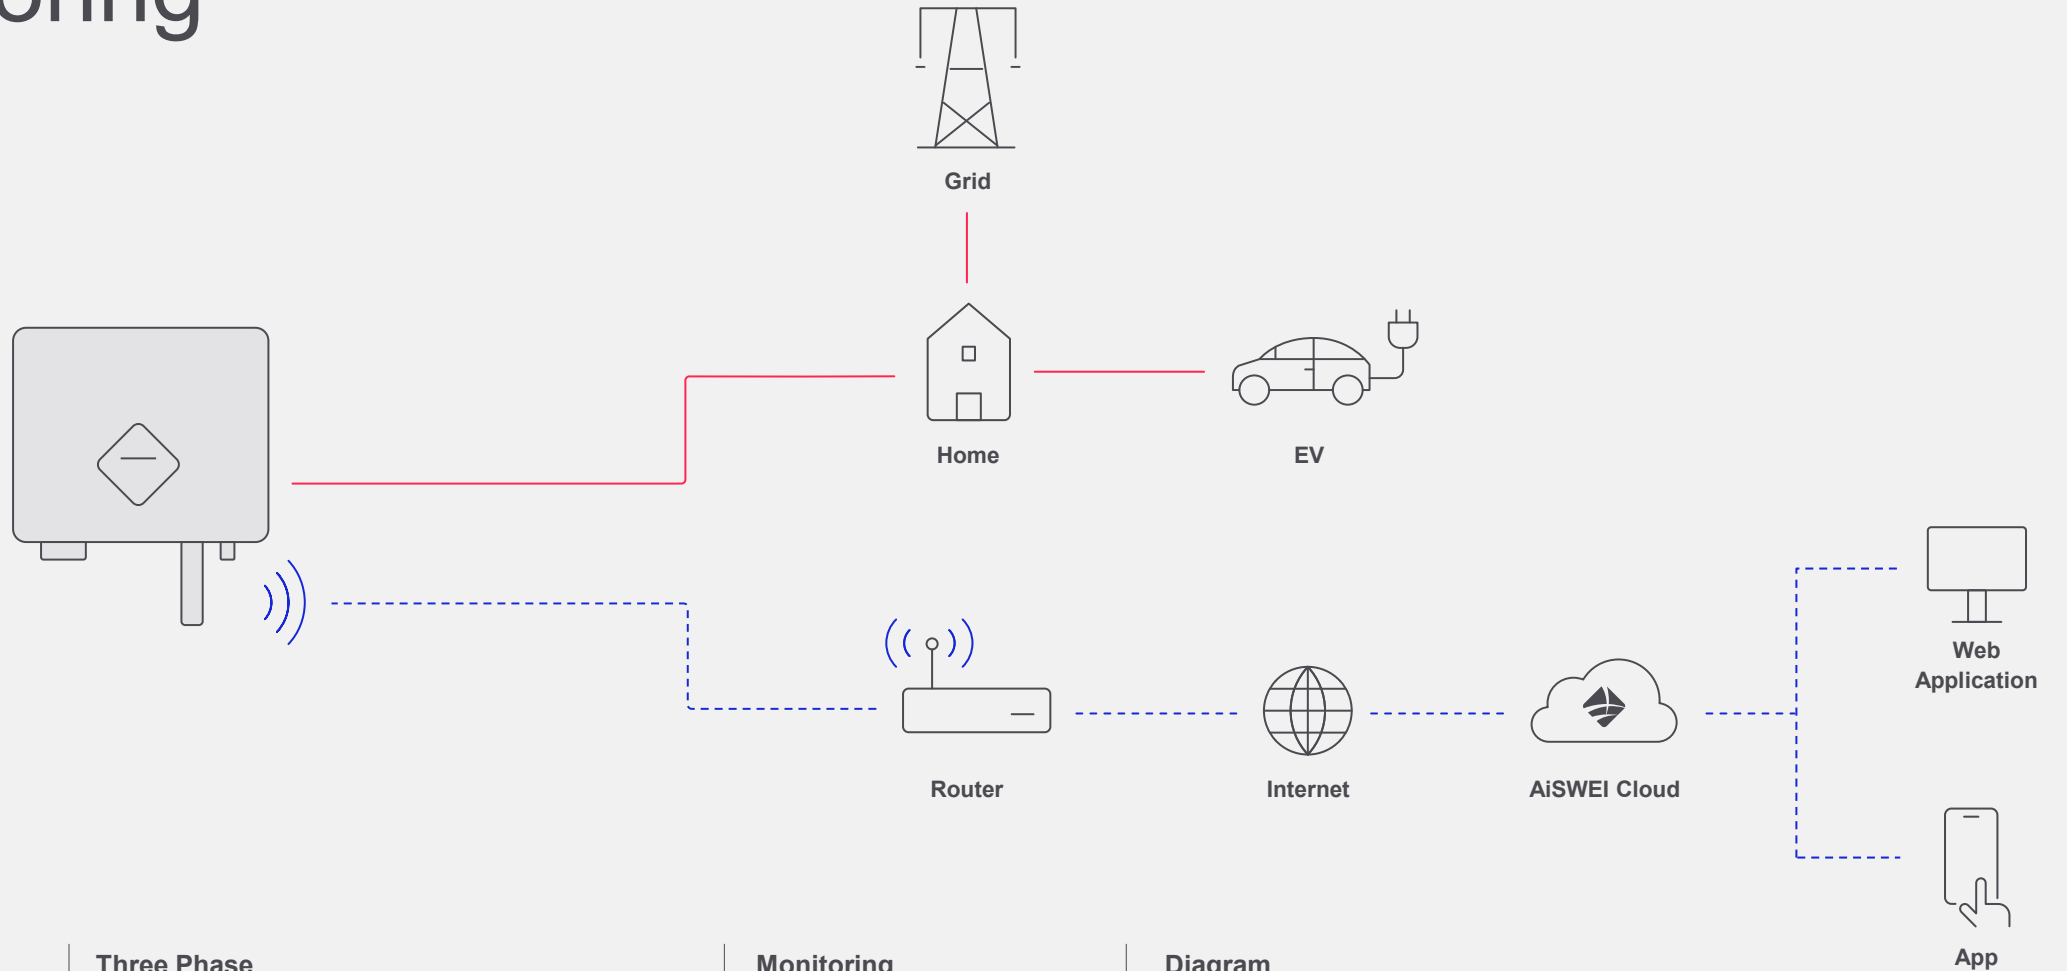

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S

Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2


Monitoring

- Production

Diagram

- Data - - - - -
- Energy —————
- RS485 —————

One inverter with Wi-Fi stick for Monitoring & 0-export

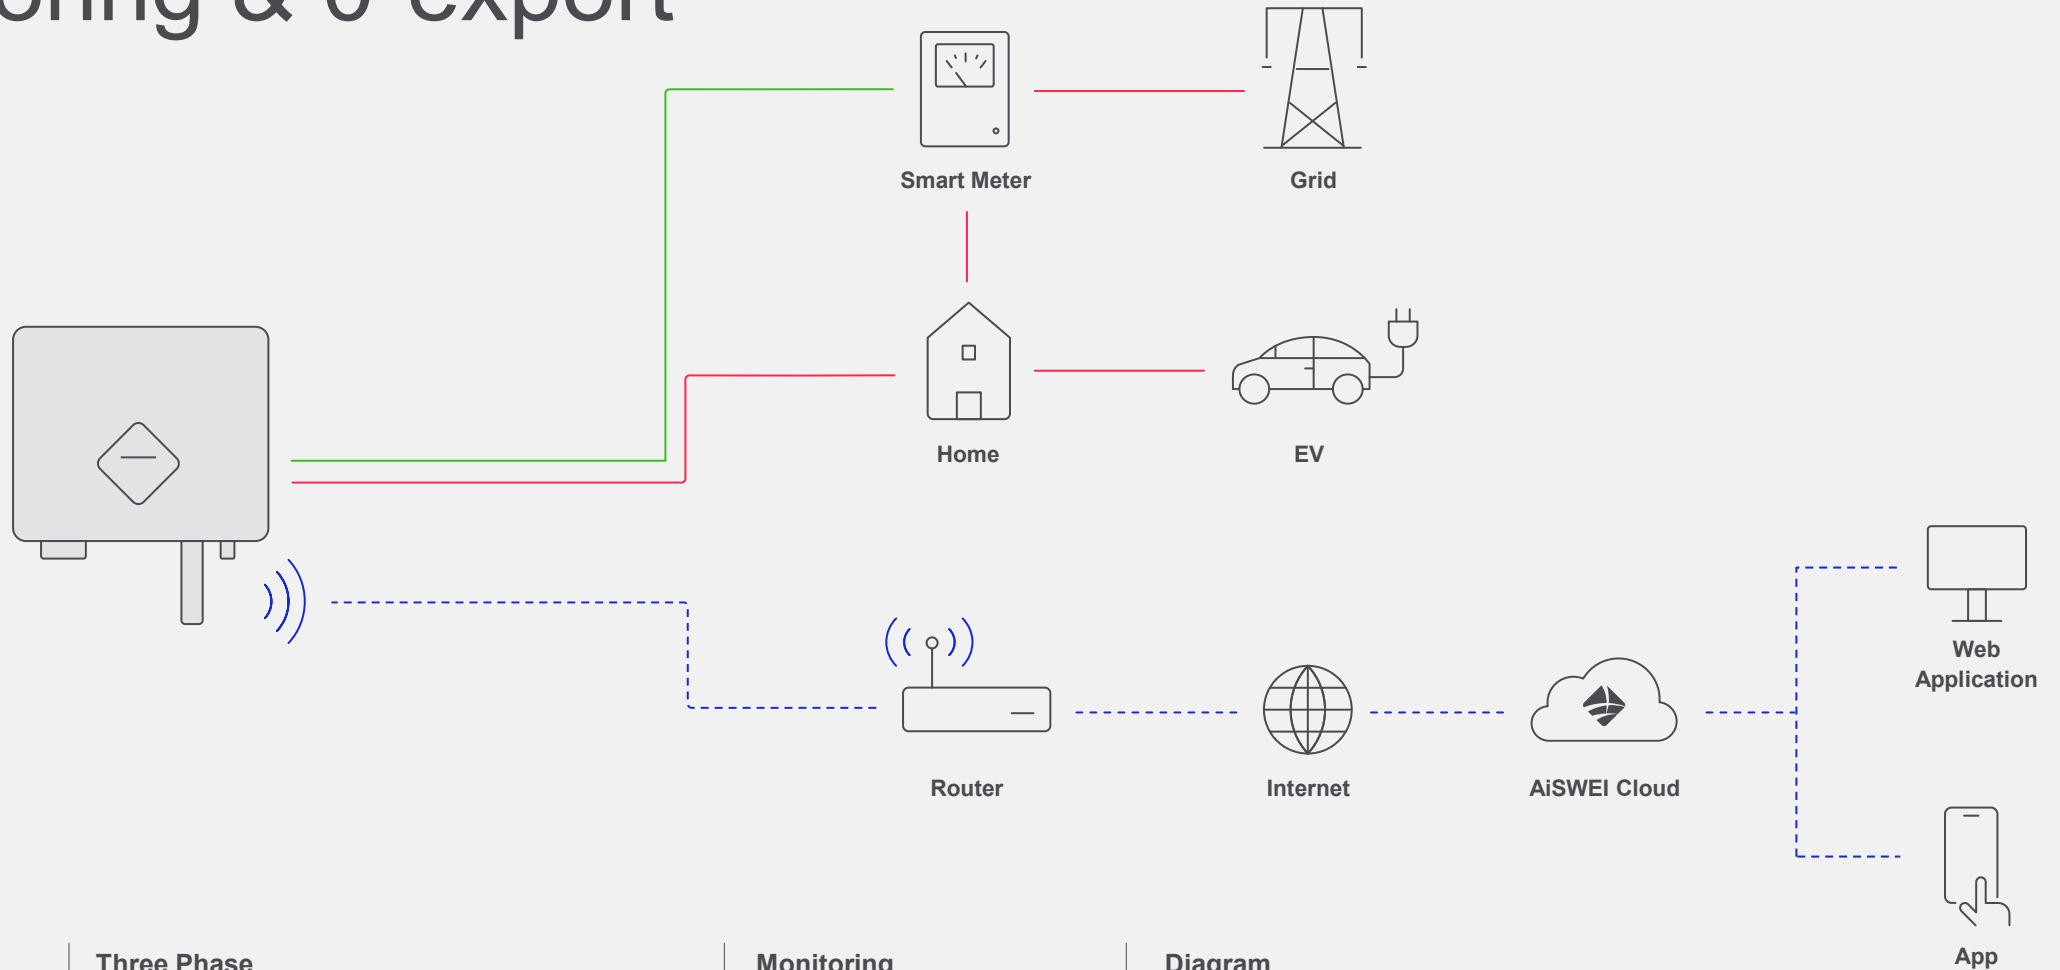

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S

Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2


Monitoring

- Production
- Consumption
- Self-consumption

Diagram

- Data - - - - -
- Energy —————
- RS485 —————

One inverter with Wi-Fi stick for 0-export

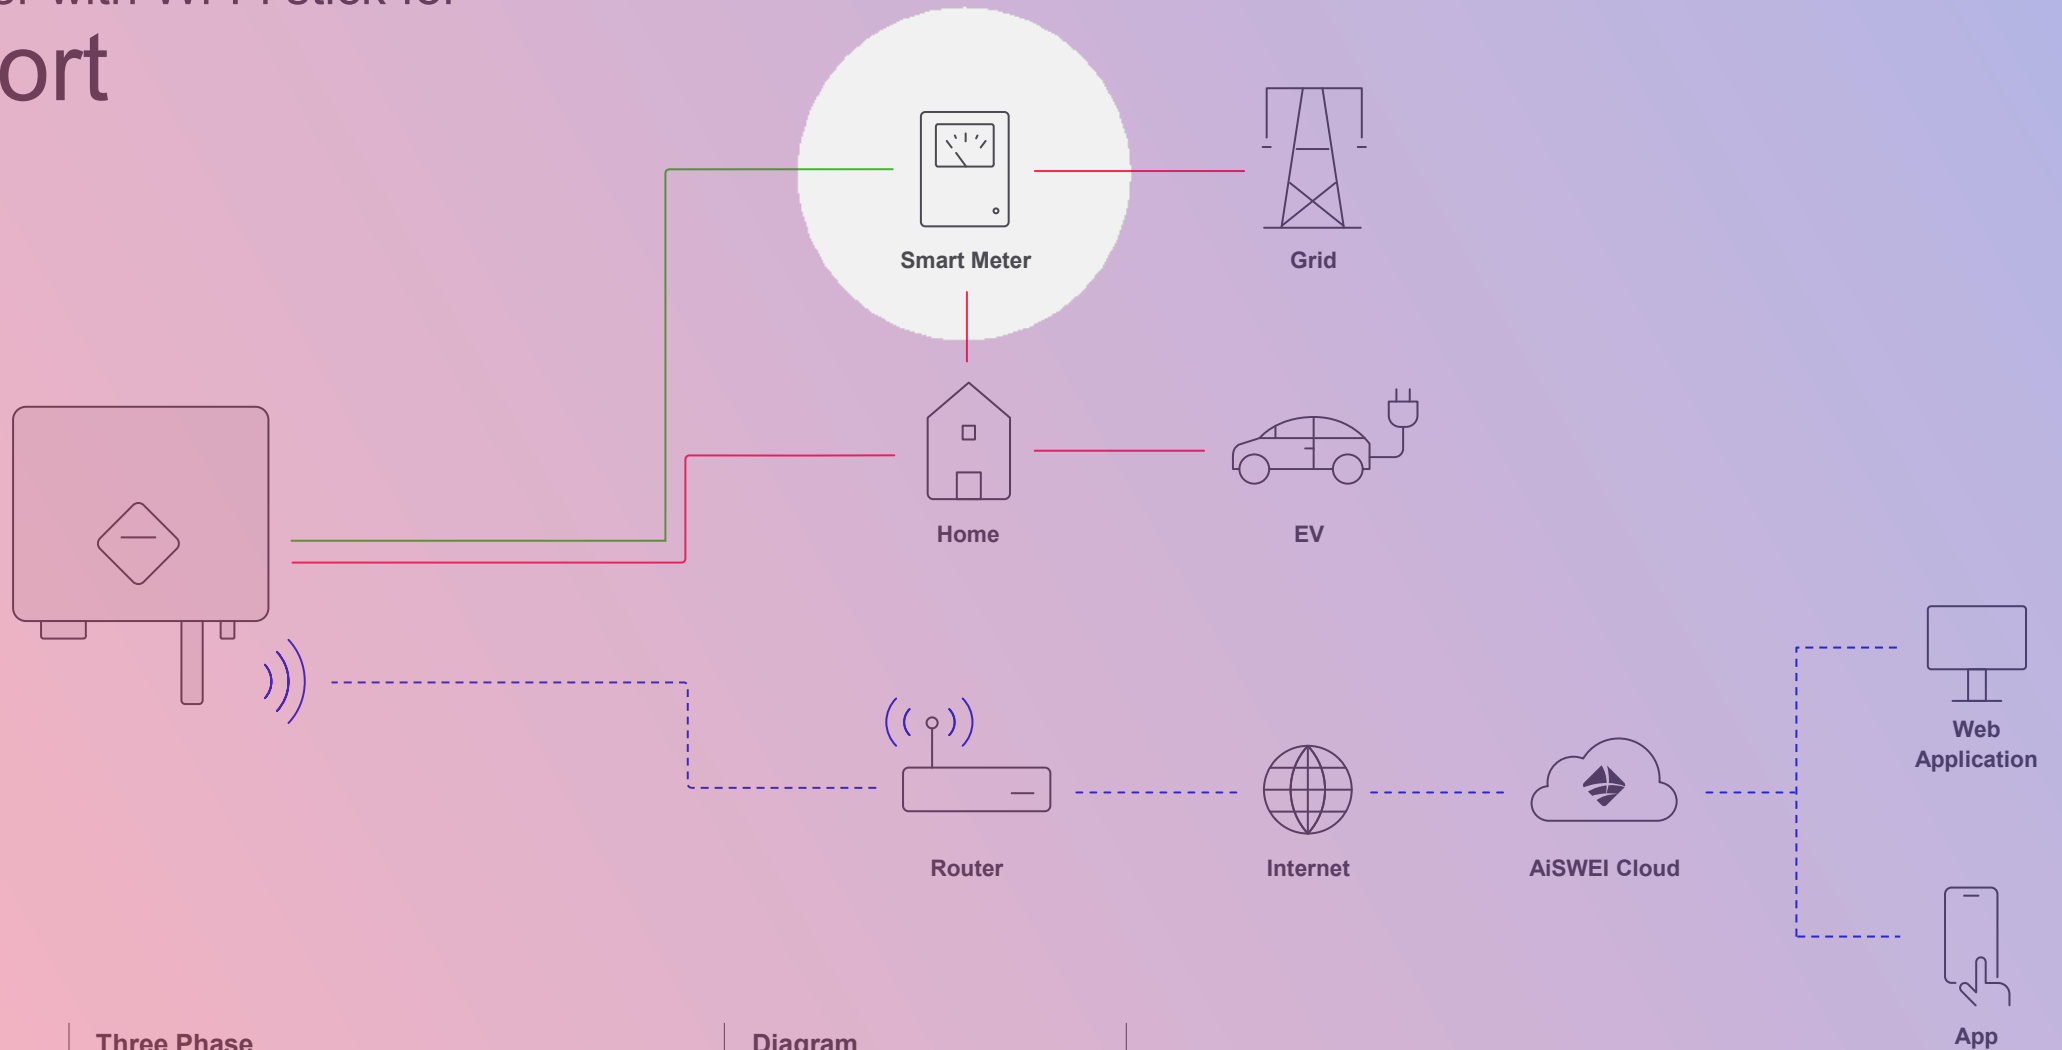

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S

Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data 
- Energy 
- RS485 

Multiple-inverter solutions



Smart management
with Solplanet App




Multiple-inverter solutions with Wi-Fi Stick



Smart management
with Solplanet App



Multiple inverters with Wi-Fi stick for Monitoring

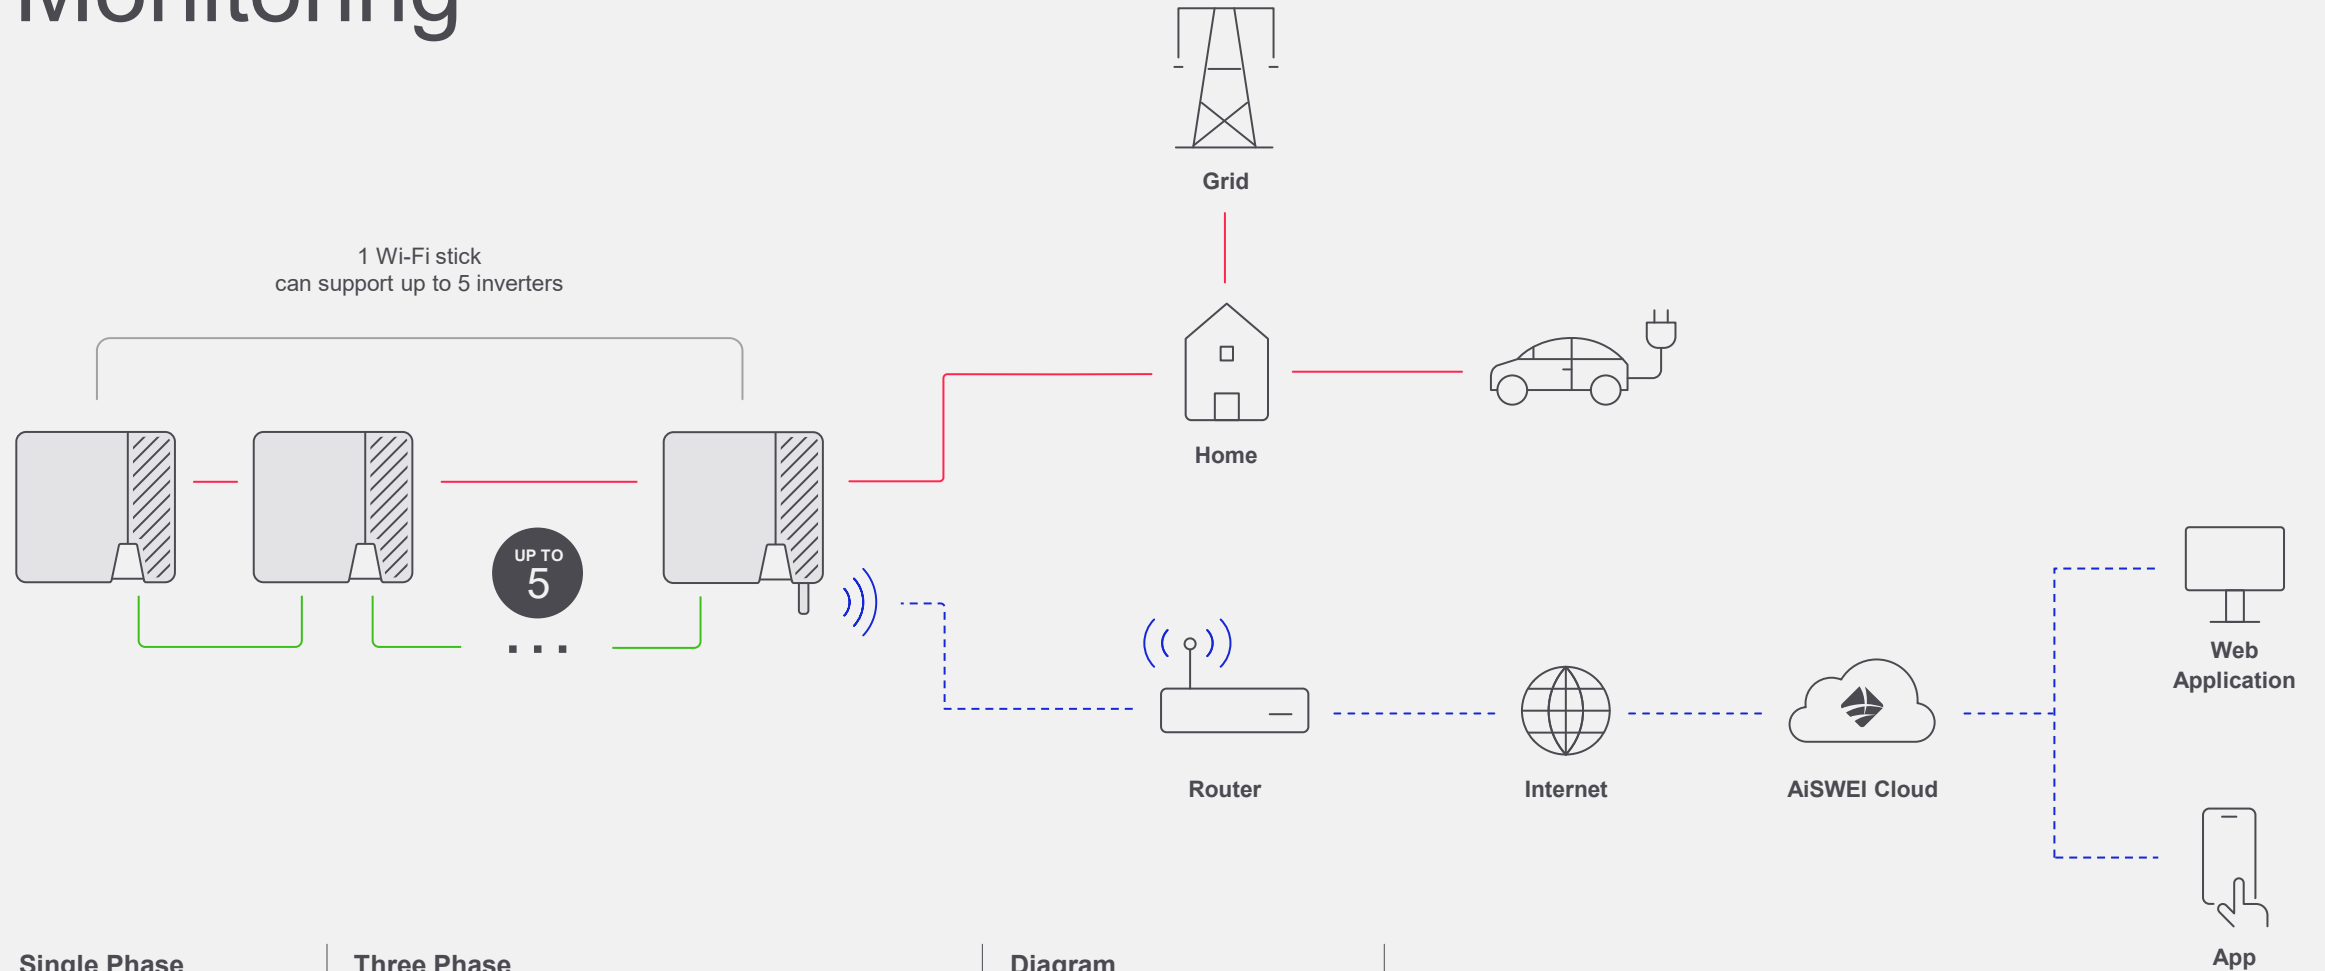


 
 
Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data 
- Energy 
- RS485 

Multiple inverters with Wi-Fi stick for Monitoring

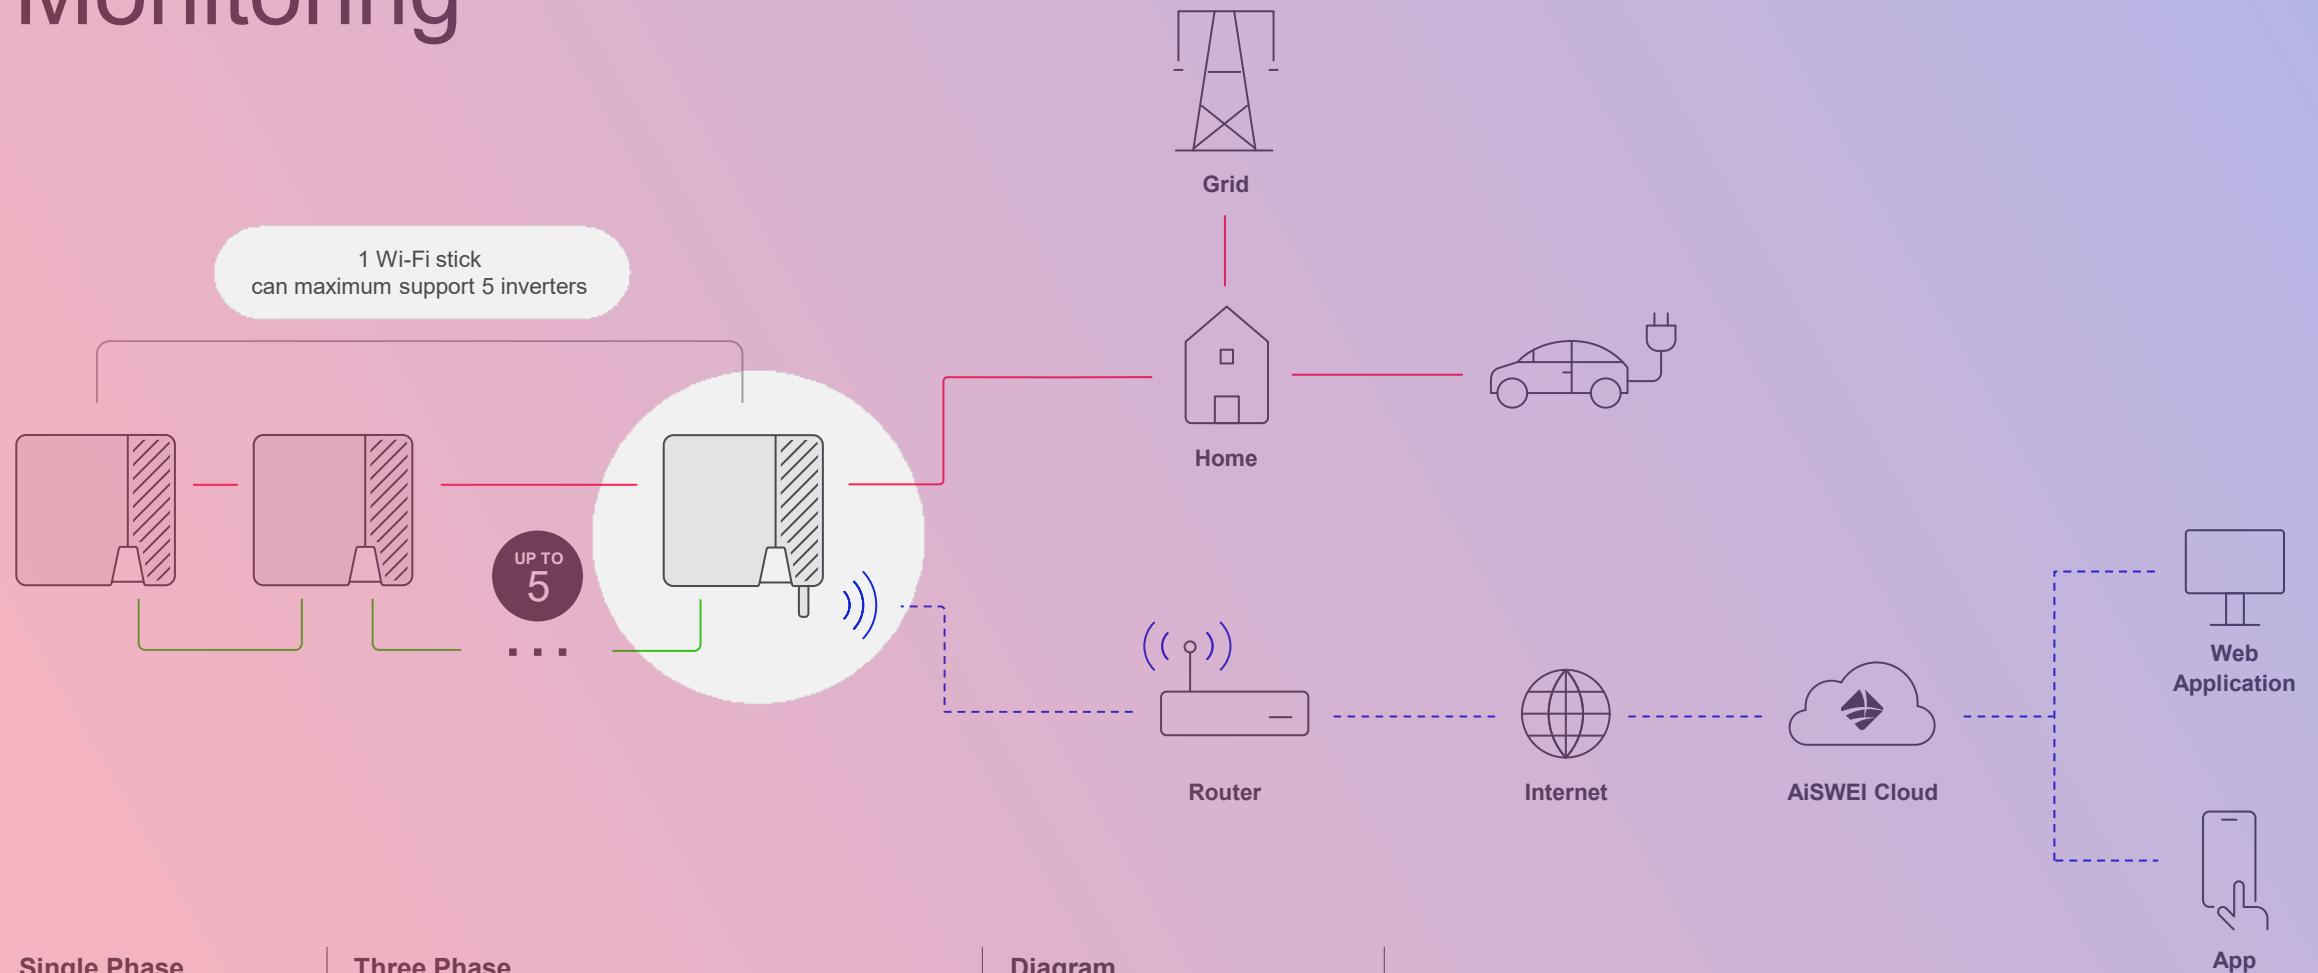

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data 
- Energy 
- RS485 

Multiple inverters with Wi-Fi stick for Monitoring & 0-export

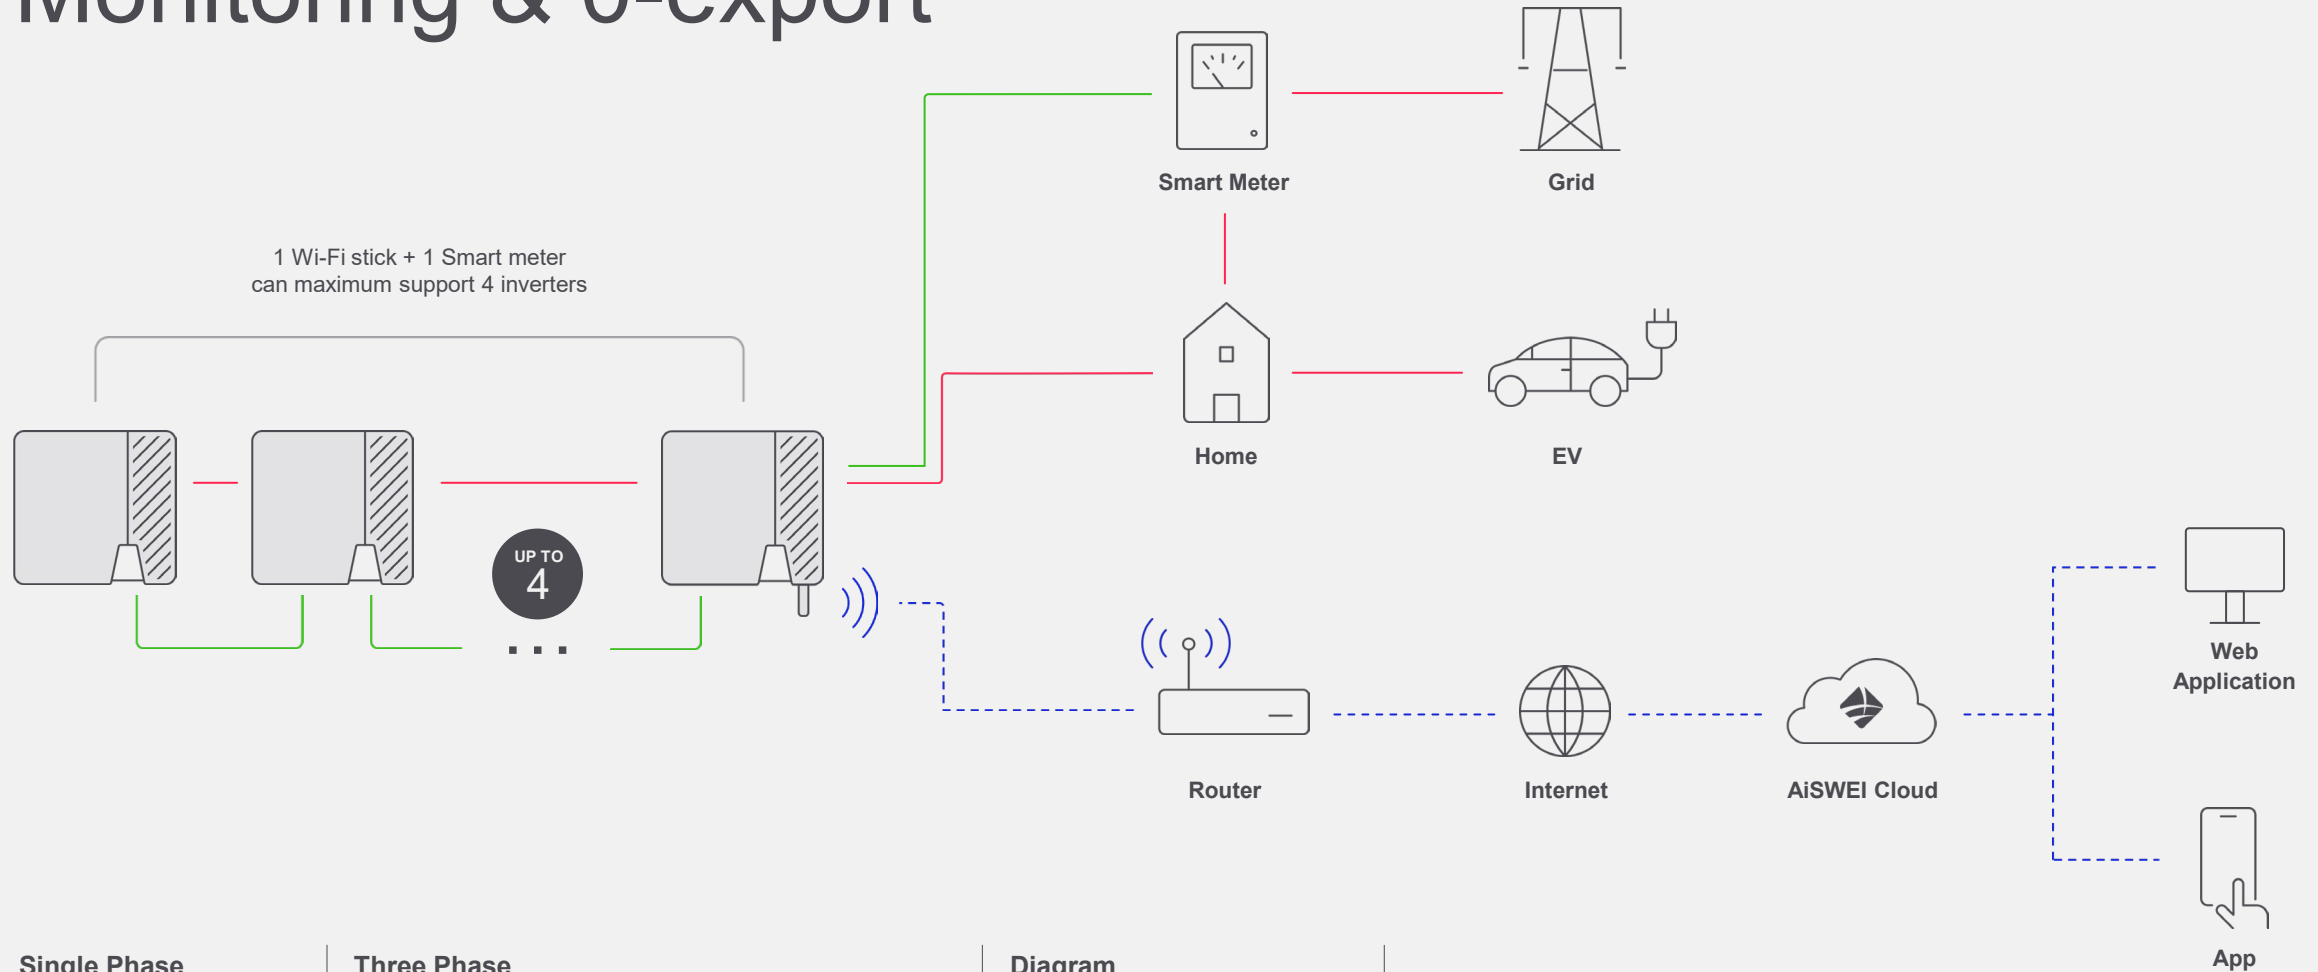

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data: Dashed blue line
- Energy: Solid red line
- RS485: Solid green line

Multiple inverters with Wi-Fi stick for 0-export

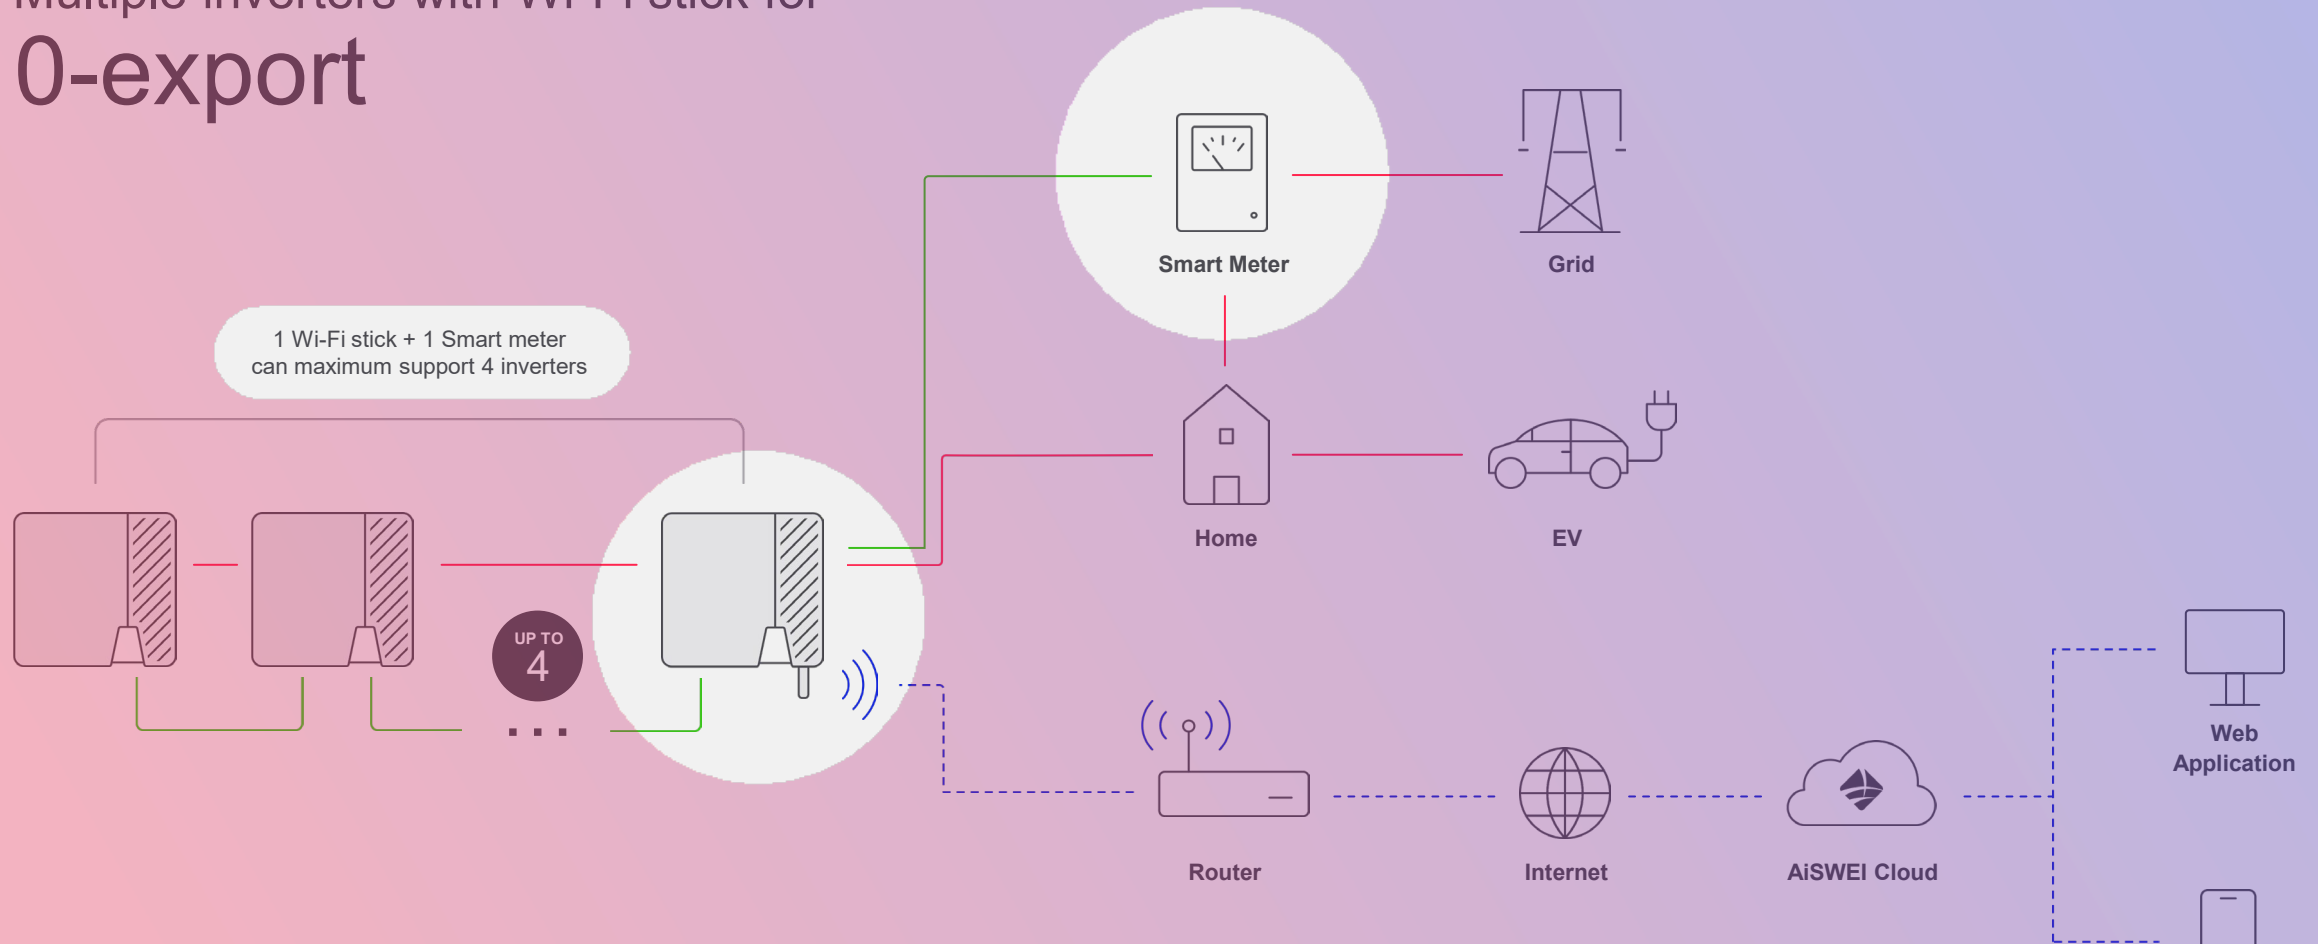

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S

Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data 
- Energy 
- RS485 


Multiple-inverter solutions with Ailogger



Smart management
with Solplanet App



Multiple inverters with Ailogger for Monitoring

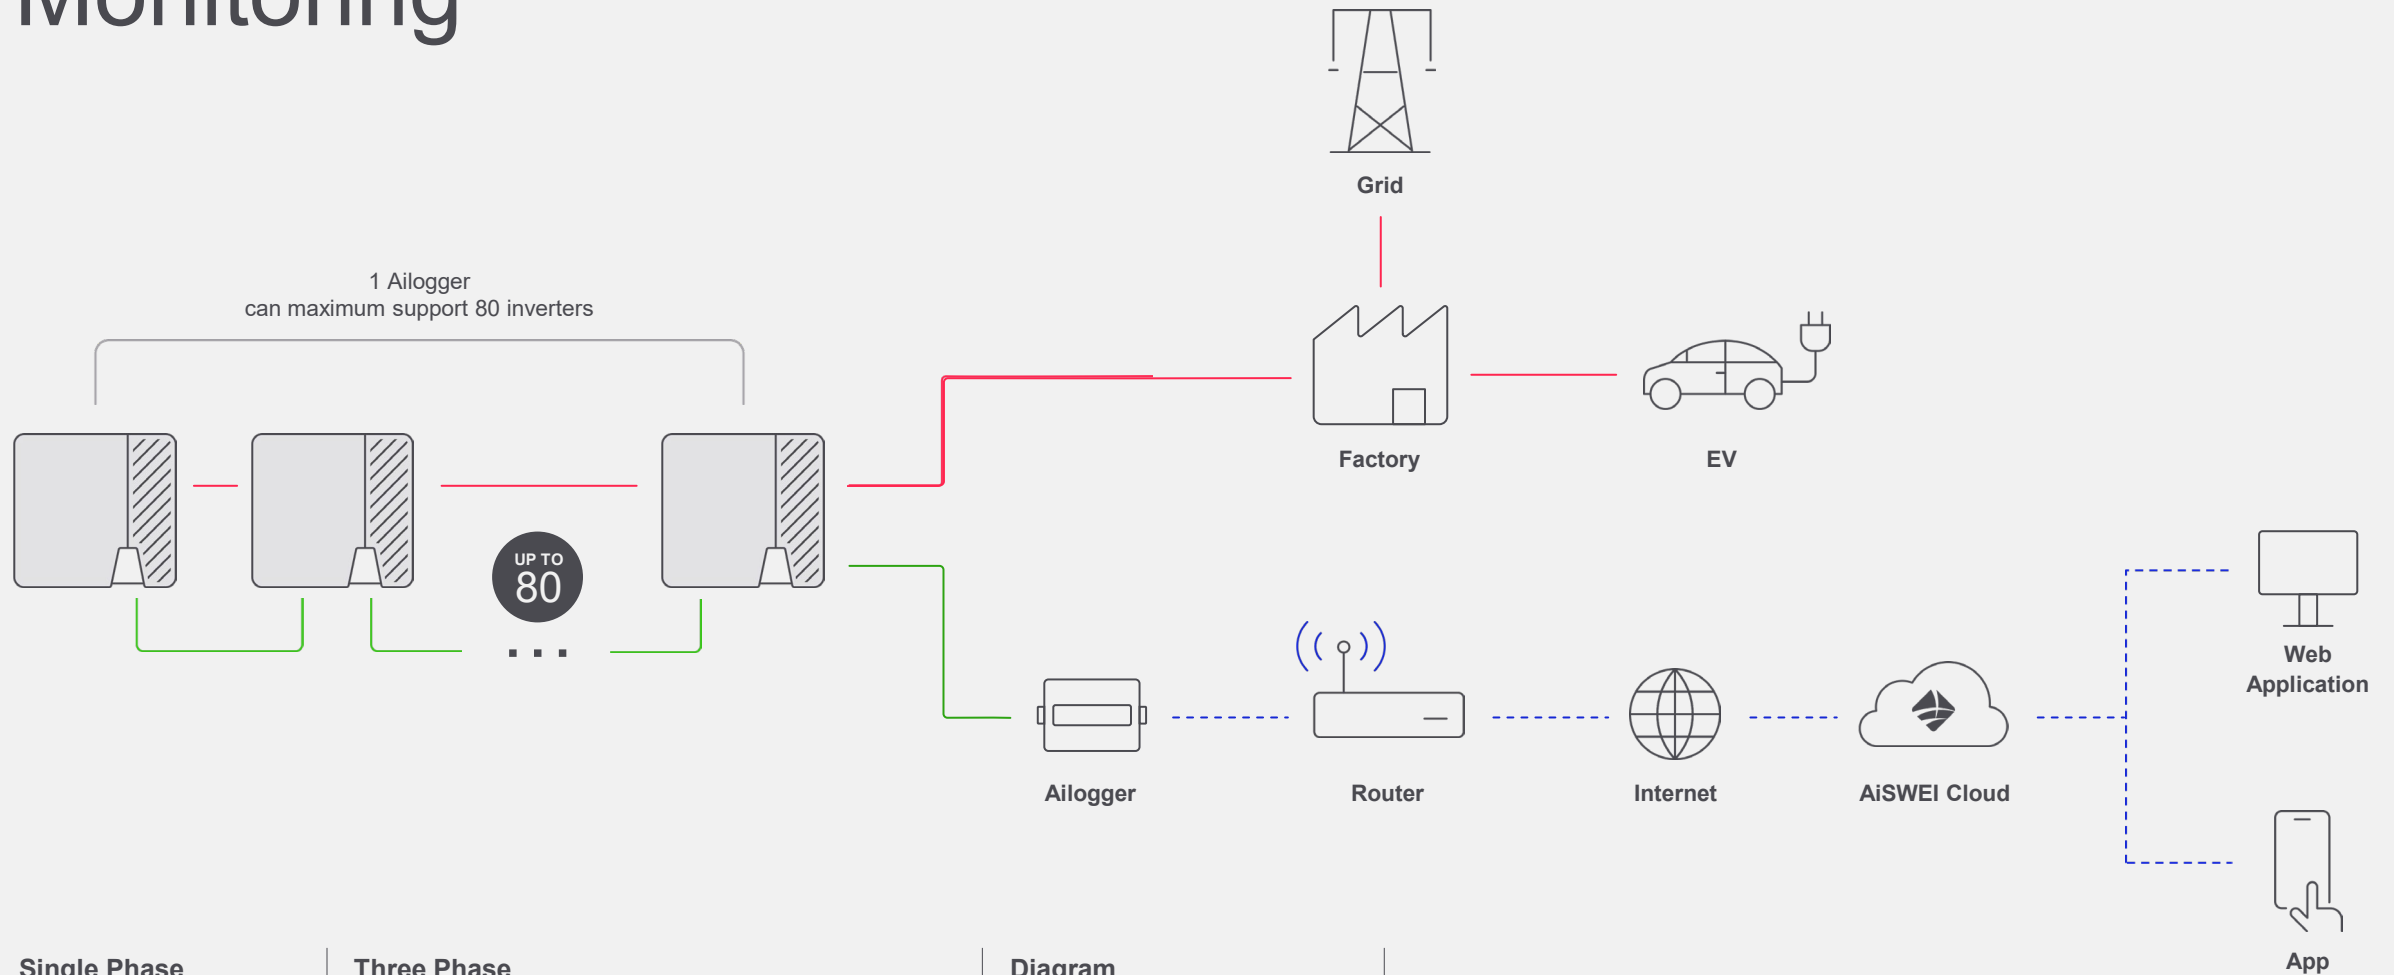

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data -----
- Energy -----
- RS485 -----

Multiple inverters with Ailogger for Monitoring

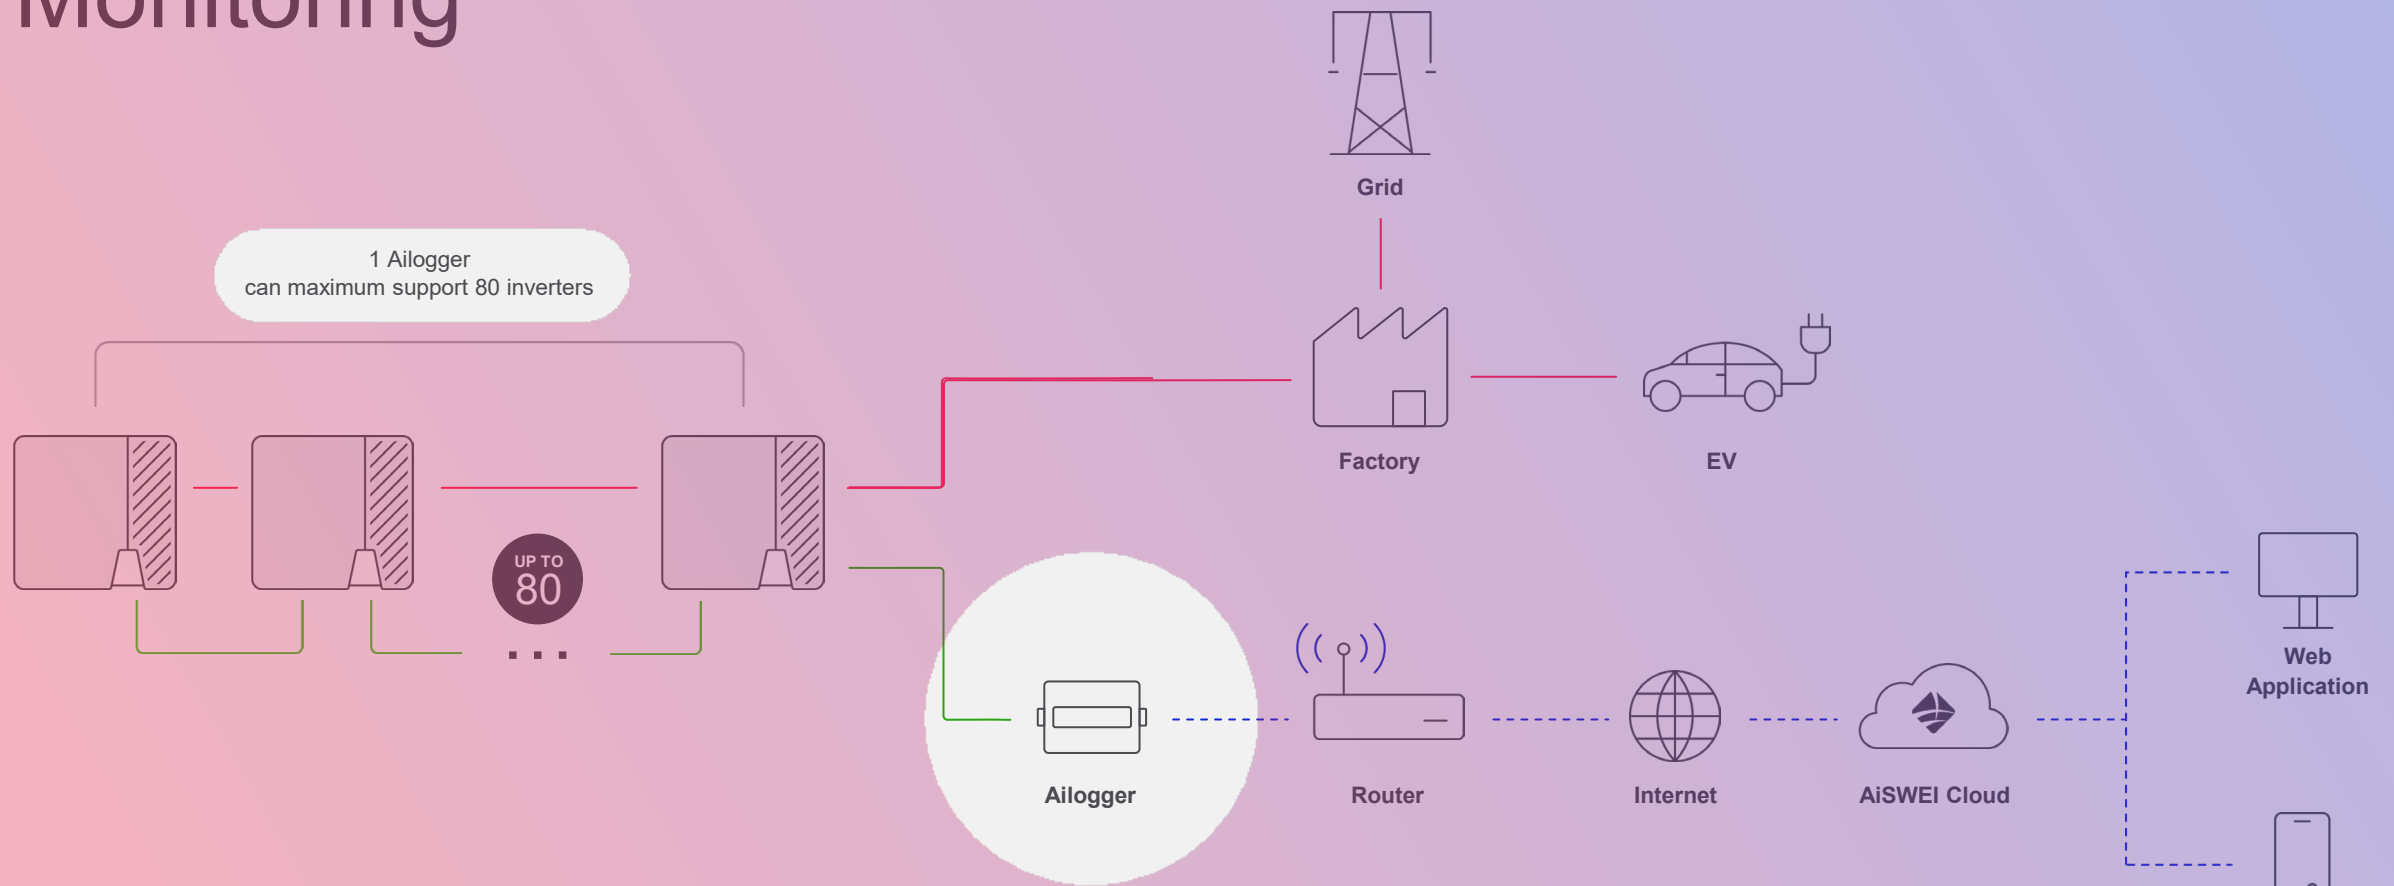

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data 
- Energy 
- RS485 

Multiple inverters with Ailogger for Monitoring & 0-export

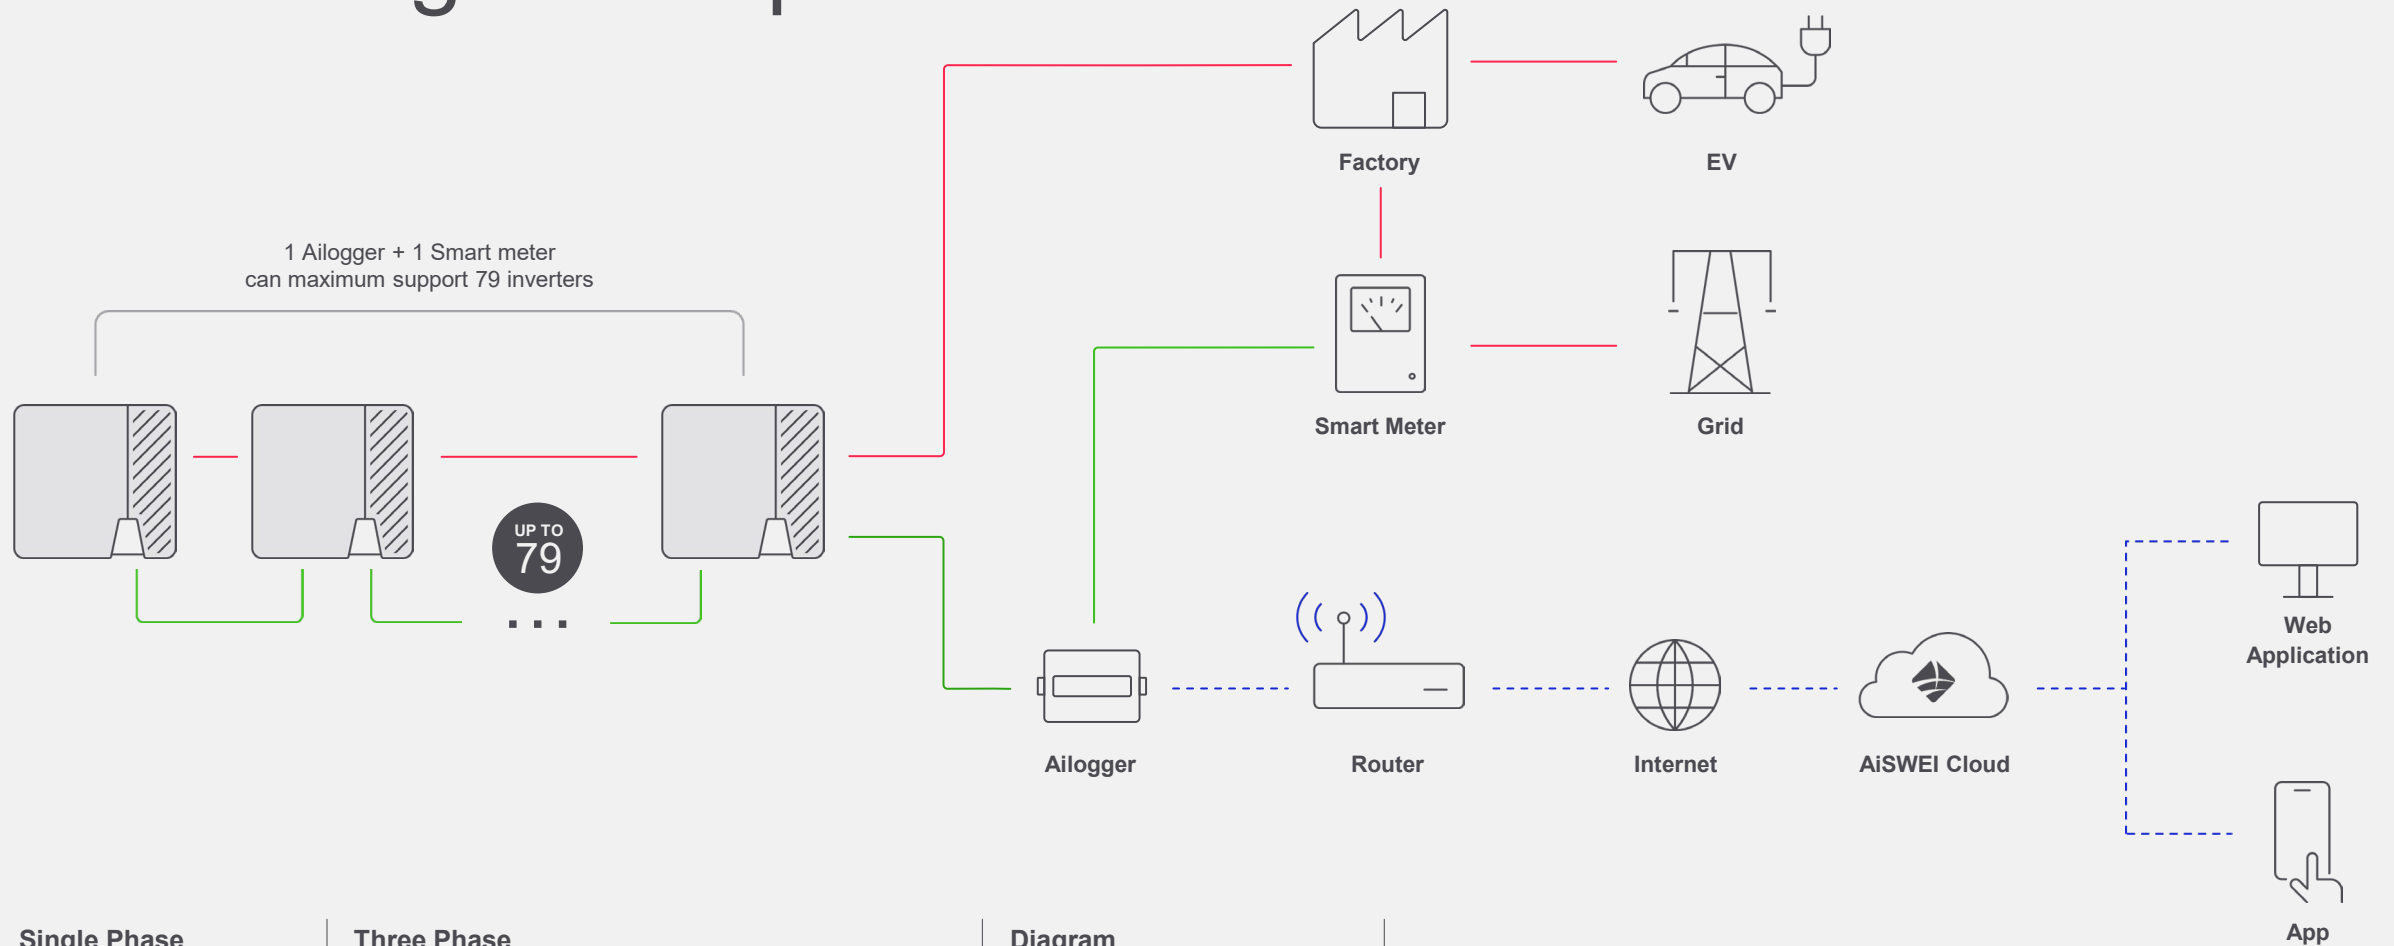

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S


Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data -----
- Energy -----
- RS485 -----

Multiple inverters with Ailogger for 0-export

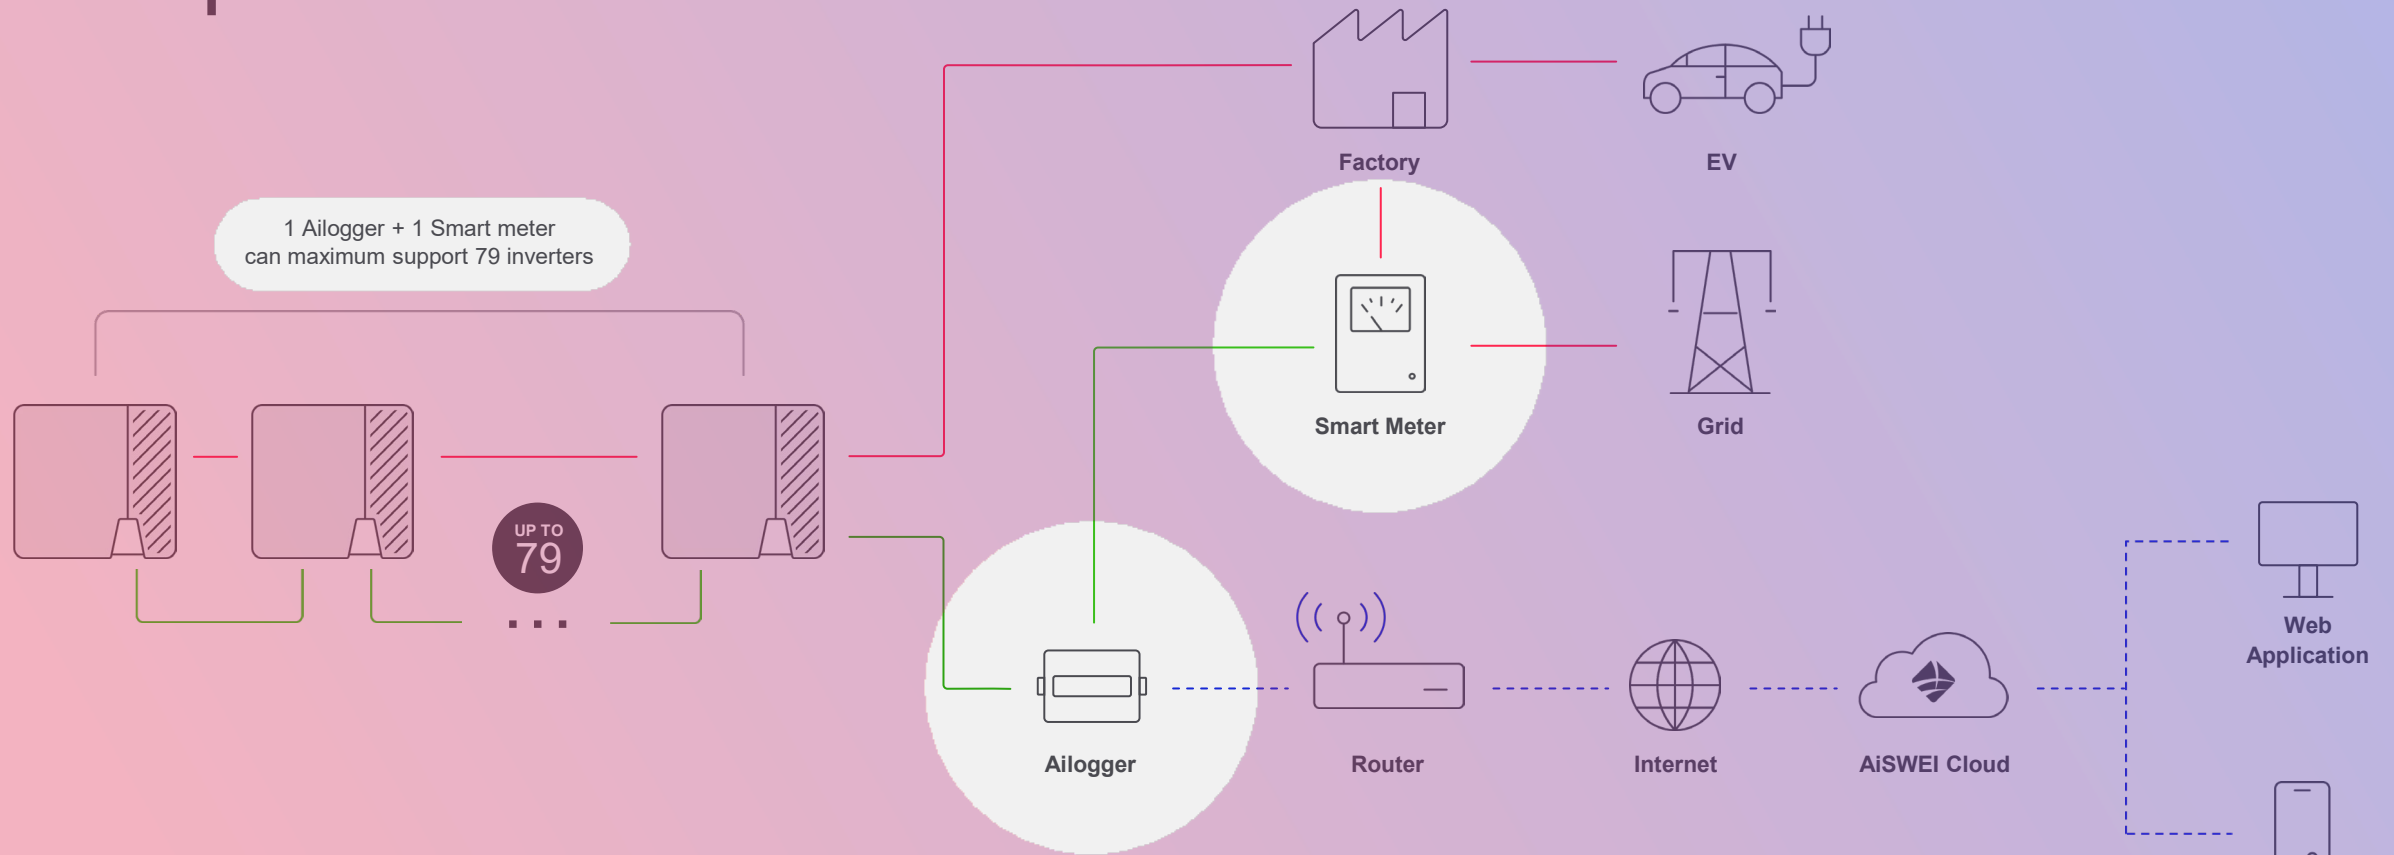

Single Phase

- ASW 1000-3000 S-S
- ASW 3000-5000 S
- ASW 6000-10000 S

Three Phase

- ASW 3000-10000 T
- ASW 8-20K LT-G2
- ASW 8-20K LT-G2 Pro
- ASW 25-40K LT-G2
- ASW 30-50K LT-G2

Diagram

- Data -----
- Energy -----
- RS485 -----

Firmware version

Solplanet inverters with App



Type	Model	Power Class	Firmware	0-export (Multiple)	0-export (Single)	Shadow Management
Single Phase	ASW S	3-5 kW	610-01049-08	✓	✓	✓
	ASW S-S	1-3 kW	610-01051-04	✓	✓	✓
	Sagittarius TBC	3-6 kW	610-01055-02	✓	✓	✓
Three Phase	ASW T	3-6 kW	610-03034-02	✓	✓	✓
	ASW T	8-10 kW	610-03035-01	✓	✓	✓
	ASW LT	15-20 kW	610-03033-04	✓	✓	✗
	ASW LT-G2	8-15 kW	610-03039-08	✓	✓	✓
	ASW LT-G2	17-20 kW	610-03036-08	✓	✓	✓
	ASW LT-G2-Pro	3-20 kW	610-03043-00	✓	✓	✓
	ASW LT-G2	30-50 kW	610-03038-03	✓	✓	✓
	ASW LT-G2-Pro	40-50 kW	610-03043-00	✓	✓	✓
	ASW LT-G3	25-30 kW	610-03042-00	✓	✓	✓
	ASW LT-G3	33-40 kW	610-03041-00	✓	✓	✓
	Hybrid	ASW-H-S2	3-6 kW	610-02003-02	✓	✓

Wifi Stick

Connector Type	Model	0-export multiple & lowest phase	0-export (single)	0-export (multiple)	Export control – lowest consuming phase
4 pin	B30000-00-10P	610-50039-07	✓	✓	✓
	B31000-00-10P	610-50042-06	✓	✓	✓
USB	B32000-00-10P	610-50042-06	✓	✓	✓
	B33000-00-10P	610-50039-07	✓	✓	✓

AISWEI New Energy Technology (Jiangsu) Co., Ltd
No. 198 Xiangyang Road, Suzhou 215011, China
sales@solplanet.net
www.solplanet.net

Solar
for everybody



