

# SAFETY POSTER


## INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

**martor**


### SECUMAX 370




#### USAGE

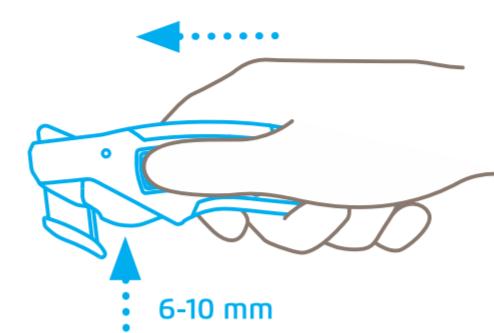


You can **extend** the cutting depth from **6 to 10 mm** by moving the slider.

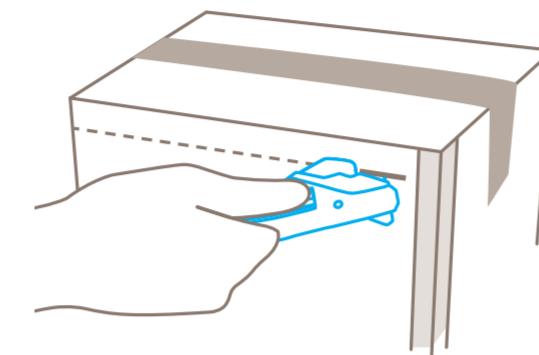

Use the nose of the cutter to **pierce** the cutting material. **Do not lever** against staples, nor force the nose into edge protectors!

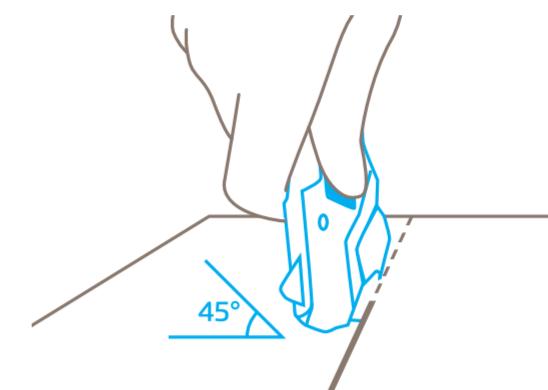


Hold the cutter at a **slight angle** when cutting up to 3-ply thick cardboard boxes.

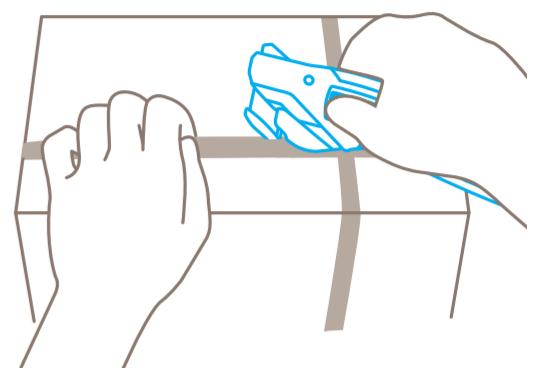


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


#### BLADE CHANGE

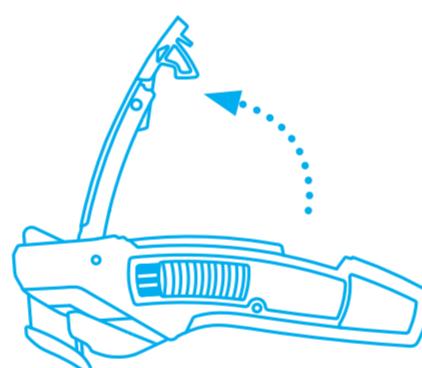


**Fully open** out the blade lock from the handle using the blade change button and **hold**.

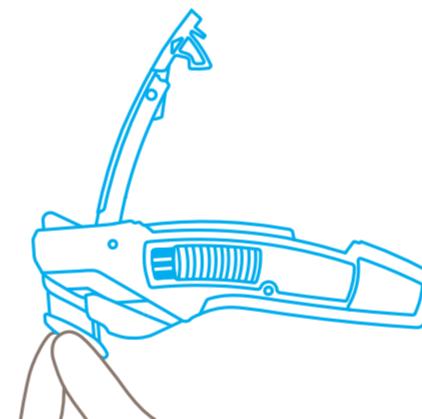

**Pull** the blade head out and **replace**.

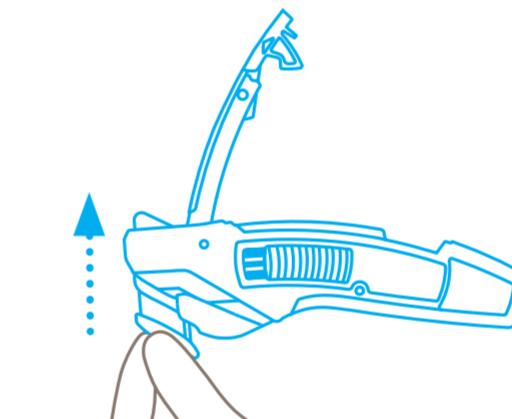


Do this by holding the blade head at right angles to the lower handle area. Then **press** the blade head into the slot **as far as it will go**.

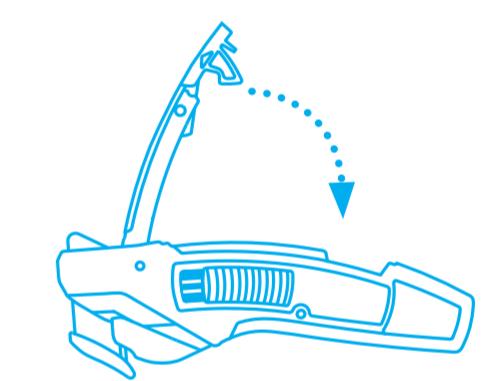


**Fold** the blade lock back into the handle letting the blade change button **audibly** snap into place.

#### PROTECTION OF USER

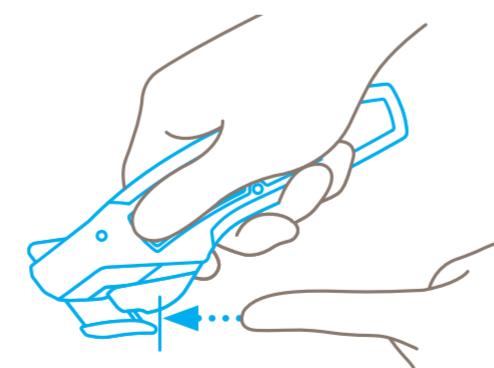


**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.

#### PROTECTION OF GOODS

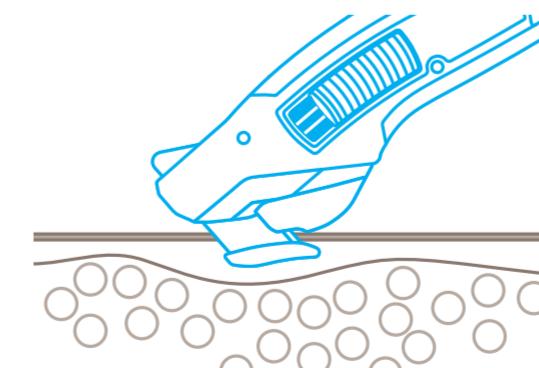


The concealed blade provides a maximum degree of **protection from cut injuries**.

#### DISPOSAL

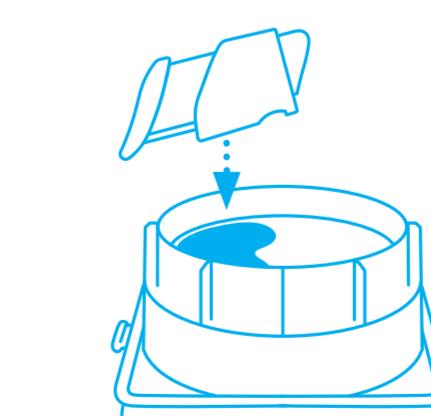

The concealed blade **will not get into contact with your goods** either.

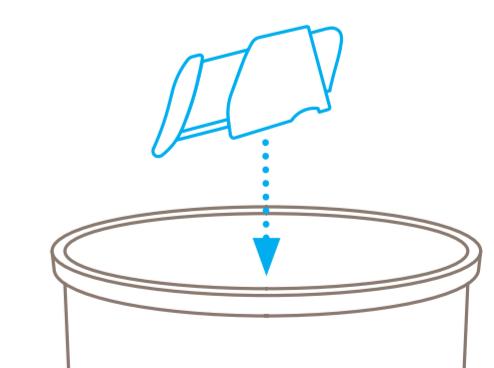

Dispose of the **used blade head** in either your **USED BLADE CONTAINER**...  
...or directly via your **general waste**.