



# LEE Filters

## SW150 Lens Adaptor Assembly Instructions CANON 17MM TS-E LENS ADAPTOR

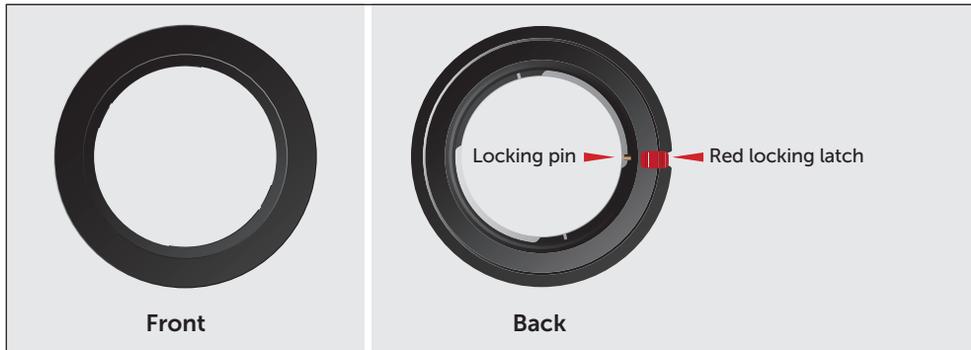


### Stage 1

As this lens does not have a standard filter thread, the lens adaptor has to attach via a bayonet fitting at the end of the lens.

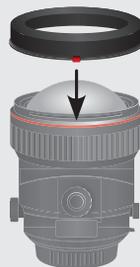

## Stage 2


Place the lens adaptor over the end of the lens, making sure the red locking latch is facing the rear of the lens. Slide and hold the red locking latch outwards, to release the locking pin.

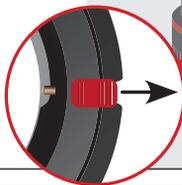

## Stage 3

Whilst holding the red locking latch in an outward position, twist the lens adaptor (clockwise) until it fits on to the bayonet fitting. Once in position, release the red locking latch. The lens adaptor is now secured on the lens and ready to use with the SW150 Filter Holder.

To remove from the lens, slide and hold the red locking latch outwards. Then twist the lens adaptor (anticlockwise) until it becomes detached from the bayonet fitting.

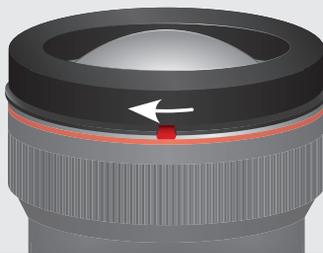

**LEE** Filters

[www.leefilters.com](http://www.leefilters.com)