


BELMONDO® Rodeo



Prerequisites:


Mats:

Even temperature: min. 5°C to max. 30°C
(store accordingly!)

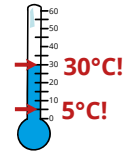


You will need:


Measuring:

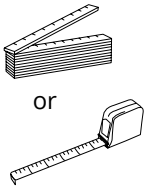


Marking:

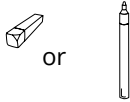

Cutting:

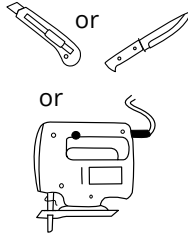

Drilling and installing:

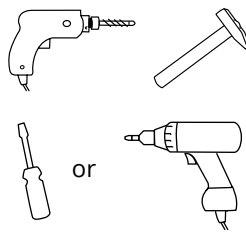

Fixings:


- Spax screws \varnothing 5 x 30 mm
- Countersunk screws (+ plug) that fit the wall
- Curved washers
(curved washers can be obtained from KRAIBURG)

Additionally:

Wooden boards 24 - 30 mm / 120 mm





Fixing example:

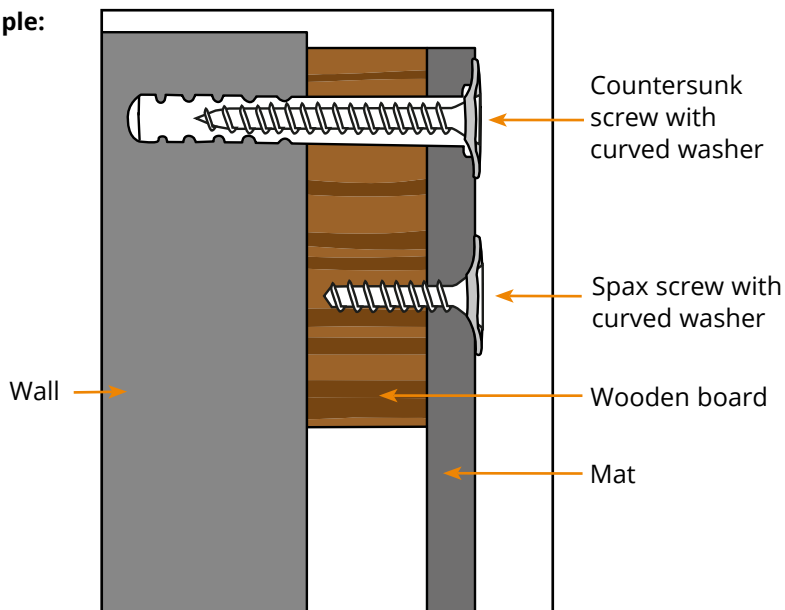

i In case of a wooden wall, the mat can be screwed onto the wall directly.

1 Cut wooden board and mat to fit

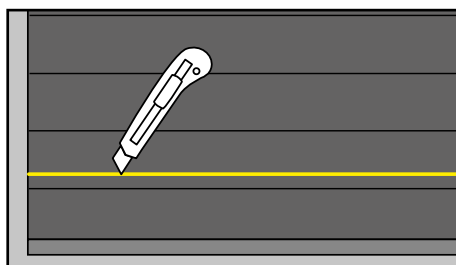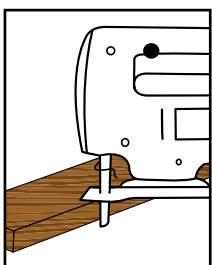


Cut the wooden board and the mat to the ideal length



Tips for cutting mats:

- Moisten the blade slightly
- Bend the mats / pull them apart slightly
- Possibly lay a board underneath - score - cut

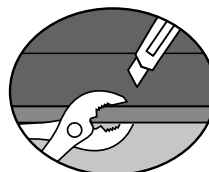


Tip: Use pliers to pull small pieces apart


② Fix mat onto wooden board

> Spax screws + curved washers

Fix in every second "rubber-wooden plank"

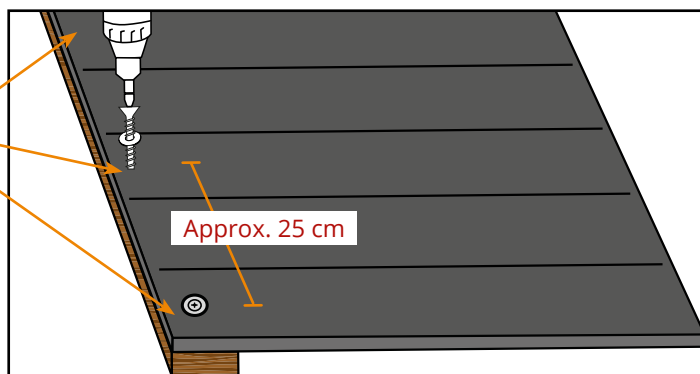

Fix the mat, lying on the floor, onto the wooden board (tensionless installation)

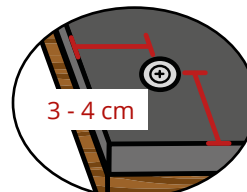

Distance to the edge:
3 - 4 cm


③ Fix mat and wooden board onto the wall

> Countersunk screws and plugs for the respective wall + curved washers




Tip:


Plug and fix a second wooden slat as a support onto the wall.

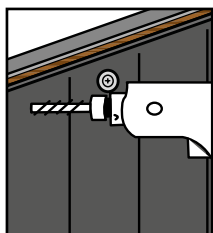



Drill

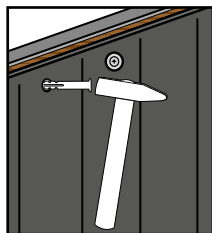

Knock the plugs in flush

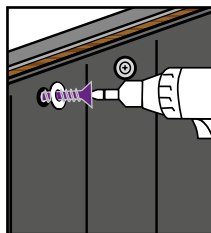


Tighten the screws and washers

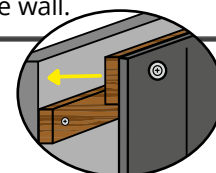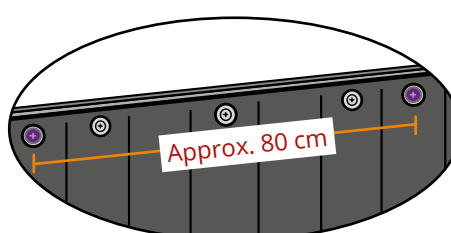

④ Final fixing

At the top:

> Spax screws + curved washers

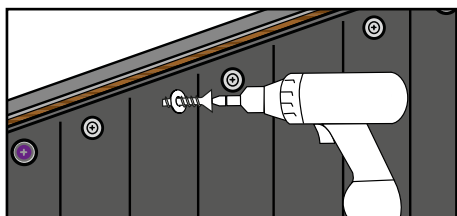

Tighten the additional spax screws in every "rubber-wooden plank"



If requested, the upper edge can also be covered with an **angular rail**.

Note: Countersink the screws!




We recommend not fixing the lower edge.

At the side edge:

> Fix the mat onto the wooden board: **Spax screws + curved washers**

> Fix onto the wall: **Countersunk screws and plugs + curved washers**

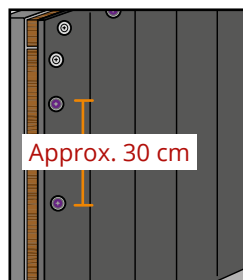

Lay a wooden board underneath and fix it in place



Alternately, the mats can also be fixed onto the wall directly.



Appropriate installation may differ due to local conditions. Therefore, the manufacturer shall not be liable for installation!