

# Highchair Assembly Instructions

## Juno Bambino



### CONTENTS

| QTY | DESCRIPTION                  | COMPONENT REF: |
|-----|------------------------------|----------------|
| 2   | Welded Tube sides            | Side           |
| 1   | Back Board                   | Back           |
| 1   | Seat Board                   | Seat           |
| 1   | Longest Length Rail          | R1             |
| 1   | Medium Length Rail           | R2             |
| 1   | Smallest Length Rail/Barrier | R3             |
| 6   | 30mm M6 Screws for Frame     | Frame Screw    |

| QTY | DESCRIPTION             | COMPONENT REF: |
|-----|-------------------------|----------------|
| 4   | 35mm M6 Screws for Seat | Seat Screw     |
| 2   | 35mm M6 Screws for Back | Back Screw     |
| 4   | M6 Washers              | Washer         |
| 4   | Stacking Bungs          | Stacking Bung  |
| 1   | Seat Strap              | Seat Strap     |
| 1   | Allen Key               | Allen Key      |


#### STEP 1

Place one of the sides vertically on the floor with the back panel slot facing away from you.




#### STEP 2

Use two of the four supplied seat screws and place one washer and stacking bung on each of them. Proceed to loosely secure the seat board to the side using these screws.

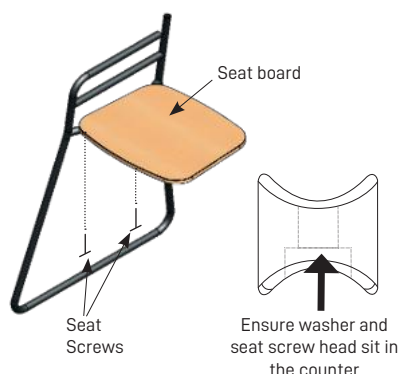


#### STEP 3

Loosely attach the three rails to the side using the supplied screws. The sticker on the rails should be positioned to the bottom of the Highchair. Note: top rail must slide through seat strap loop.

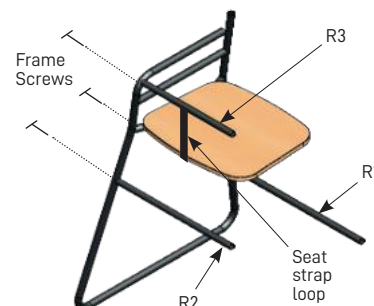


#### STEP 4

Lay the highchair on its side and repeat step 3 to loosely attach other side to frame. Repeat step 2 to loosely attach the remaining 2 seat screws.

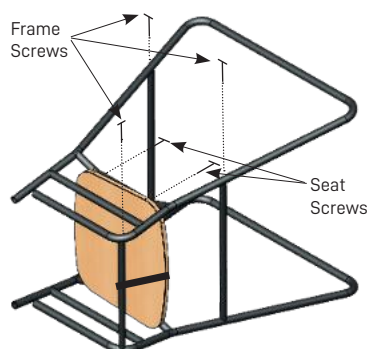

#### STEP 5

Place the back panel into the slot between the bars and attach with supplied back screws.

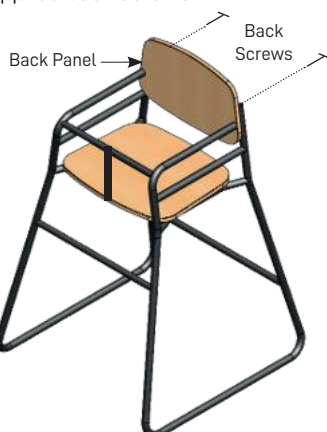

#### STEP 6

Tighten all screws to secure the frame. **Note: Do not over tighten stacking bungs.**

