
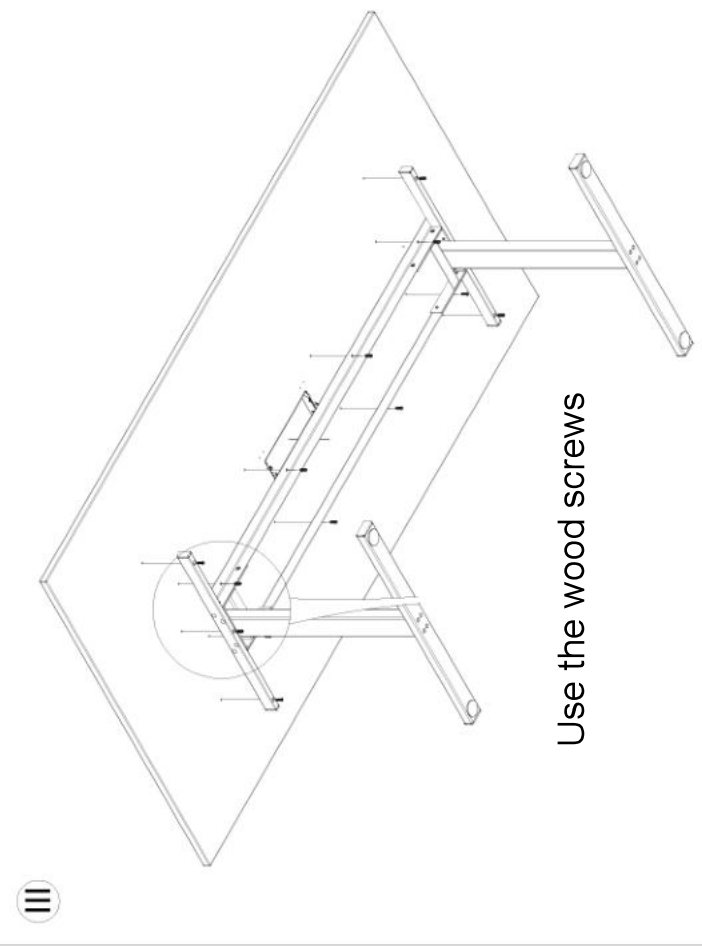
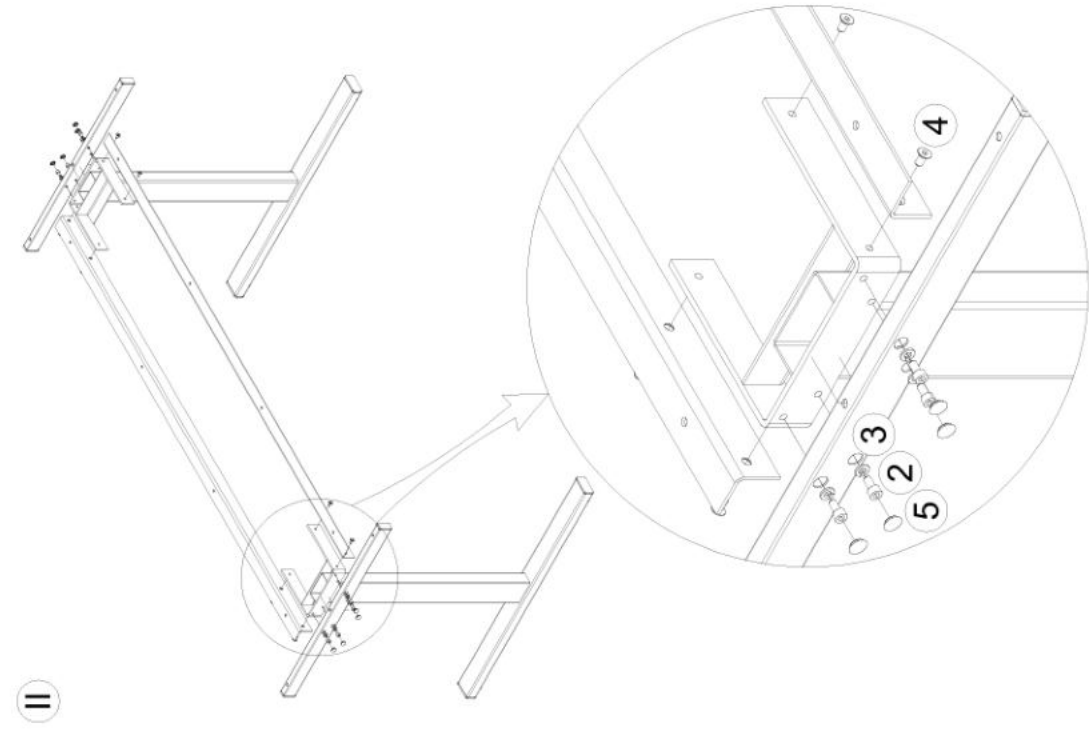


Requiring tools:

DIN911

- x8  1
- x8  2
- x16  3
- x8  4
- x8  5

ATTENTION! It comes with a bag of wood screws

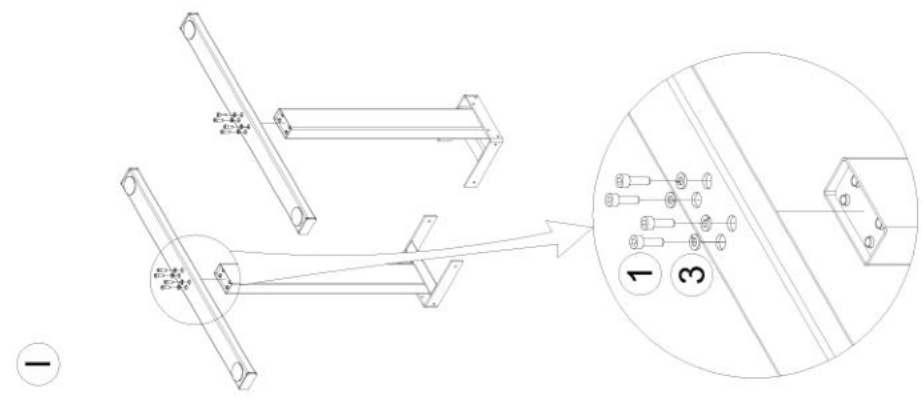

Use the wood screws