



# AirGap Extend c600/c1200

Luftspaltsskiva Luftespalteplate Airgap Board

1.

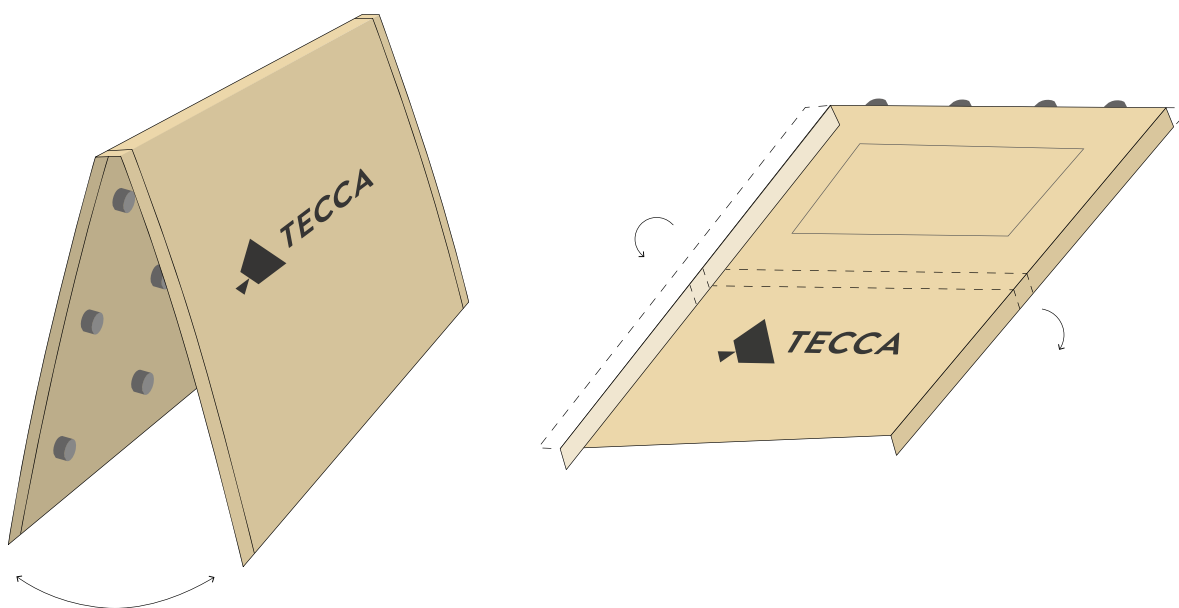

2.

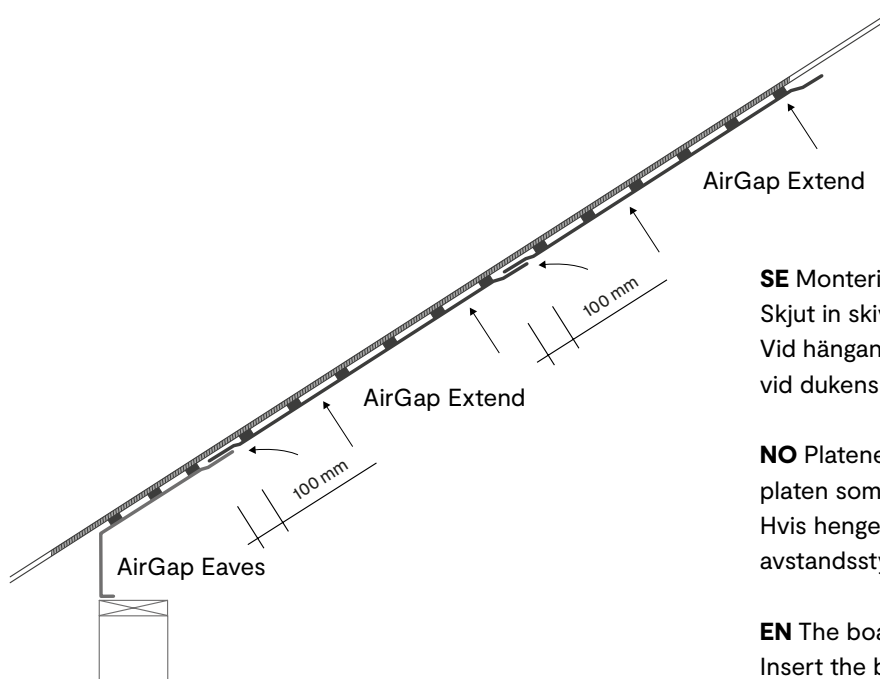


**SE** Montering av skivorna sker nedifrån och upp. Skjut in skivan enligt bild!  
Vid hängande underlagsduk avsluta distanserna vid dukens lägsta punkt.

**NO** Platene monteres nedefra og opp. Skyv inn platen som vist på bildet.  
Hvis hengende underlagsduk brukes, avslutt avstandsstykkene ved dukens laveste punkt.

**EN** The boards are mounted from the bottom up. Insert the board as shown!  
In the case of a hanging underlayment, finish the spacing at the lowest point of the underlayment.

3.

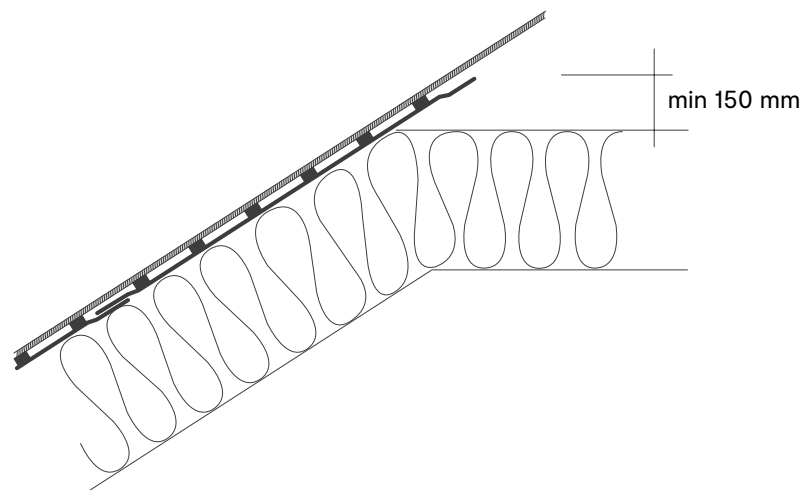


4.

**SE** Infästning (A): Korrosionsskyddad Rapid 140/10 (eller motsvarande) alternativt galvaniserad pappspik 25 x 2,5 mm.  
Skarvtejpning (B): Tätningstejp T-Flex.  
Fixering (C): För c1200 avsluta med skruvad tråkloss. (**OBS!** Skruven får ej gå igenom takunderlaget!) Klamra skivan mot klossen.

**NO** Festing (A): Korrosjonsbeskyttet Rapid 140/10 (eller tilsvarende) eller galvanisert pappspiker på 25 x 2,5 mm.  
Skjøteteip (B): Tetningsteip T-Flex.  
Fiksering (C): For c1200 avslutter du med en skrudd trekloss. (**OBS!** Skruen må ikke gå gjennom takunderlaget!) Klem fast platen mot klossen.

**EN** Mounting (A): Corrosion-resistant Rapid 140/10 (or equivalent) or 25 x 2.5 mm galvanised roofing nails.  
Splice taping (B): T-Flex sealing tape.  
Fixation (C): For c1200, finish with screwed wooden blocks.  
(**Note:** The screw must not penetrate the roof underlayment!) Tighten the board against the block.

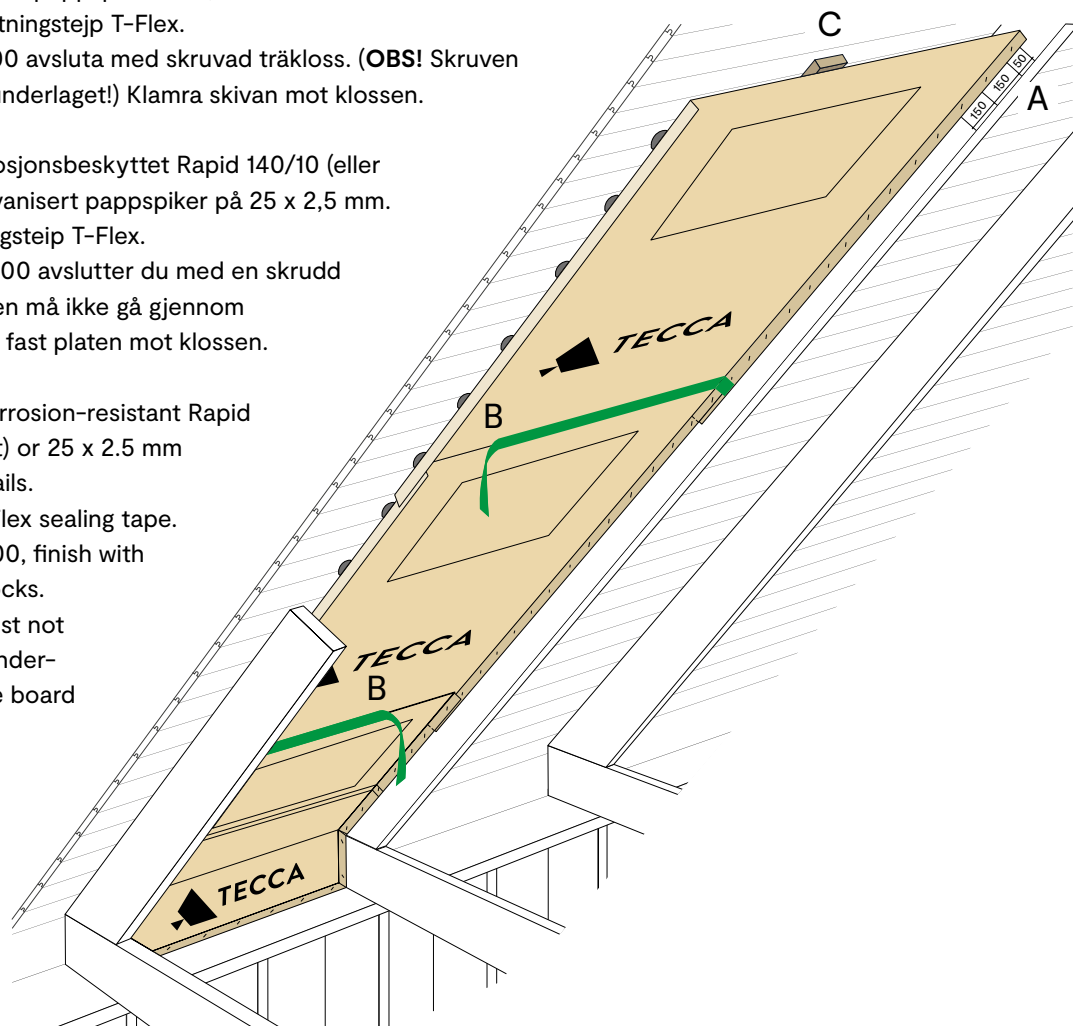

15/12/2022