



INSTALLATION INSTRUCTIONS

Accessory

TRUNK INNER LAMP
P/N 08U74-MKC-A00

Application

GL1800/B/BD/D/DA

Publication No.


MII

Issue Date

September 2017

Honda Dealer: Please give a copy of these instructions to your customer.


PARTS LIST

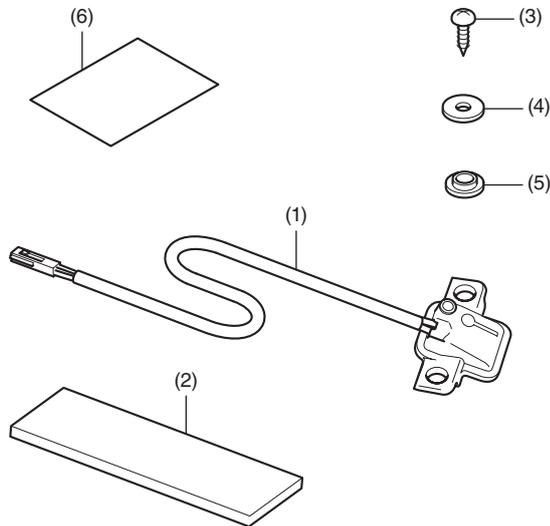

No.	Description	Qty
(1)	Trunk inner lamp	1
(2)	Cushion	1
(3)	5 mm screw	2
(4)	Washer	2
(5)	Collar	2
(6)	Installation Instructions URL	1

TRUNK SUB HARNESS

Sold separately

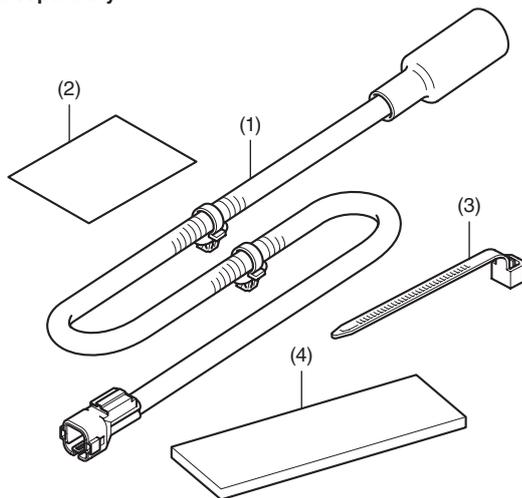

For the installation, refer to the Installation Instructions of accessory.

No.	Description	Qty
(1)	Trunk sub harness	1
(2)	Installation Instructions URL	1
(3)	Wire tie	1
(4)	Cushion	2

TOOLS AND SUPPLIES REQUIRED

- Phillips ® screwdriver
- Nippers
- Scale
- File
- Scissors
- Isopropyl alcohol
- Shop towel
- Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm screw	4.2	0.5	3.8

INSTALLATION


▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memories of the clock will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.

1. Perform the step 1 to 18 on the trunk sub harness (sold separately) installation instructions.
2. Cut out the  parts of inner trunk lid as shown.
 - **After cutting, remove any burrs.**

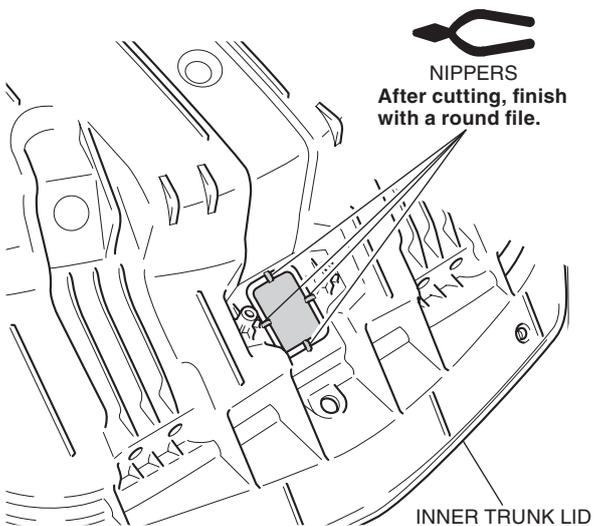


3. Install the trunk inner lamp as shown.

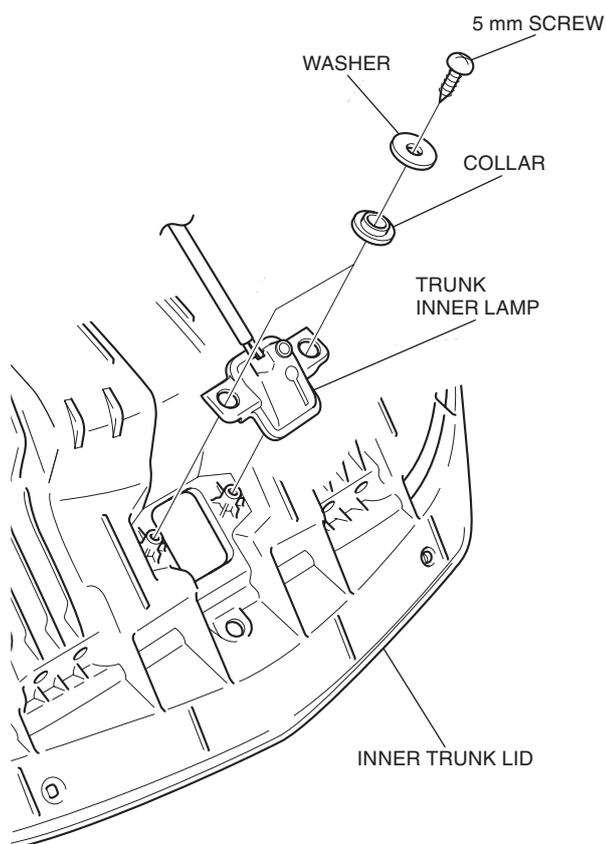


4. Perform the step 19 to 22 on the trunk sub harness (sold separately) installation instructions.


5. Clean the surface of the area shown using an isopropyl alcohol.

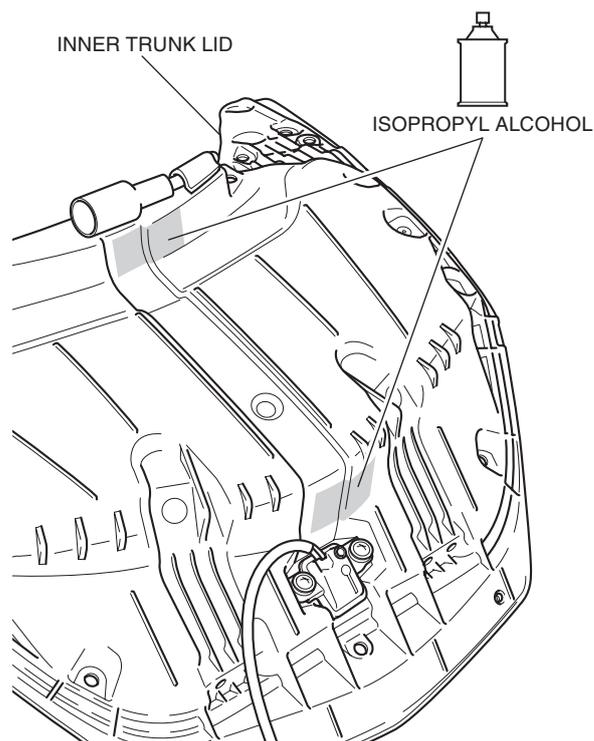


6. Connect the trunk inner lamp harness as shown.

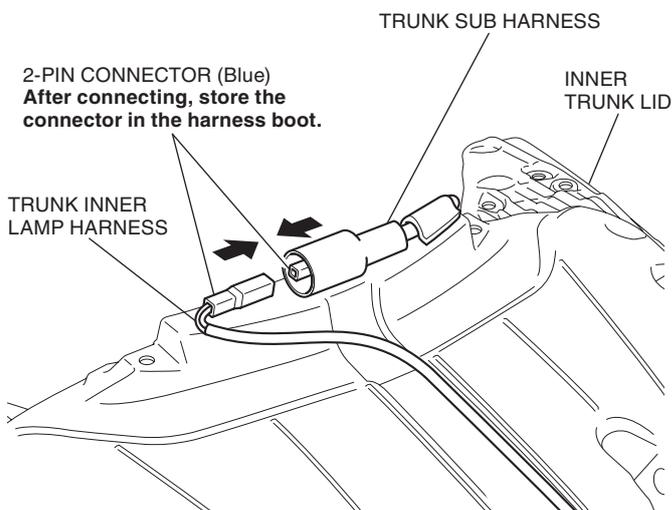


7. Cut the cushion to the dimensions shown.

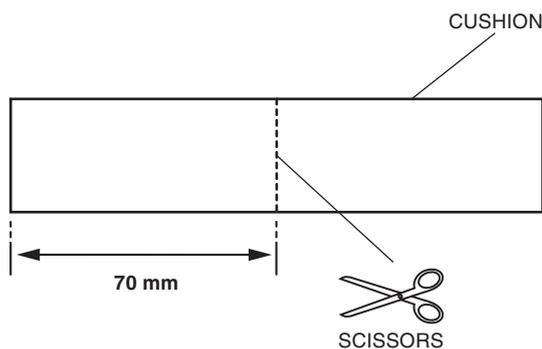


8. Attach the cut cushions as shown.

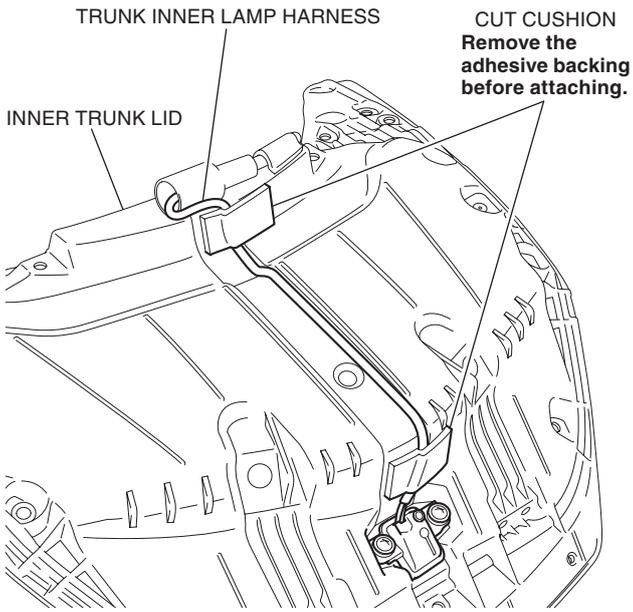


9. Install the inner trunk lid to the trunk lid as shown.

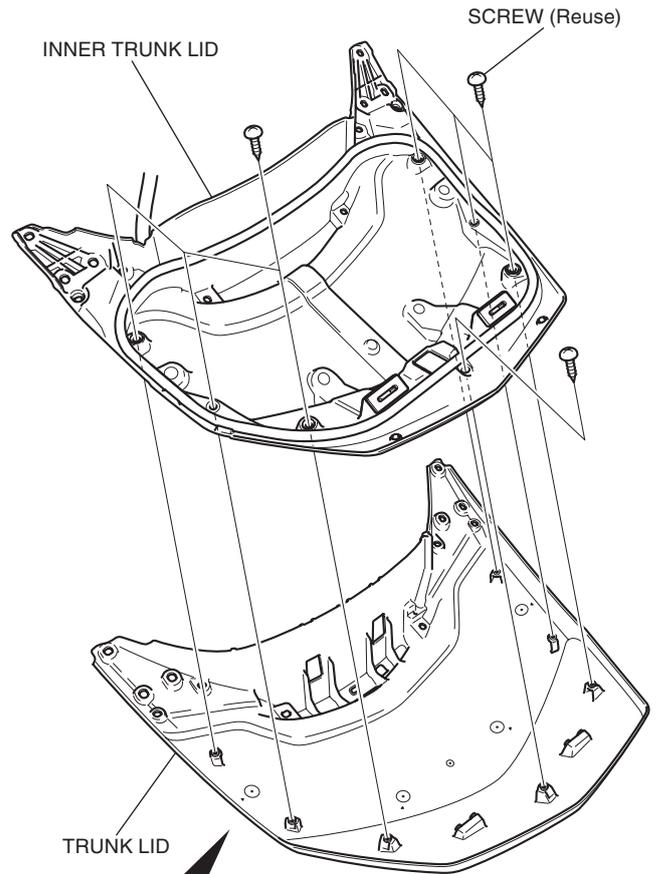

Install the trunk lid with care not to damage the  part.

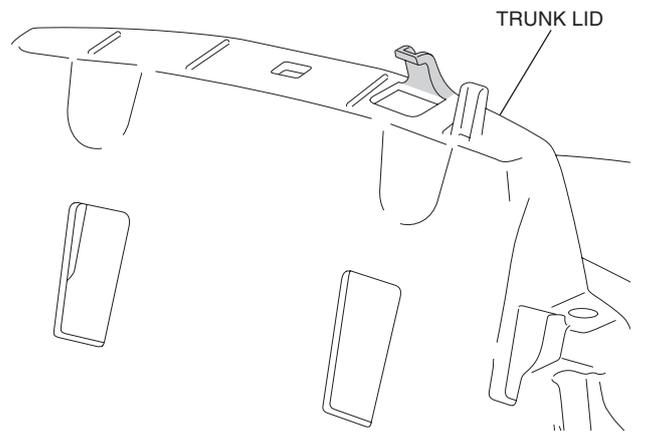

10. Install the striker rods as shown.

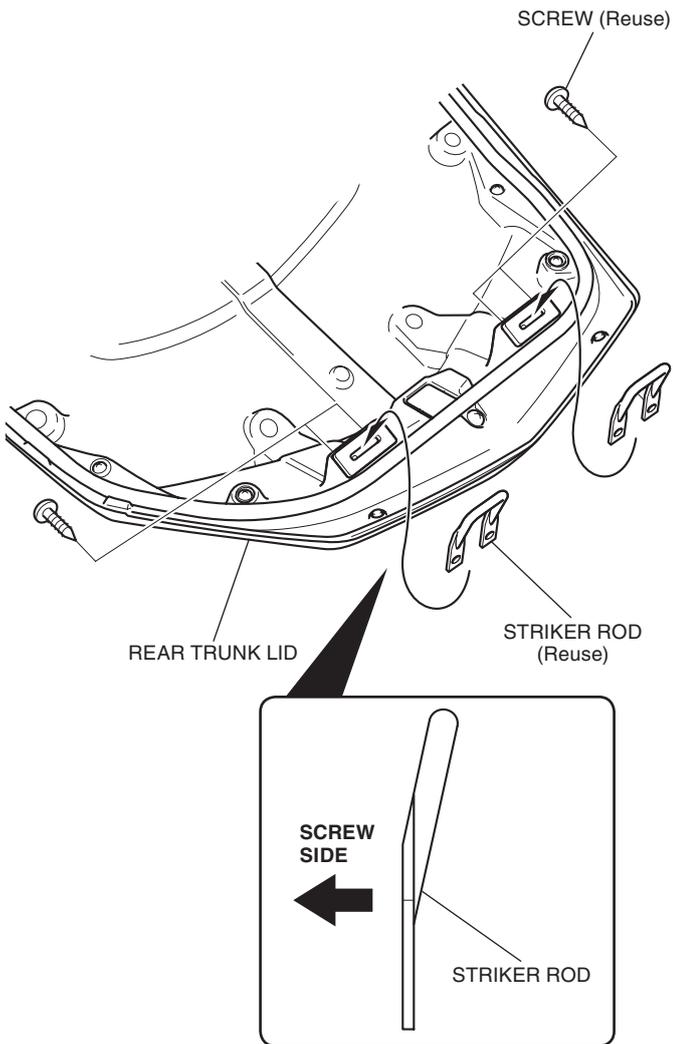

11. Perform the step 23 to 29 on the trunk sub harness (sold separately) installation instructions.