



CHROME SADDLEBAG FILLER PANELS 1192

FITS: '95-UP DRESSERS, ROAD KINGS, ROAD GLIDES WITH H-D DETACHABLE DOCKING HARDWARE KIT 53803-06 NOT COMPATIBLE WITH SADDLEBAG RAILS

PARTS INCLUDED

- 1 Lower Right Panel
- 1 Lower Left Panel
- 1 Right Plug
- 1 Left Plug
- 8 #10 x 3/8 Phillips Pan Head Self Tapping Screw (PPHSTS)
- 1 Installation Instructions

Not all of the included parts will be used during this installation. Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

#2 Phillips screwdriver, soapy water and a clean rag

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the exhaust to cool.

WARNING! YOU WILL BE WORKING AROUND THE EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the left and right saddlebags; set them on a soft sturdy surface. Refer to you specific model owner's manual for more information.

STEP 3 Remove any grease or debris from the installation area on the rear fender with soapy water and a clean rag; allow the area to dry completely.

1192-11HD-0807 -cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

ATTENTION! Due to manufacturing and assembly variances, some adjustments may be necessary after the initial installation to achieve proper fit and/or function. Küryakyn recommends "mocking up" components secured with non-removable fastening devices, such as double-sided tape or silicone, before full installation.

STEP 4 Locate the Lower Right Panel. See [PIC.1](#).

NOTE The Right and Left Plugs have been included for models equipped without radio and/or CB antennas. Secure the plugs to the Lower Panels with the included #10 x 3/8 PPHSTS. Do not over tighten the screws.

STEP 5 Before removing the adhesive backing, position the Lower Right Panel against the right rear fender strut. Maintain contact with the fender strut and slide the Lower Right Panel down until its bottom edge is approximately 1/4" above the bottom of the fender. See [PIC.2](#).

STEP 6 Ensure that the locating tabs on the Lower Panel rest gently on the fender strut. See [PIC.3](#).

STEP 7 Remove the adhesive backing from the locating tabs and reposition the Lower Right Panel in the same manner as in STEP 5 and STEP 6. Press the locating tabs onto the fender and hold for at least one minute for the best adhesion.

STEP 8 Repeat STEP 4 through STEP 7 for the left side.

STEP 9 Re-install any antenna(s), if equipped.

NOTE The Antenna Spacers have been included with the hardware kit for use when clearance issues exist.

- A.** Remove the two Torx screws securing the antenna mounting bracket to the fender strut.
- B.** Place an Antenna Spacer over the Torx screws as shown in [PIC.4](#) and re-install the screws.
- C.** Ensure proper clearance, then tighten the screws.


STEP 10 Re-install the saddlebags.

WARNING! IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

Küryakyn

PIC.1

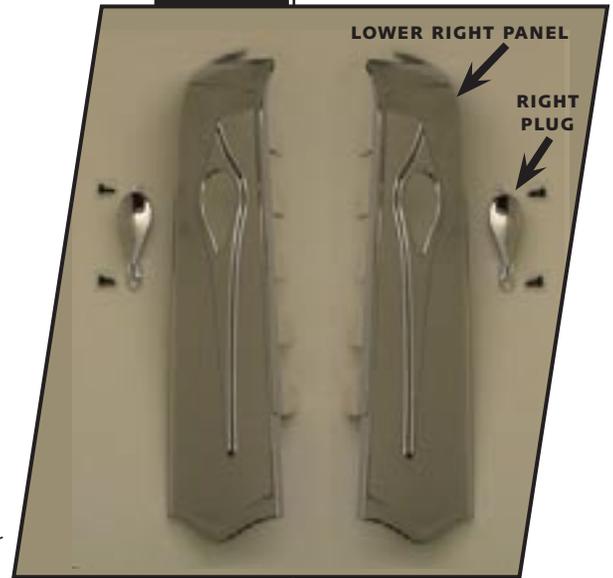

PIC.2



PIC.3



PIC.4



PAGE

2

Ride On!

SADDLEBAG FILLER PANELS INSTALLATION