

INSTALLATION

0 0 0 0

0 0 0 0

1713

RAISED MIRROR ADAPTERS

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY. This indication alerts you to the fact that ignoring
A CAUTION	the contents described herein can result in minor or moderate potential injury.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 2 Raised Mirror Adapters
- 1 Hardware Kit containing:
- 2 5/16" Internal Tooth Lock Washers
- 1 Installation Instructions

YOU WILL ALSO NEED:

Set of Metric combination wrenches, screwdrivers, Torx drivers, hex wrenches


NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

- **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.
- **STEP 2** Remove the existing mirrors.

Refer to **PIC 1**. It may be necessary to loosen or remove the lever mount and rotate it rear ward to gain enough clearance to unthread the existing mirrors.

Use a piece of masking tape and a marker to mark the location of the lever mount.

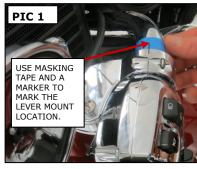

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

> •The product must be properly installed, maintained and operated under normal conditions.

 Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

 Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.

 Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

•Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

•Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn

454 County Road V V Somerset, WI 54025-9031

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.





PIC 3


Leave the Adapter and jam nut loose for now to allow for adjustment.

- **STEP 4** Place one of the included 5/16" Internal Tooth Lock Washers over the top of the adapter.
- STEP 5Refer to PIC 4. Thread the new mirror onto the Adapter;using a 12MM wrench to hold the adapter, tighten the mirror as shown in PIC 5.
- **STEP 6** Follow the specific instructions included with the new mirror to complete the installation.
- **STEP 7** If necessary, rotate the lever mount back into place and tighten the screws.
- **STEP 8** Adjust the mirror stem to your liking;

use a 13MM wrench to tighten the jam nut down against the lever mount;

use a 12MM wrench to hold the adapter in place while the jam nut is being tightened.

- **STEP 9** Repeat for the other side.
- **STEP 10** Adjust the mirrors to your liking and ensure that they do not interfere with the proper operation of the motorcycle **BEFORE** riding.

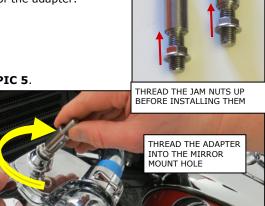





PAGE 2

NOTICE

Ride On!

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

RAISED MIRROR ADAPTERS

INSTALLATION