



INSTALLATION

L.E.D. ARMREST ACCENT for GL 1800 3240

PARTS INCLUDED

- 1 Left Passenger Armrest Accent
- 1 Right Passenger Armrest Accent
- 1 Run-Turn Harness for Armrest Accents
- 1 Double "Y" Adapter
- 6 6" Black Nylon Cable Ties
- 1 Dielectric Grease Pack
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.



THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.



This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.



IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Metric Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: Installation of this product requires AT LEAST 1/8" clearance between the back of the speaker arm and any accessory (I.E. luggage rack, bag...) mounted on the trunk lid.

NOTE: On '06-'10 GL 1800's, this product requires the separate purchase and installation, or the motorcycle to be equipped with, Kuryakyn Rear Accessory Light Adapter, P/N 3241.

On '12-UP GL 1800's, this product requires the motorcycle to be equipped with Kuryakyn Rear Accessory Plug and Play Harness, P/N 3230.



A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com


STEP 3 Thoroughly clean the back of both passenger armrests with soapy water and a clean rag. Dry completely. Thoroughly clean the installation area with an ammonia based cleaner, such as window cleaner, and a clean rag to remove any residue of any silicone based plastic brightener that has been used. PIC 1 Dry completely. Wipe the installation area with the included alcohol pad to remove any residue.

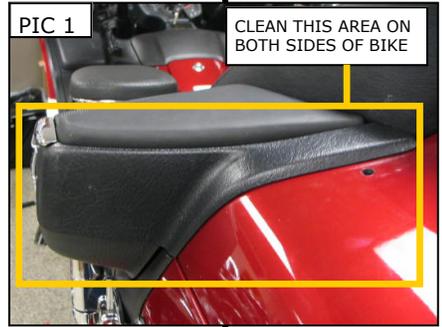


STEP 4 Determine the left (sitting on bike) from the right Armrest Accent. PIC 2

NOTICE Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.


NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

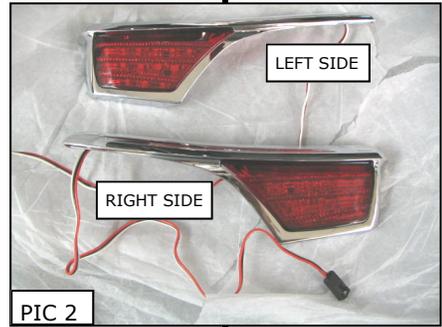

STEP 5 Spread the passenger armrest portion of the backrest away from the trunk. PIC 3 Route the wire harness from the Accent into this space.

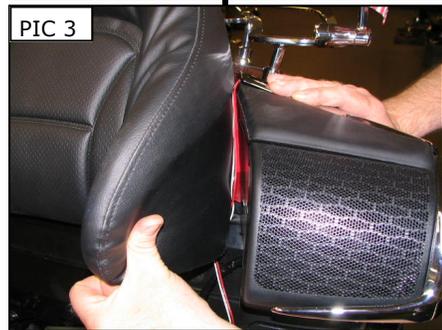

STEP 6 Test fit the right Armrest Accent to the rear of the right passenger armrest. PIC 4 The Accent should follow the contour of the trunk and line up with the top of the passenger armrest. Make any reference marks along the outside edges of the Armrest Accent with a non-permanent marker or masking tape.

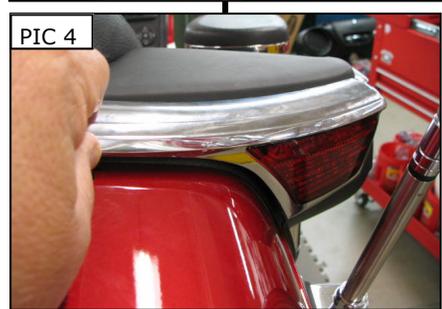


STEP 7 Rub the backing paper of the Accent with your fingernail to activate the adhesive. Remove the backing paper and attach the Accent to the back of the passenger armrest. Press in place for one minute, full bonding will occur in 24 hours. Repeat Steps 4 and 5 for the left side.

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.

STEP 8 Remove the seat and the rear fender panel as outlined in the service manual. PIC 5

NOTE: Older models may have one fastener behind the license plate.

STEP 9 Open the trunk. Route the wire harnesses from each Accent along the OEM harness on each side of the trunk (PIC 6) to the center of the motorcycle under the seat. PIC 7 Use the OEM wire harness retainers and the included nylon cable ties to secure them out of harms way. PIC 6

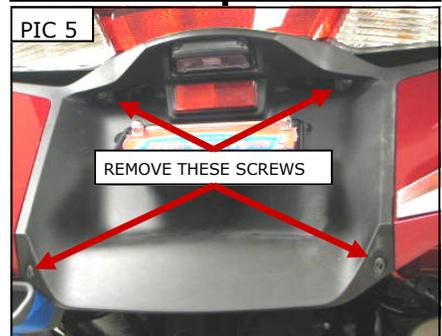

NOTE: Make sure that the wire harnesses from the Accents DO NOT get pinched in the hinges.

STEP 10 Locate the Run-Turn "Y" harness. Connect the three pin connector marked left (with the ORANGE, RED and BLACK wires) to the Accent attached to the left (sitting on bike) armrest. Connect the three pin connector marked right (with the BLUE, RED and BLACK wires) to the Accent on the right armrest.






-cont.-

STEP 11

On '12-UP models: Requires the separate purchase and installation of Küryakyn P/N 3230 to complete installation. Route the six pin connector on the end of the Run-Turn harness under the seat, and along the main harness (along the frame on the **RIGHT** side of the motorcycle, PIC 8), to the rear of the motorcycle. It may be helpful to use a guide wire. Use the included cable ties to secure the harness out of harms way.

On '06-'10 models: Requires the separate purchase and installation of Küryakyn P/N 3241 to complete installation.

Take a piece of wire or a straight coat hanger (to pull the wire through) and run it along the inside of the left frame rail (PIC 9), until you can reach it from the back of the bike. The wire should come out to the top left of the inside back panel. Tape the six pin connector end of the Run-Turn harness to the wire. Secure the wire tight enough that it will not come undone in the routing process. Pull the wire or coat hanger back toward the rear with the wires still secured to it. Once the wires are pulled far enough to reach, they can be removed from the wire/coat hanger. Use the included cable ties to secure the harness out of harms way.

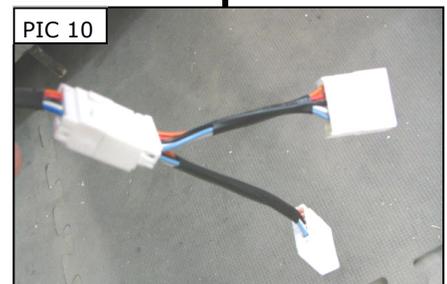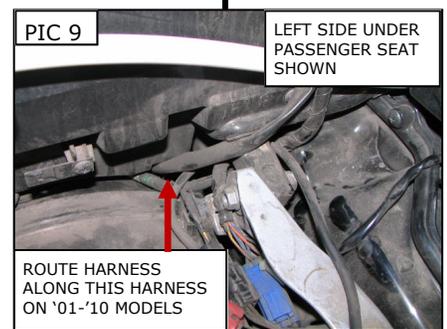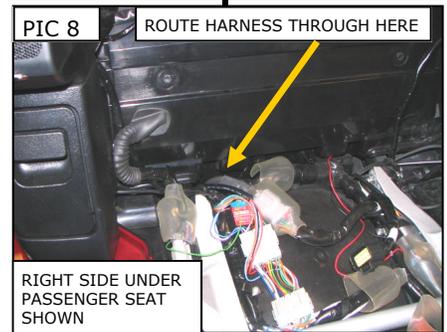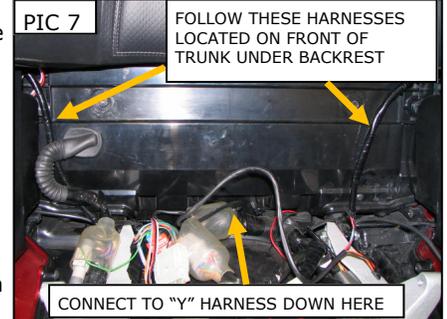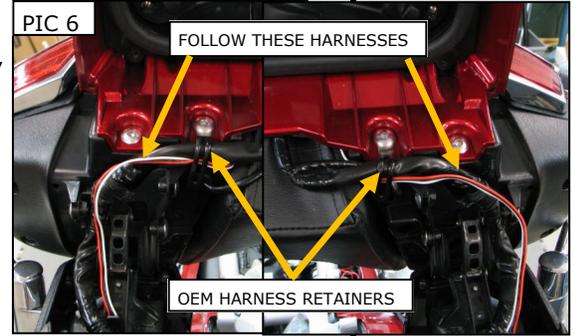

STEP 12

Please refer to the instructions for P/N 3241 for '06-'10 models or P/N 3230 for '12-UP models: If you have an open six pin connector on the Plug and Play Harness (P/N 3230) or Rear Adapter Harness (P/N 3241), connect the six pin connector from the "Y" harness to it. If you do not have an open connector, disconnect one of the six pin sets and connect the included Double "Y" connector in line. PIC 10 Connect the existing accessory and the Accent Lights to the new Double "Y" connector. Use the included cable ties to secure the harness out of harms way.

NOTICE

Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn **WILL NOT** issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 13

Turn the motorcycle on and verify that the lights work correctly.

WARNING

ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 14

Replace the seat and rear fender panel.

WARNING

AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.