



## L.E.D. VERTICAL RUN-BRAKE STRIP LIGHTS

### 3247

### PARTS INCLUDED

- 1 Right Strip Light Assembly—Black with Smoke Lens
- 1 Left Strip Light Assembly—Black with Smoke Lens
- 1 Triple "Y" Adapter
- 2 Alcohol Pads
- 6 6" Black Nylon Cable Ties
- 1 Dielectric Grease Pack
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**⚠ WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**NOTICE** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**NOTICE** IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

**TOOLS SUGGESTED**  
Set of Metric Hex Wrenches

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**NOTE:** This product requires the motorcycle to be equipped with Kuryakyn Rear Accessory Plug and Play Harness, P/N 3230, or the applicable Part Number Kuryakyn Rear Plug and Play harness for your model.

**NOTE:** Pictures shown of Chrome parts. Installation of Black Parts will be the same.

**⚠ WARNING** YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

**STEP 2** Thoroughly clean the area on the back of the saddle bags as shown in PIC 1. Use soapy water and a clean rag. Let dry completely. Wipe the area with the included alcohol pads to remove any residue. Let dry completely.

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com


## NOTICE

Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**Kuryakyn**

### STEP 3

Test fit the right side Accent to the right saddlebag. The Accent will follow the seam between the saddlebag door and the saddlebag. The Accent has a formed bottom that will "hook" under the saddlebag. **Make sure that the top of the Accent is placed inboard far enough that the saddlebag door can open and close without hitting the top of Accent.** Make any reference marks on the saddlebag with a non-permanent marker or masking tape. PIC 2

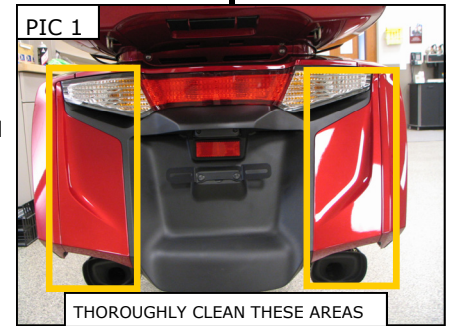

## NOTICE

The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

### STEP 4

Rub the backing of the adhesive with the back of your fingernail to activate the adhesive. Remove the backing. Using any reference marks made in Step 3, and making sure the wire harness is routed out the bottom channel in the Accent, firmly press the Accent in place. Full bond will occur in 24 hours.

**NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Accent to assist in holding the Accent in place until the cure time is over.**

### STEP 5


Repeat Steps 3 and 4 for the left side.

### STEP 6

Remove the four fasteners that secure the rear fender panel and remove it. PIC 3

### STEP 7

Route the wire harness from each Strip Light through the opening between the inside of the saddlebag and the saddlebag support. PIC 4 Use the supplied cable ties to secure the harness out of harms way.

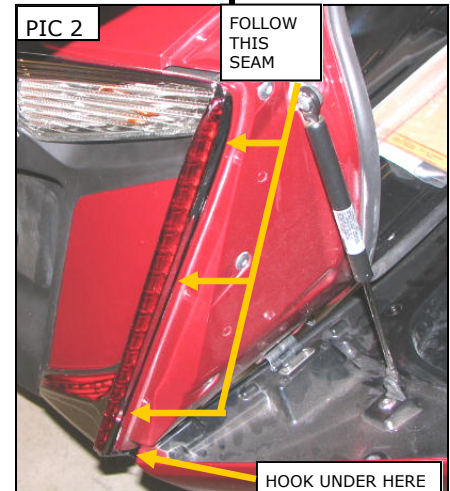

## NOTICE

Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

## NOTICE

Kuryakyn recommends the use of dielectric grease on electrical connections.

### STEP 8

**Please refer to the instructions for P/N 3230:** Locate the Six pin connector from the Rear Accessory Plug and Play harness. If you do not have an open connector on this plug, disconnect the harness from the current accessory that is plugged into it. Connect the included Triple "Y" adapter and connect the existing accessory and the new Vertical Run-Brake Strip Light Trim to it. Use the included cable ties to secure the wiring out of harms way.

**NOTE: It does not matter which connector from the Accents is plugged into which Triple "Y" connector, the Accents are wired to draw from the correct wires on each side.**

### STEP 9

Turn the motorcycle on and check that all the lights work correctly.





**WARNING ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.**

### STEP 10

Replace the rear fender panel. Tighten the fasteners securely.

## NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

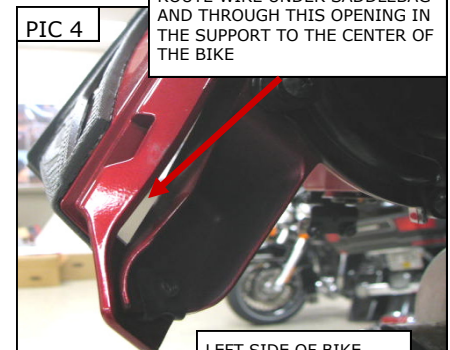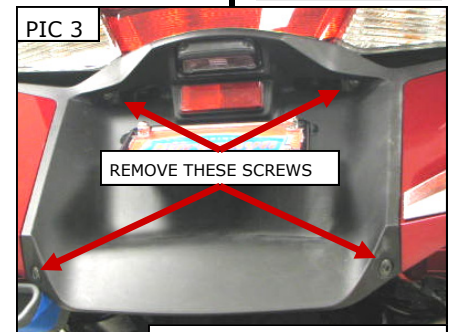

LEFT SIDE OF BIKE SHOWN WITH CENTER PANEL REMOVED

PAGE  
2

*Ride On!*

**RUN-BRAKE STRIPLIGHTS**

**INSTALLATION**