



INSTALLATION

UPPER FORK SLIDER COVERS—BLACK 7211

PARTS INCLUDED

- 2 Upper Fork Covers with Slots—Black
- 2 Upper Fork Covers with Studs—Black
- 2 Fork Slider Cover Center Side Trims—Chrome
- 2 Alcohol Pads
- 1 Installation Gauge
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: Pictures shown are of chrome parts. Installation of Black parts will be the same.

STEP 2 Identify each "Upper Fork Cover" half by the stud or slot. PIC 1

STEP 3 Taking one of each, note how they fit together in a "dry fit" on the fork. Install by mating the two halves, inserting the stud into the slot, then closing the halves together "hinging" on the stud as shown in PIC 2. The seam with the slot & stud will be on the inside of the fork, toward the wheel, and you will wrap the covers around the fork leg toward yourself.

STEP 4 While fitting, make sure to center the opening left by the two halves front-to-back on the fork leg.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

-cont.-

7211-21HD-0711

kuryakyn.com



STEP 5 Use the Installation Gauge as a spacer by setting it between the top of the forward half of your new covers and the lower edge of the outer fairing skirt. PIC 3

STEP 6 Thoroughly clean the installation area with an ammonia based cleaner, such as window cleaner, or soapy water. Rinse and let dry. Use the included alcohol pad to finish cleaning and remove any residue.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 7 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.

STEP 8 Remove the tape backing and press firmly for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.





STEP 9 Dry fit the Center Side Trim into the opening left by the two halves, making sure the top of it is flush with the top of the two halves you installed earlier, and the arrowhead at the bottom fits between the halves. PIC 4

STEP 10 Using the back of your fingernail, rub the back of the double-sided tape to activate the catalyst, and to help release the backing.

STEP 11 Remove the tape backing press firmly into place holding for 60 seconds, adhesive will fully cure in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 12 Repeat all steps for other side.

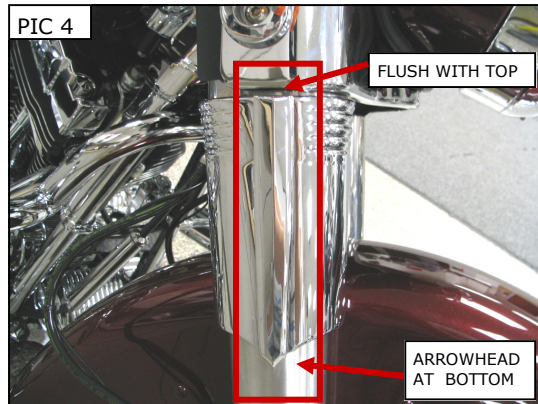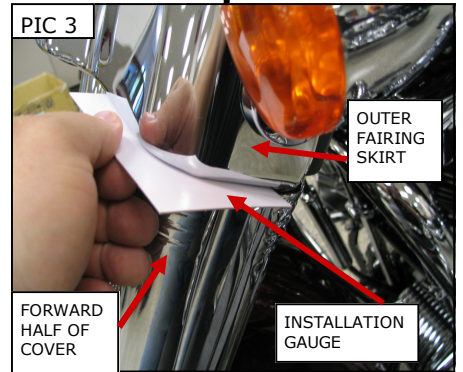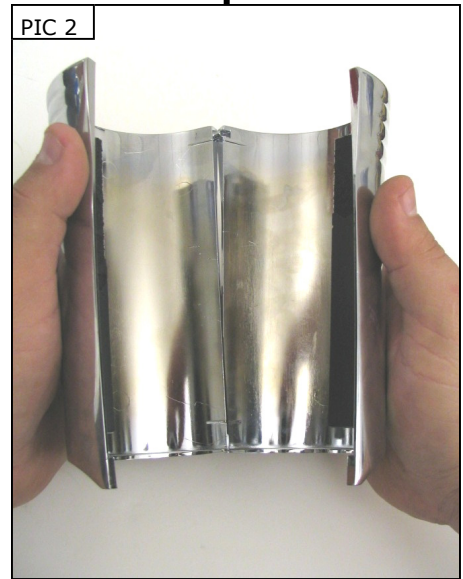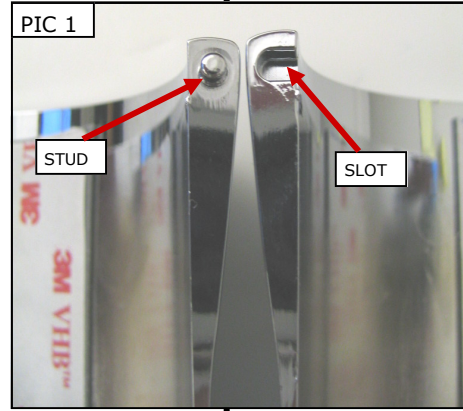

Ride On!