



INSTALLATION

SWITCH HOUSING COVER

7809

PARTS INCLUDED

- 1 Right Top Cover
- 1 Left Top Cover
- 1 Bottom Right Cover
- 1 Bottom Left Cover
- 1 Hardware Kit Including:
 - 4 Adhesive Foam Pads
 - 5 #4-40 x 1/2" Socket Head Cap Screws (SHCS)
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: For best appearance, motorcycle must be equipped with Kuryakyn Handlebar Control Dress-Up Kits (P/N 9119 or 9126) or H-D Handlebar Reservoir Cover Sets (H-D P/N 46099-98 or 46098-98)

STEP 2

Using the back of your fingernail, rub the brown adhesive backing on two foam pads to activate the catalyst, remove the backing and install the adhesive foam pads on the inside of the top covers as shown in PIC 1.



INSTALL AN ADHESIVE FOAM PAD INSIDE EACH OF THE TOP COVERS

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




kuryakyn.com

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50° F. Do not attempt this installation in temperatures less than 50°F.

STEP 3 Test fit the left upper and lower covers on the left switch housing (referring to PIC 2 to determine the left covers).

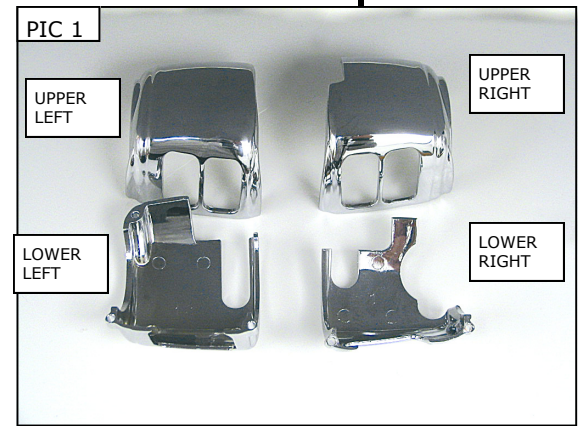

NOTE: The covers are designed to have a small amount of movement when they are installed; if there is too much play, you can install an additional foam pad on the inside of the top cover.

STEP 4 Once the proper fit has been achieved, secure the top and bottom cover together using three screws from the hardware kit (two screws for the right side).

NOTE: You may choose to remove the adhesive backing on the foam pad that was installed on the cover before securing the top and bottom together.

STEP 5 Repeat STEP 3 and STEP 4 for the right side.

STEP 6 Check for clearance between the throttle grip and the cover, the throttle needs to operate freely; if it doesn't move freely, remove the cover and adjust the foam pads until the throttle will operate freely.

STEP 7 Test to make sure that all the switches and levers operate freely before riding the motorcycle.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.