



BOOMERANG COVERS 7851

FITS ALL '00-'07 SOFTAIL MODELS (EX. '00-'07 FAT BOY, '00-'07 DEUCE AND '05-'07 DELUXE.) NOTE: WILL FIT '00-'06 FAT BOY AND '05-'07 DELUXE IF O.E. REAR EXHAUST BRACKET HAS BEEN REMOVED.

PARTS INCLUDED

- 1 Nut Cover Cap Set
- 2 Beauty Ring
- 1 Right Boomerang Cover
- 1 Left Boomerang Cover
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Allen wrenches, Torx wrenches, combination wrenches.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Remove the stock passenger footrest from the footrest support. Remove the footrest support from the frame.

STEP 2 Remove the two fasteners securing the strut cover. Install the boomerang cover; the tab at the top of the boomerang cover slides beneath the strut cover. See PIC.1.

-cont.-

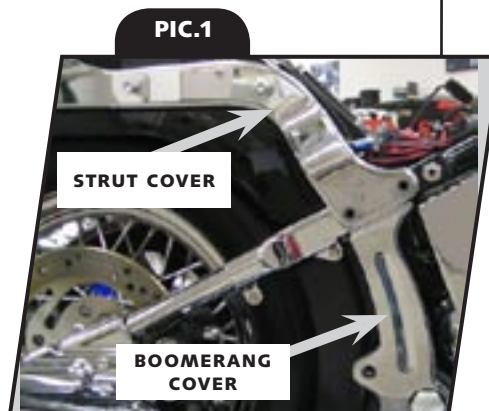

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



STEP 3 Install the nut cap. The nut caps are right side and left side specific. The right side nut cap has a shallow depression; the left side nut cap has a deeper depression. Secure the nut cap with the Allen setscrew. See [PIC.2](#).

STEP 4 Install the beauty ring over the footrest support fastener. The footrest support fits into the recessed face of the beauty ring. Re-install the stock footrest support through the boomerang cover and into the frame. See [PIC.2](#).

STEP 5 Re-install the footrest and secure with the stock hardware. Repeat for the opposite side.

Ride On!

