



INSTALLATION

LID ACCENTS FOR SADDLEBAGS AND TOUR PAK 8647

FITS: '80-UP ELECTRA GLIDES, TOUR GLIDES, ROAD KINGS, ROAD GLIDES OR STREET GLIDES EQUIPPED WITH KING, ULTRA OR CHOPPED TOUR PAKS.

'93-UP ELECTRA GLIDES, ROAD GLIDES, STREET GLIDES, TOUR GLIDES OR ROAD KINGS WITH HARD SADDLEBAGS

PARTS INCLUDED

- 1 Right Lid Accent
- 1 Left Lid Accent
- 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

TOUR PAK LID

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


STEP 2 Clean one side of the Tour Pak lid with the supplied alcohol pad. See PIC 1.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 Dry fit the accent to the side of the lid. Make temporary markings using tape to help you realign the accent for final installation.

STEP 4 Using the back of your fingernail, rub the back of the double-sided tape to activate the adhesive.

STEP 5 Remove the tape backing. Line up accent with the marks that were made in STEP 3. Apply pressure to the accent for 60 seconds ensuring that it makes full contact with the Tour Pak lid. Full bonding will occur in 24 hours.

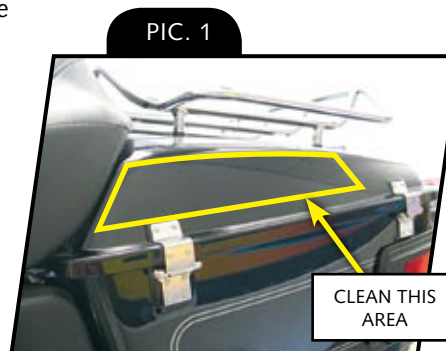

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Repeat steps 2-5 on the opposite side.

SADDLEBAG LID

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Clean one side of the saddlebag lid with the supplied alcohol pad. See [PIC 3](#).

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 Dry fit the accent to the side of the lid. Make temporary markings using tape to help you realign the accent for final installation.

STEP 4 Using the back of your fingernail, rub the back of the double-sided tape to activate the adhesive.

STEP 5 Remove the tape backing. Line up accent with the marks that were made in STEP 3. Apply pressure to the accent for 60 seconds ensuring that it makes full contact with the saddlebag lid. Full bonding will occur in 24 hours.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Repeat steps 2-5 on the opposite side.

Ride On!

Kuryakyn[®]

PIC. 2



PIC. 3



PIC. 4



PAGE

2