

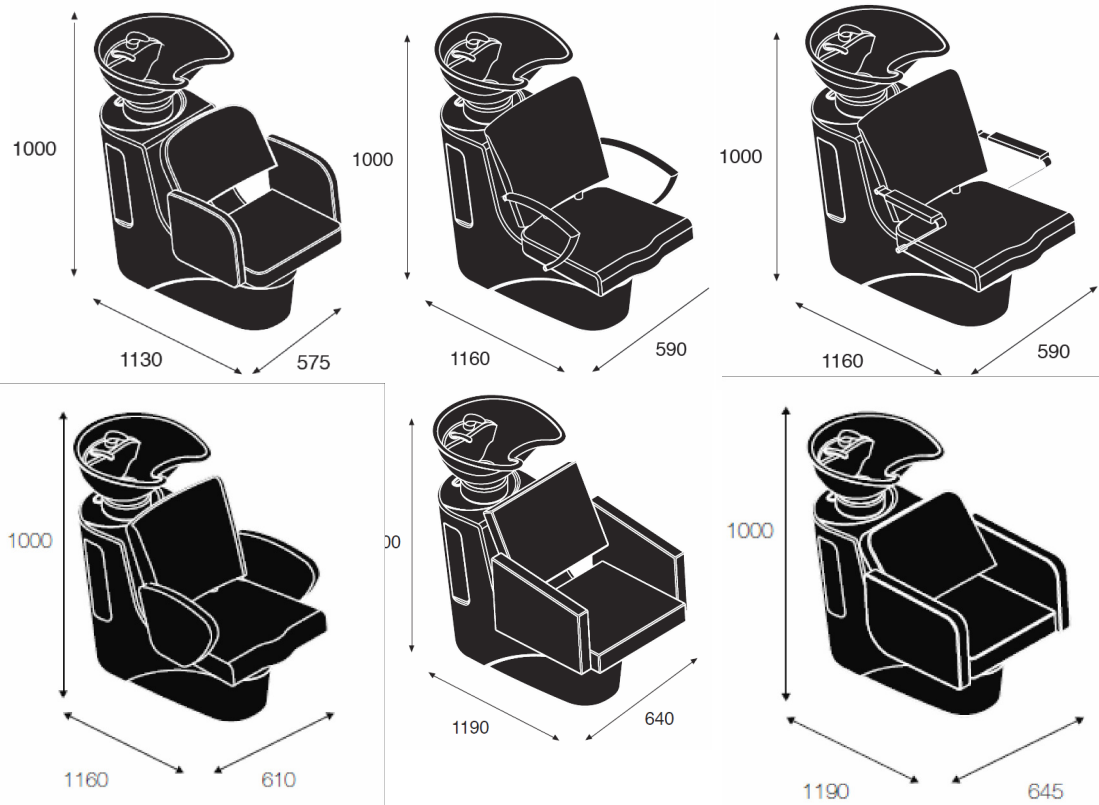


PAHI CRETA


Barcelona

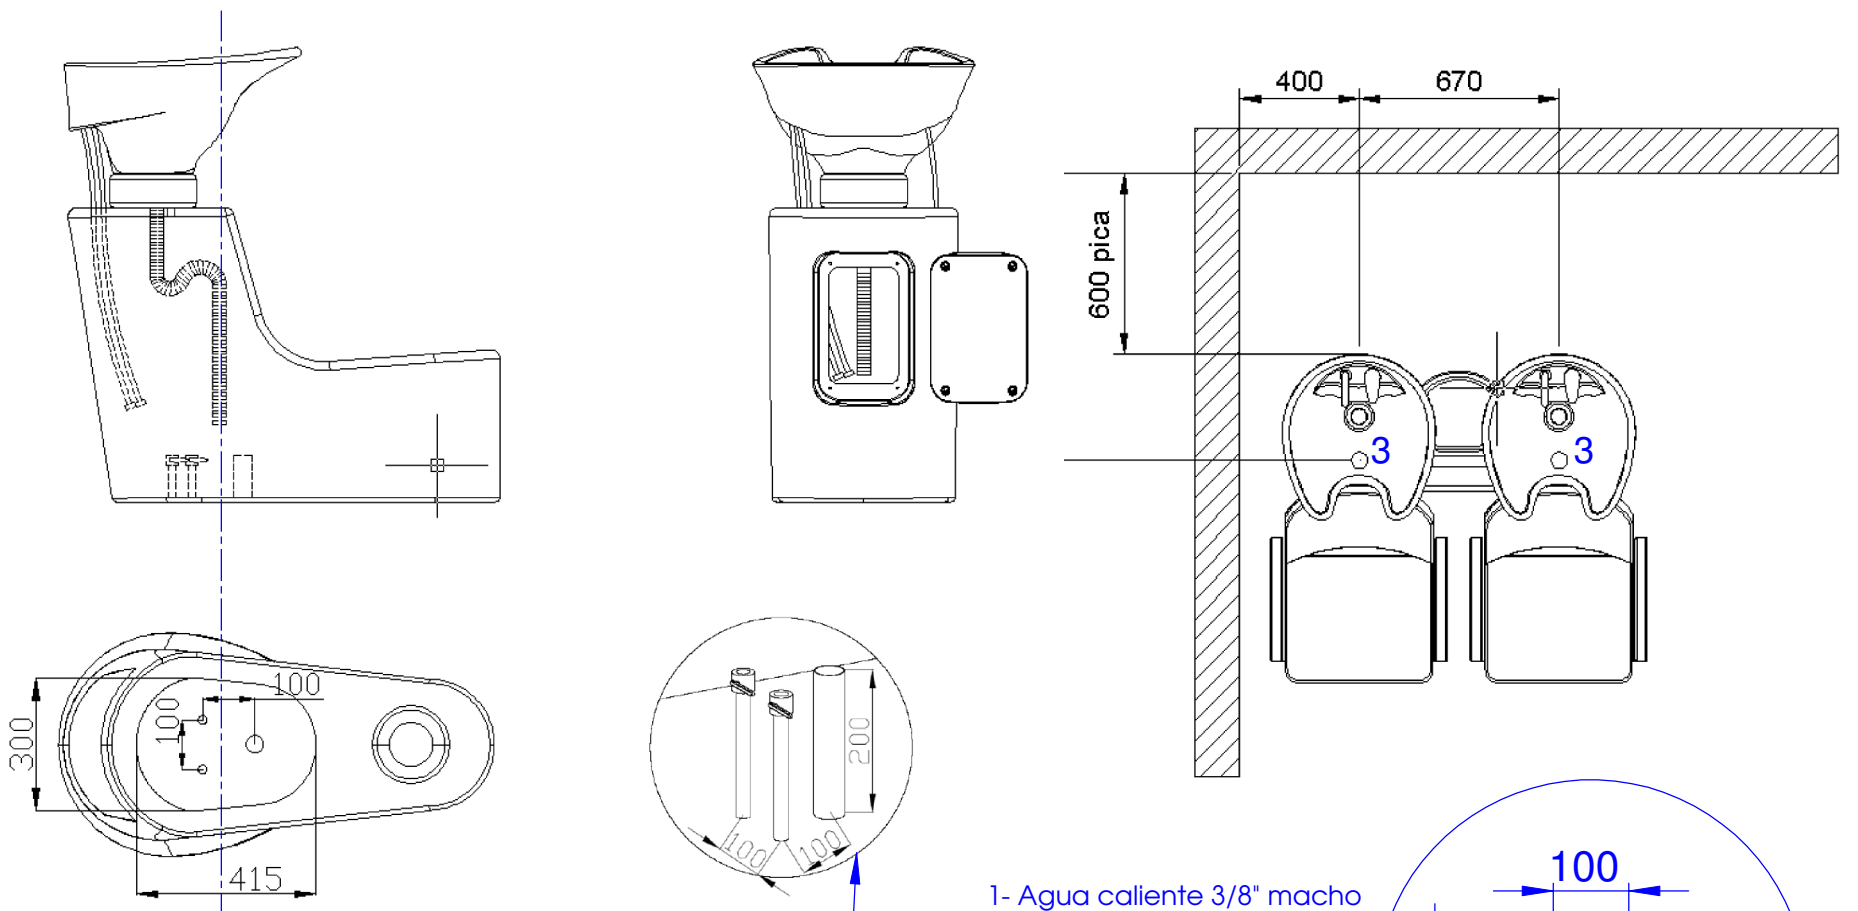

INSTALACIÓN / INSTALLATION / INSTALLATION

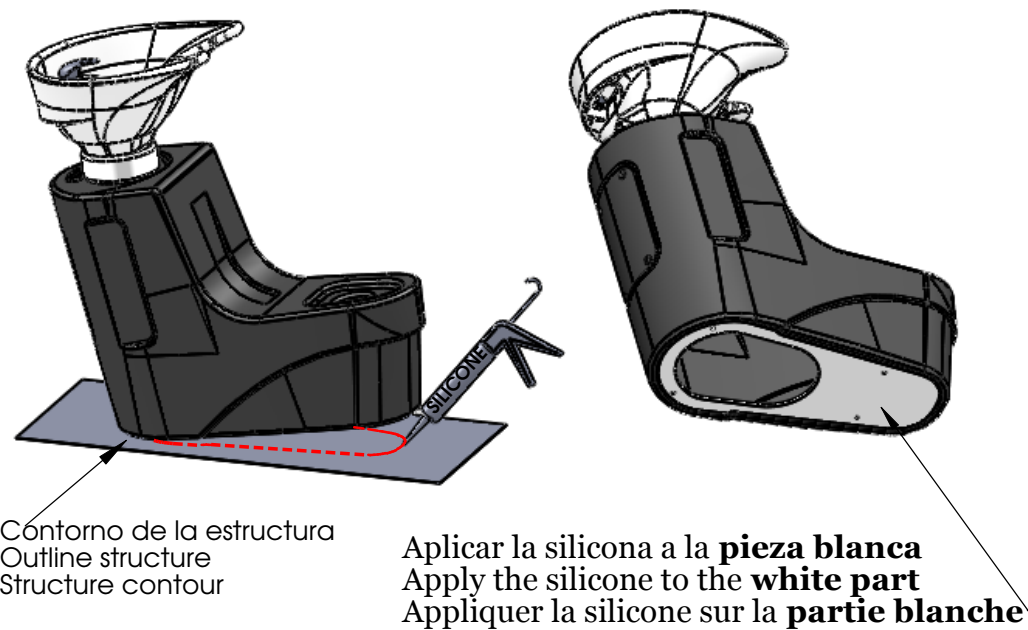

- 1- Agua caliente 3/8" macho
Hot water 3/8" male
Eau chaud 3/8" mâle
- 2- Agua fría 3/8" macho
Cold water 3/8" male
Eau froid 3/8" mâle
- 3- Desague Ø40 interior
Drainage Ø40 inside dimension
Déversoir Ø40 intérieur

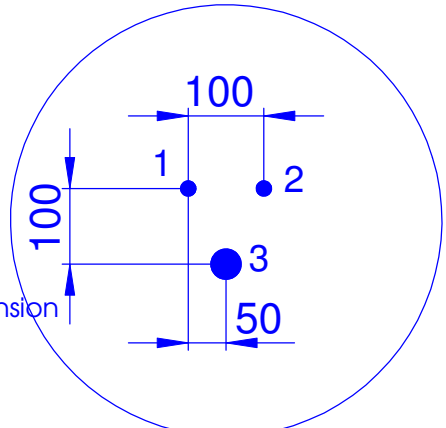

Recomendamos instalar llaves de paso
It's recommended to install inlet valves
Très recommandé installer robinets de pas

-Los latiguillos que servimos son 3/8" BSP HEMBRA.
-The tubes we put are 3/8" BSP FEMALE
-Les tuyau son de 3/8" BSP FEMELLE

