




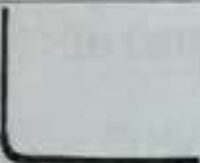


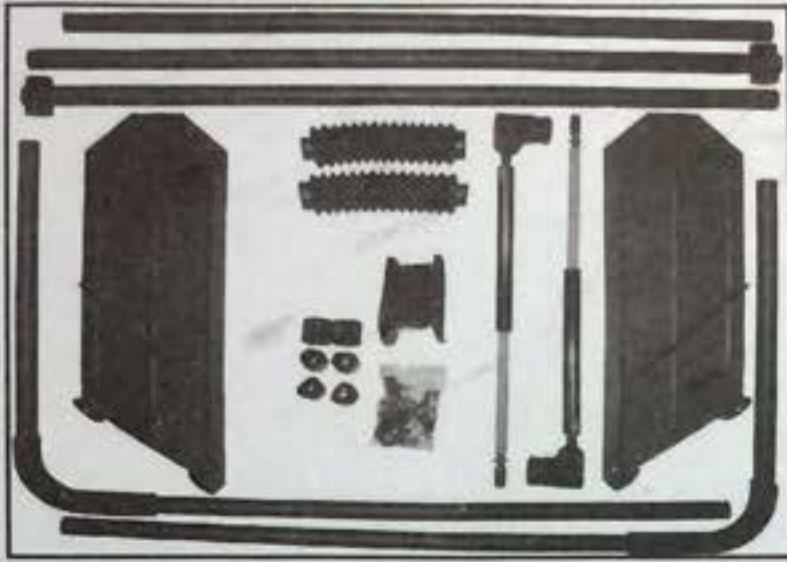






















Cabinet Free Universal Assist Lifter Instructions



PART LIST

 1 @ Left Undermount Bracket	 1 @ Right Undermount Bracket	
 2 @ 1-5/16" Pivot Arm	 1 @ 1-5/16" Coupler	
 2 @ 1-1/8" Bent Arms w/ Foam	 2 @ Gas Shocks w/ Sliding Cylinder Mount	
 2 @ 1-1/3" x 1/3" Bolt	 2 @ 3-1/4" x 9/16" Bolt	
 1 @ 1/8" Drill Bit	 1 @ Phillips Driver	
 2 @ 9/16" Lock Nut	 2 @ 1/3" Lock Nut	
 4 @ 3/4" Black PVC Cap	 4 @ 1/2" Black PVC Cap	
 22 @ Black PVC Push Cap	 4 @ 9/16" Black Saddle	
 6 @ 1-2/5" Wood Screw	 4 @ 1" Spa Floor Screw	
 12 @ 1" Black Tek Screw	 8 @ 3/5" Black Cylinder Stopper Screw	
 4 @ PVC Stopper Washer (preset)	 2 @ 6" PVC Cylinder Rod Stops (preset)	
 4 @ 9/16" Washer	 4 @ 1/3" Washer	 4 @ Black Saddle Spacer
 1 set of Cover Saver	 2 @ Rubber Boot	 2 @ Cylinder Stopper

NOTE: THE ABOVE ARE ESSENTIAL COMPONENTS, HOWEVER WE DO ADD SOME EXTRA QUANTITIES OF SOME COMPONENTS AS WELL JUST FOR BACKUP.