



Cabinet Free Universal Assist Lifter Instructions

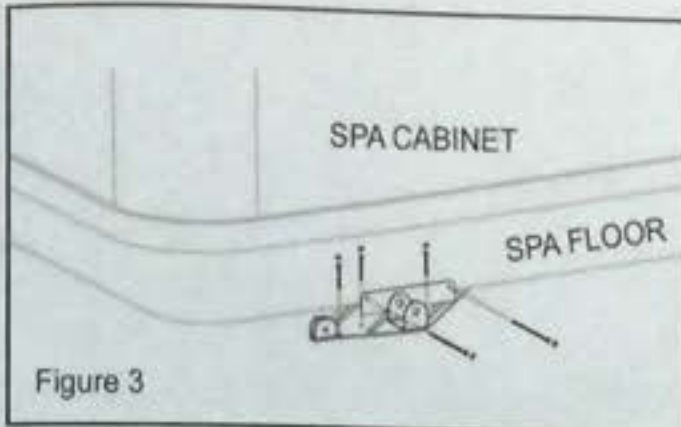


STEP 4:

Select the two short, straight bars (Pivot Arm) and other parts as per Fig. 4. Install them onto one side on the undermount bracket. Before inserting bolts, confirm you have your washers inserted between saddle blocks and inside bracket supports. Push bolt through bolt holes, washers and saddle blocks and then tighten using the lock nut. Repeat on the other side.

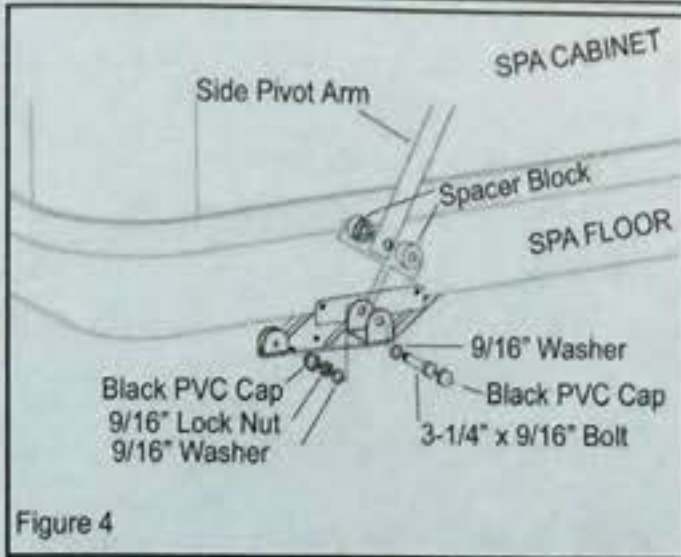

STEP 5:

Slide the sliding PVC Cylinder Mount over the pivot arm, mount the Cylinder Stopper to the pivot arm 17" from the top of it to top of pivot arm using the 3/5" tek screws. (Fig. 5)

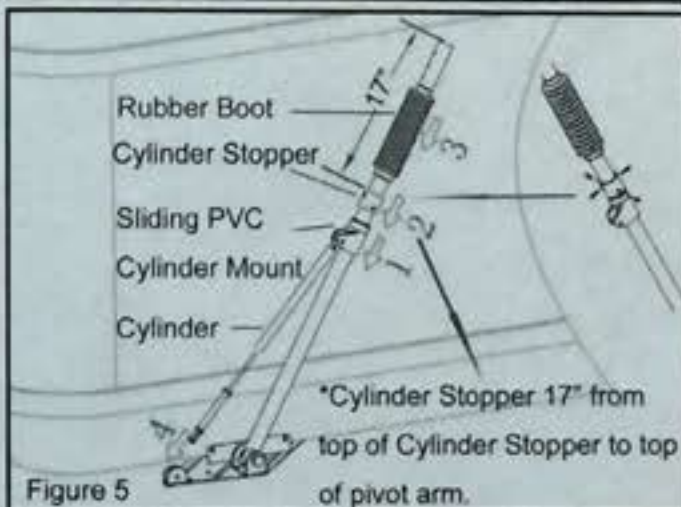


STEP 6:

After sliding the PVC Cylinder in place and the Cylinder Stopper is mounted, slide rubber protective boot over pivot arm and onto the sliding PVC cylinder. (Fig. 5)

STEP 7:

Slide cover support arm into side pivot arm. Do either the left or right side first. Repeat on the other side. (Fig. 6)

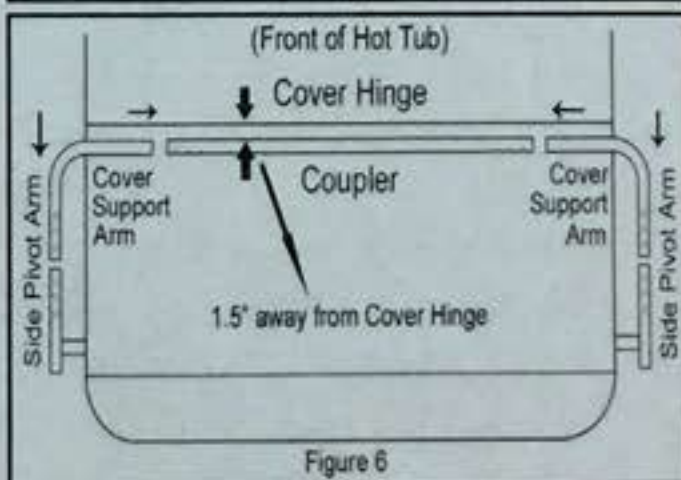


STEP 8:

Ensure again cover is square on the top of the SPA lip.

STEP 9:

Slide coupler onto cover support arm.

NOTE: Confirm Coupler Tube is 1.5" from center of cover when installed as per COVER SAVER direction requirements. (Fig. 6)

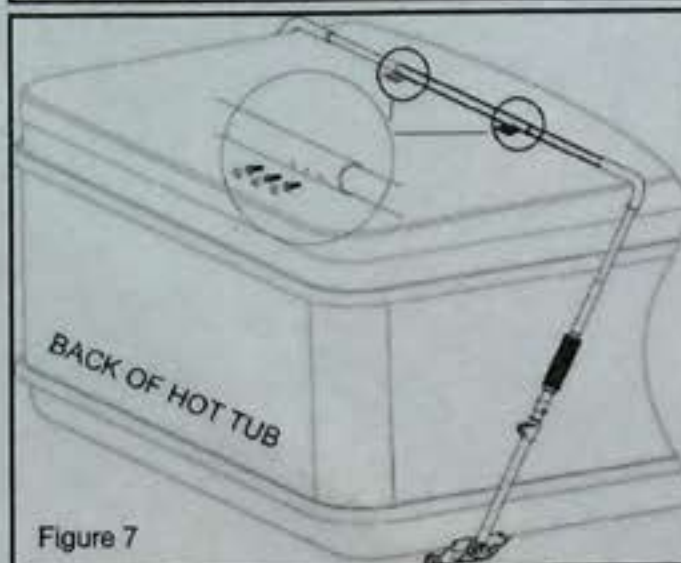

STEP 10:

Complete the opposite pivot arm.

STEP 11:

Center the coupler tube on the middle of the SPA cover. *NOTE* MAKE SURE TO TURN THE COUPLER TUBE SO THAT SCREW HOLES ARE DIRECTED TO THE BACK OF SPA (Fig. 7)