



ASSEMBLY INSTRUCTION








KATO CHAIR

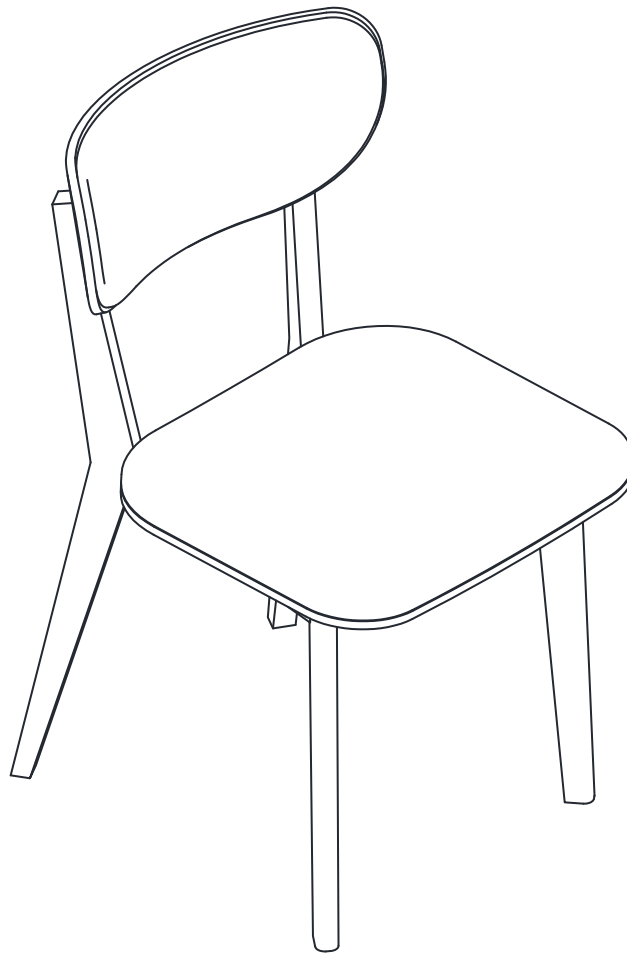



ROWICO

H O M E

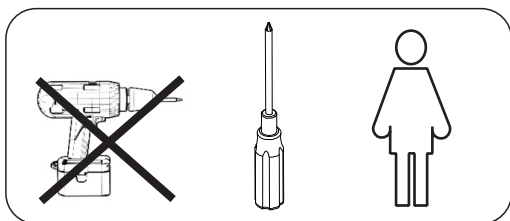

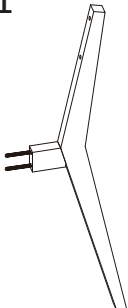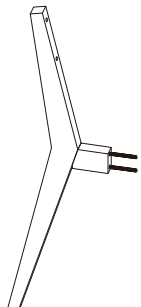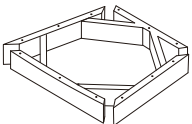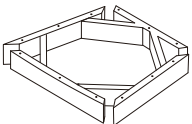Ax1 	Gx8 
Bx1 	Hx8 
Cx1 	Ix8 
Dx1 	Jx12 
Ex2 	Kx4 
Fx1 	Lx1 
Gx1 	Mx4 
Nx1 	Ox4 


1

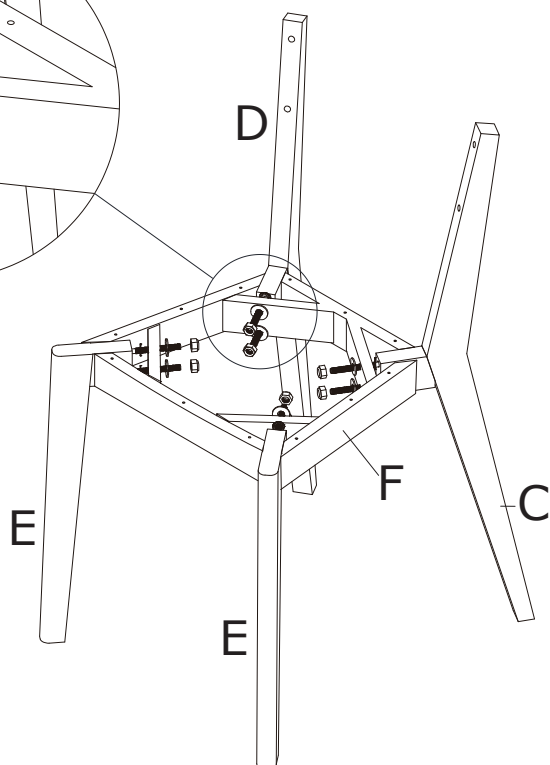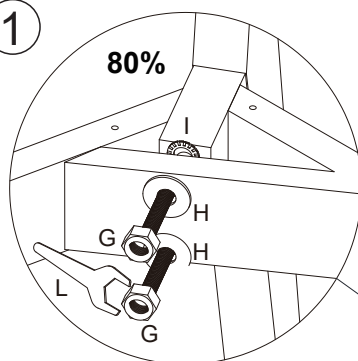


Montera både främre och bakre ben, men spänn inte låsmutter helt för att ha justermån.

Mount front and rear legs. Do not tighten locknut fully.

2

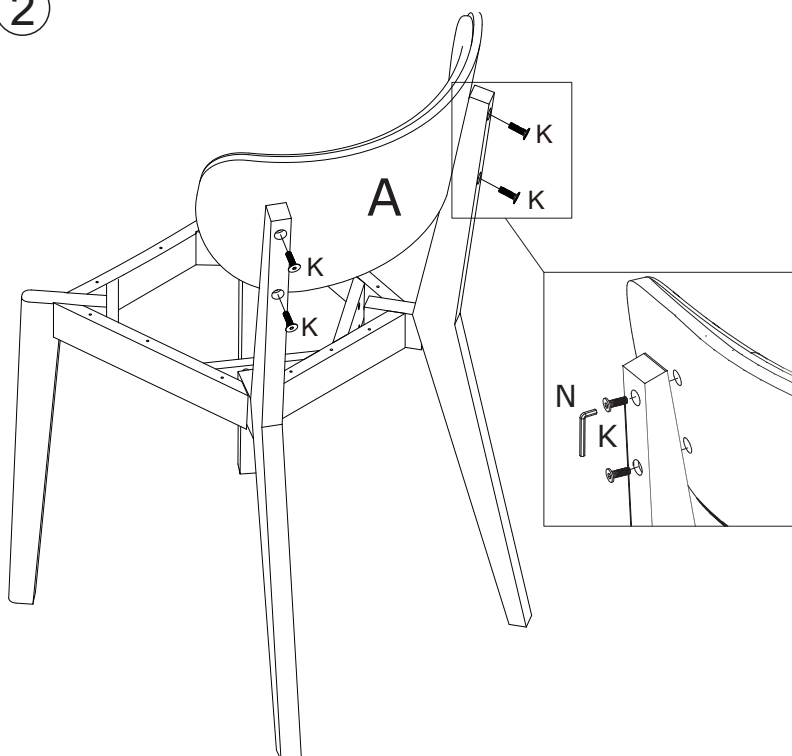


3

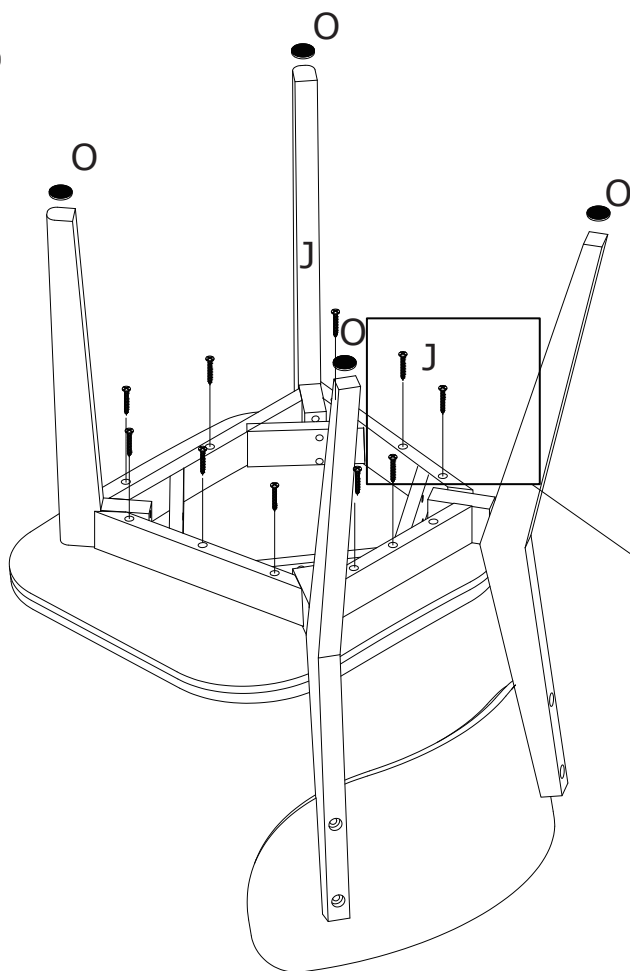

Var noggrann med ramens placering och att den monteras helt plant mot sitsen.

Ensure proper placement of the frame and to mount it firmly against the seat.

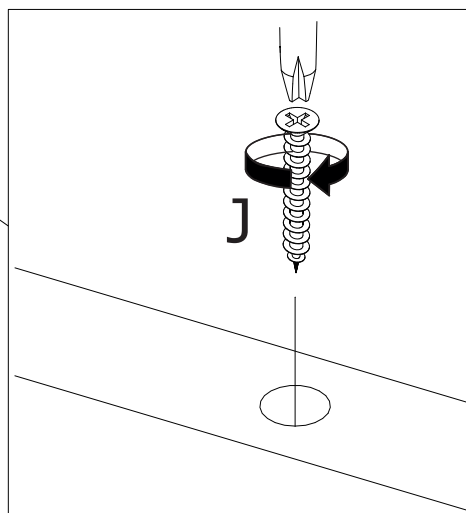





4

Svenska

Placera stolen på ett jämnt underlag.
Belasta stolen med ca 60 kg.
Justera tills alla 4 benen är mot golvet.
Spänn sedan försiktigt samtliga låsmuttrar.

English

Place the chair on an even surface.
Put a load of approx. 60KG on to the seat.
Adjust until all 4 legs are in level –
before you carefully tighten the locknuts.

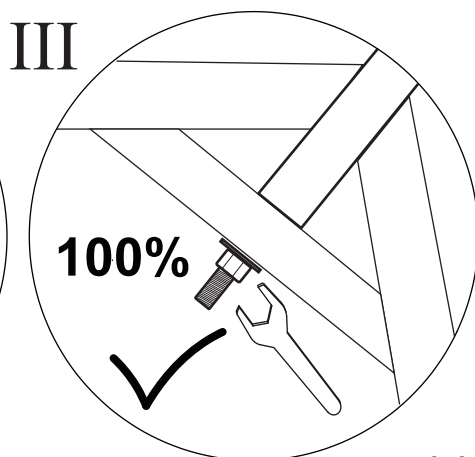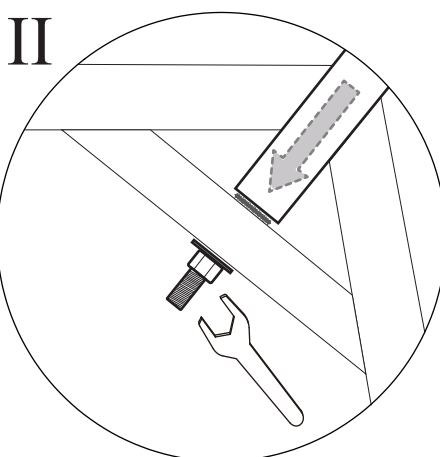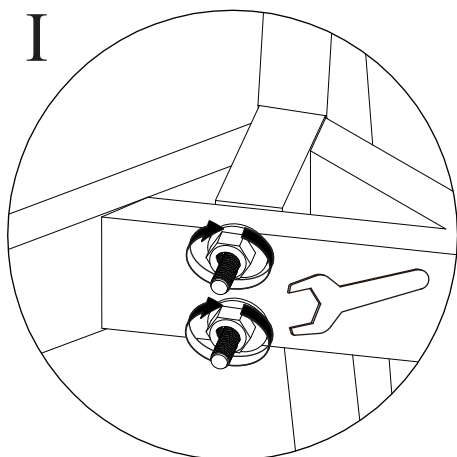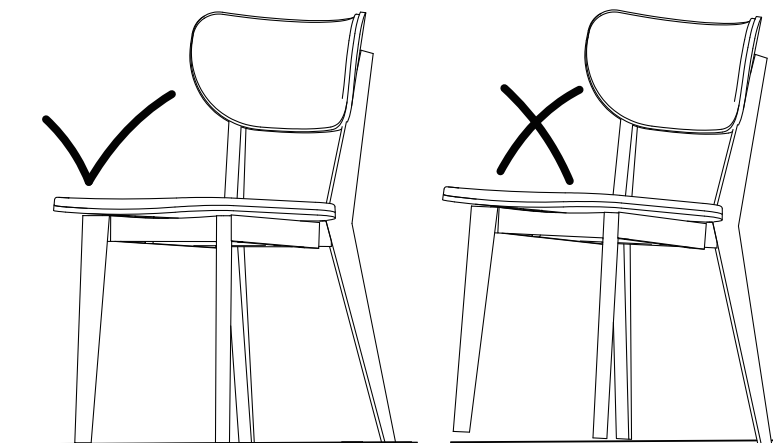


OBS!

Fäst ej täckpluggarna direkt, avvakta en tid tills att efterspanningen av skruvarna är gjord.

Notice!

Do not fasten the wooden plugs at backside of chair, until after some time, when screws are re-tightened!

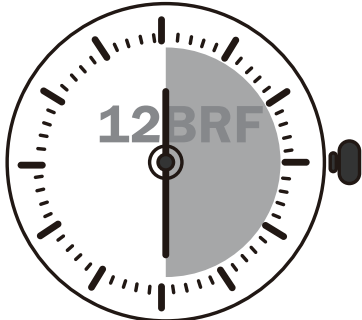Mo	Tu	We	Th	Fr	Sa	Su	2-4 weeks/veckor
1	2	3	4	5	6	7	
⊗ 8	9	10	11	12	13	14	
15	16	17	18	19	20	21	
⊗ 22	23	24	25	26	27	28	
29	30	31					

