


# Monteringsanvisning / Installation instructions

## Artikel / Article 019-HBR

Volvo S40N/V40N Turbo T5 4WD 2004-

Läs även "Allmän monteringsanvisning"  
Also read "General fitting instruction"

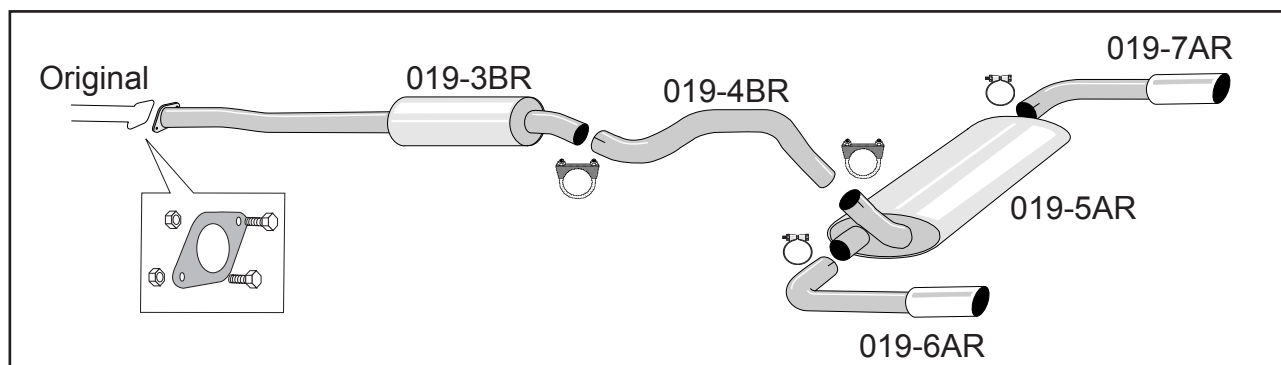

Avgassystemet skall monteras i bilens original upphängningspunkter på samma sätt som originalsystemet.

The exhaust should be mounted in the original hanger points in the same way as the original exhaust.

Observera att avgassystemet inte passar ihop med tvåhjulsdraft.

Please note that this exhaust can not be used on vehicles equipped with two wheel drive.

Ändrören monteras vid ljuddämparen enligt bilden nedan.

The tailpipes should be mounted to the silencer in accordance with the picture below.

Dra åt skruvförbandet omsorgsfullt.

Tighten the screw connection properly.



190313