

NO:AIR125

1



Remove the original leaf spring, loosen the screw at the circular area, and disassemble the lower control arm

2



Drill holes directly on the original I-beam without removing the I-beam. Locate the hole on the rear I-beam (circled in red), and drill directly into it with a diameter of $\text{Ø}12$ to $\text{Ø}14$. While drilling, please ensure that the two holes are aligned vertically upward.

3




Install the rear bracket kit.

4



Install the screws in the sequence from 1 to 7. Do not fully tighten the screws during installation. After the kit has been properly positioned, securely fasten all screws.

5

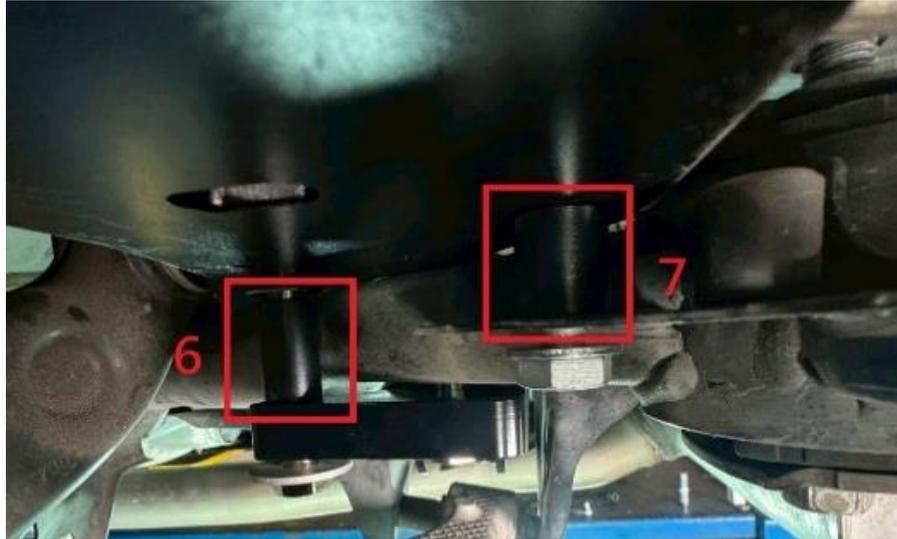


When tightening screws 6 and 7, ensure that the lower washer is secured together with them to prevent abnormal noise.

6



Install the linkage beneath the bracket of air bag
Please ensure that all screws referenced in the steps above have been fully tightened.

7

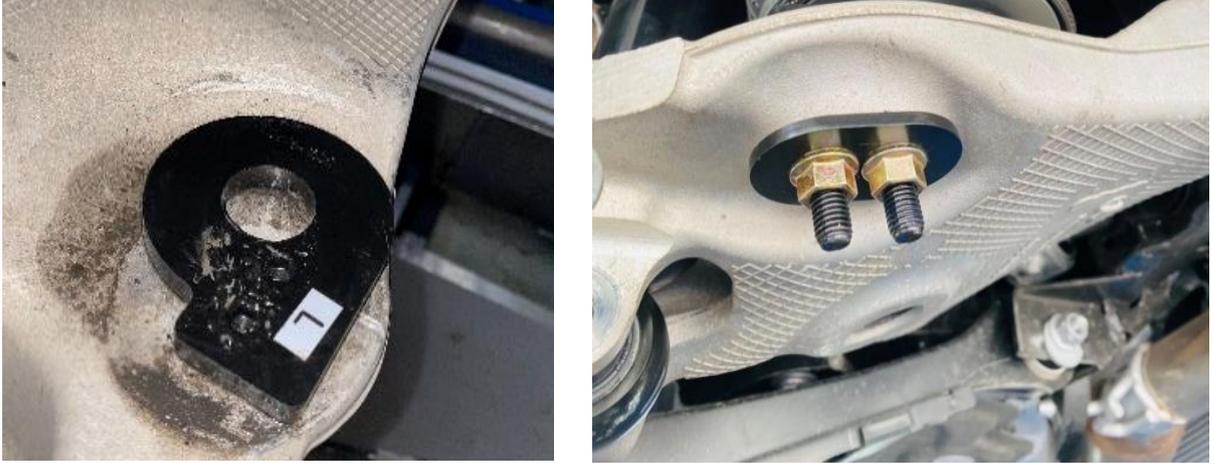

Install the lower bracket.

8



Installation completed.