


VicBooth Premium Extension

INSTALLATION PROCEDURES

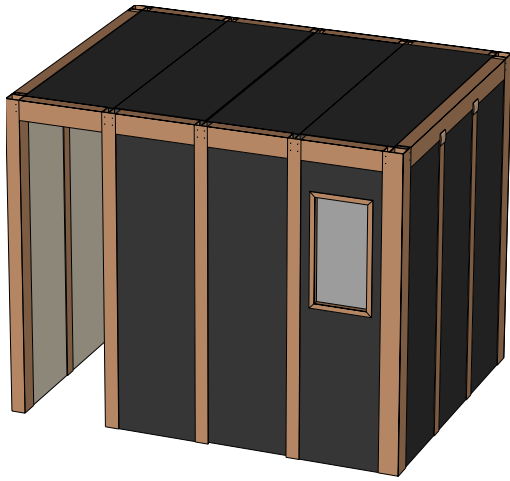

Required Apparatus:

Numbered Wood Items

- 2 x Part 2
- 1 x Part 8
- 2 x Part 10


Numbered Panels

- 2 x Panel 13
- 1 x Panel 14

Accessories


- 8 x Screw (3x20 Philips Head)
- 12 x Screw Stickers

Bill of Materials




Part 2
2pcs

1980mm

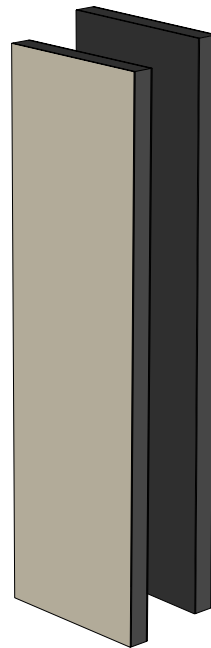


Part 13
2pcs


1795mm

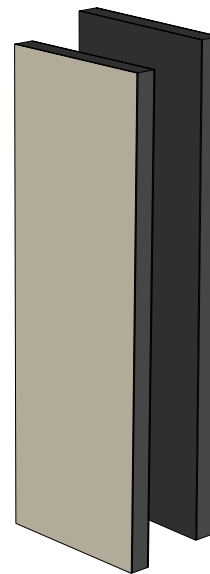

Part 14
1pcs

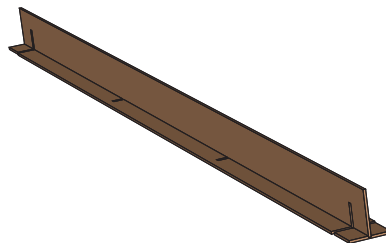

Part 8
1pcs

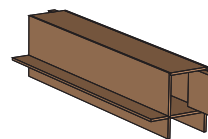


Part 10
2pcs

VicBooth Premium Extension

INSTALLATION PROCEDURES



Step 1

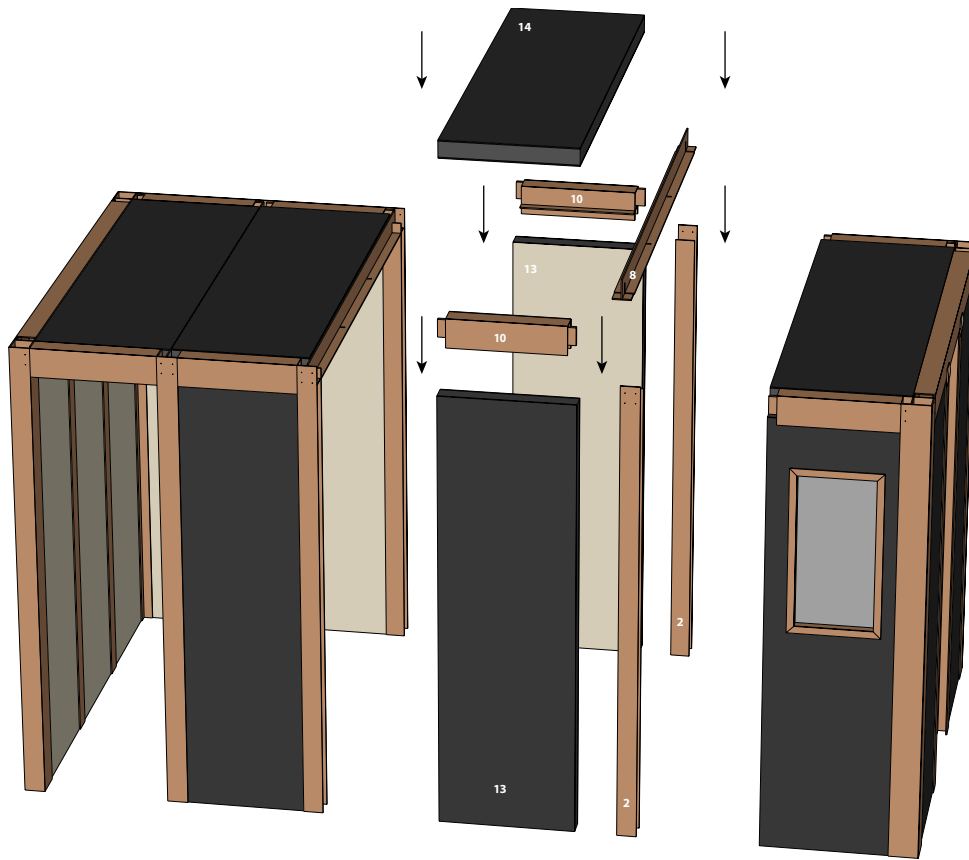

Step 2

