


Creative **COVER STITCH**

Quick ReferenceThreading Guide



Wiper(s) Threading

Make sure steps for looper and needle(s) threading are completed and the threading lever is in serging position.



QR Code for **Threading Diagrams**



① Place a fabric leader under the presser foot and directly under the needle(s). Lower the presser foot lever and take a few stitches and trim the




② Make sure the "Wiper Positioning Lever" is in the "UP" position.



③ Position the needle(s) and wipers by using the "Needle Positioning Button".




④ Make sure the needle(s) are in "UP" position and wipers are opened. Raise the presser foot.

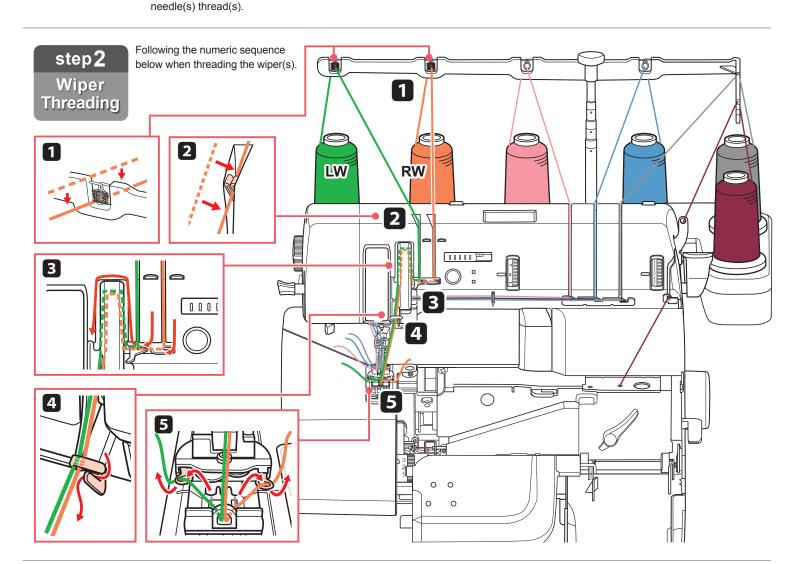


step3 Start to

Sew

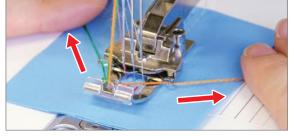


1 Place the wiper thread(s) toward the back placing them in front of the needle(s). Holding onto the wiper thread(s) start stitching, slowly, on the leader.

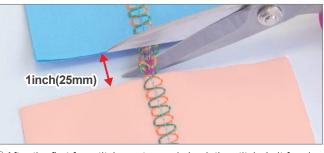


O After the first few stitches, stop and check the stitch. Is it forming correctly? Are the needle threads catching the wiper threads. Trim the wiper thread(s) close to the presser foot. Continue to sew on the leader and move to the fabric leaving about 1inch (25mm) between the leader and the fabric. Trim the threads close to the leader.

Creative Top Cover Stitch

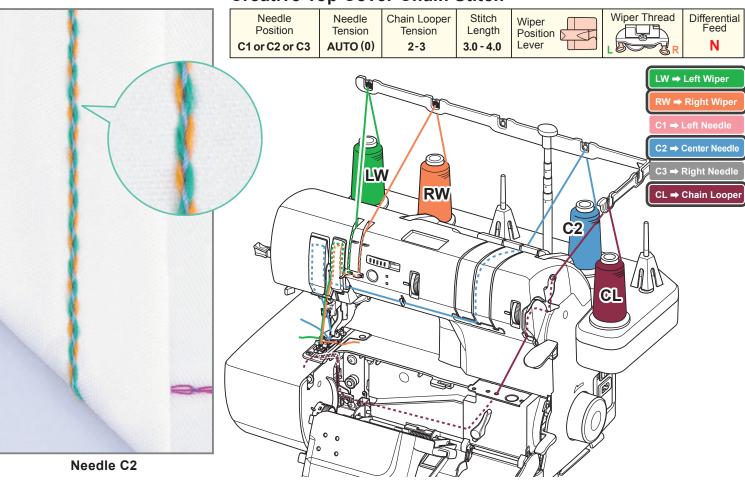

Creative Top Cover Chain Stitch

Creative Top Cover Stitch - Left (Right) Narrow 3mm

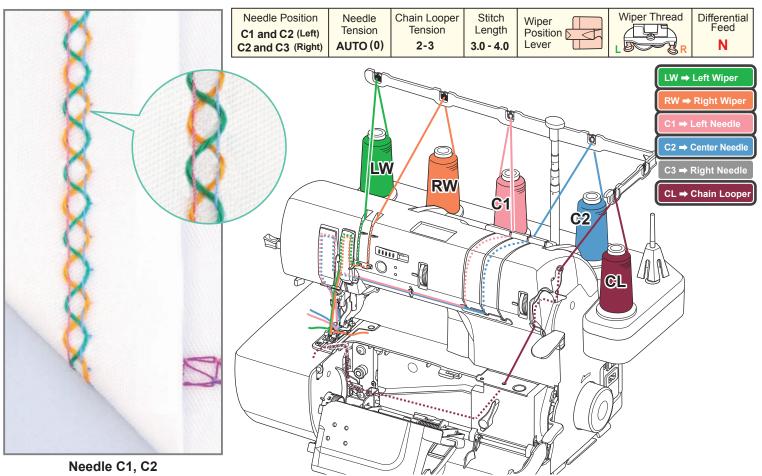


Quick Reference Threading Guide - 2

Creative Top Cover Stitch


Creative Top Cover Stitch - Wide 6mm Differential Feed Wiper Thread Needle Needle Chain Looper Stitch Wiper Position Tension Length Tension Position N C1 and C3 AUTO (0) 3.0 - 4.0 Lever 2-3 Ν LW ⇒ Left Wiper RW => Right Wiper C2 ➡ Center Needle LW C3 ➡ Right Needle RW CL => Chain Looper **C1** 6 C3 \bigcirc 0 CL 0 4 Needle C1, C3

X000000000000000000000 Both Wipers

Creative Top Cover Triple Stitch 6mm

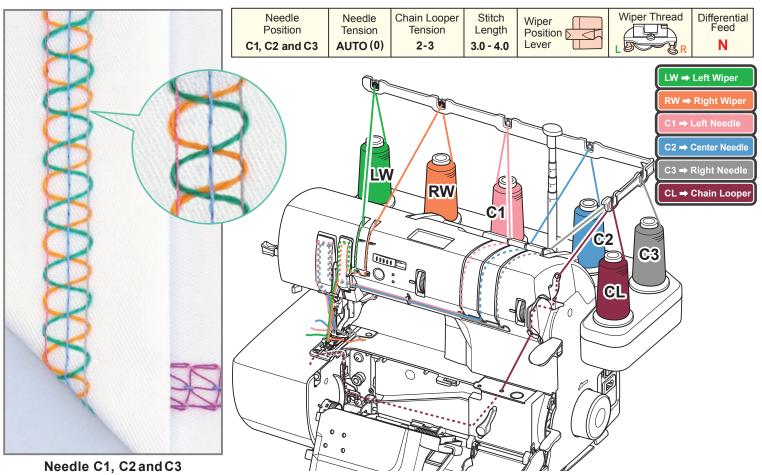



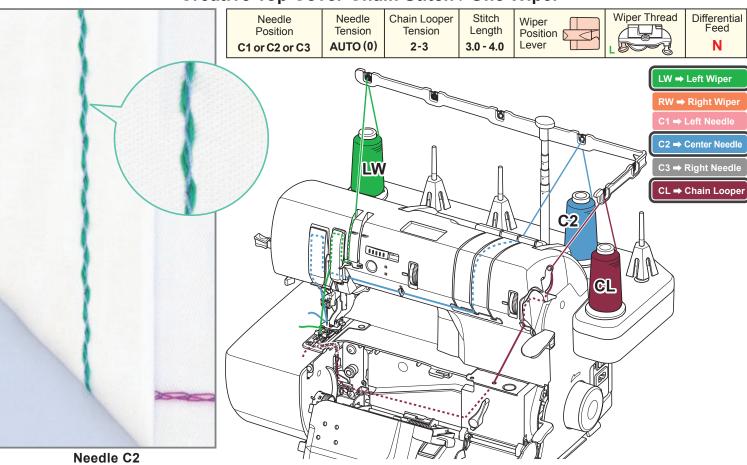


Creative Top Cover Chain Stitch / One Wiper

Needle C2 Left Wiper

NOTE: When using the Right Wiper follow the same threading path as the Left using the guides for the Right Wiper.


Creative Top Cover Stitch - Left(Right) Narrow 3mm / One Wiper

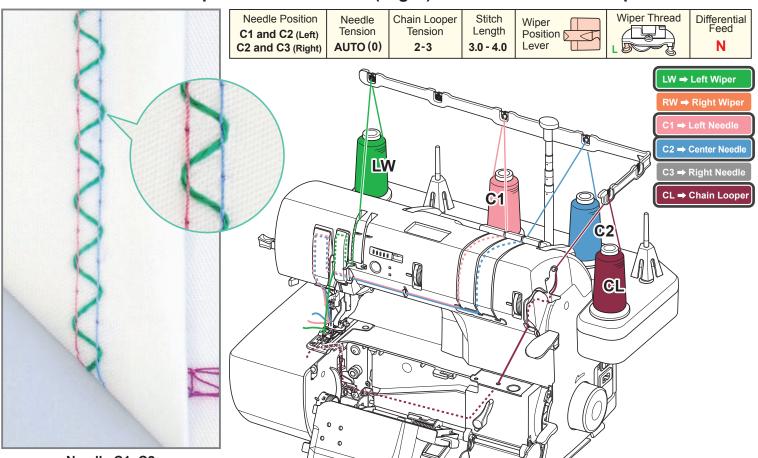

Needle C1, C2 Left Wiper

NOTE: When using the Right Wiper follow the same threading path as the Left using the guides for the Right Wiper.


Creative Top Cover Stitch One Wiper

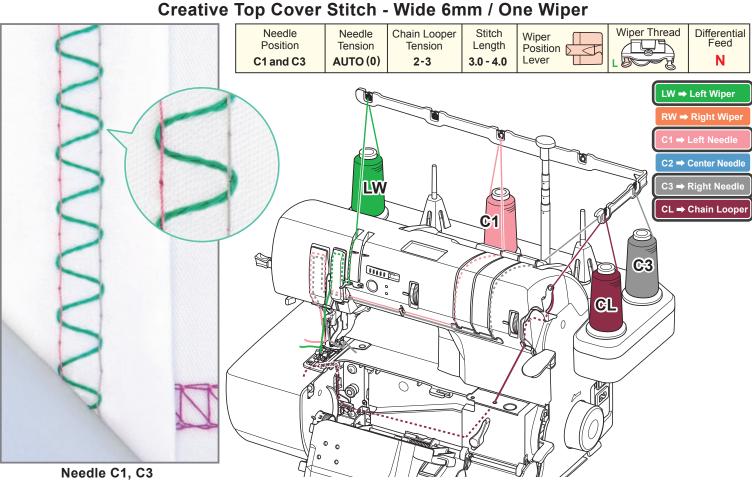

Left Wiper

NOTE: When using the Right Wiper follow the same threading path as the Left using the guides for the Right Wiper.

Creative Top Cover Triple Stitch 6mm / One Wiper

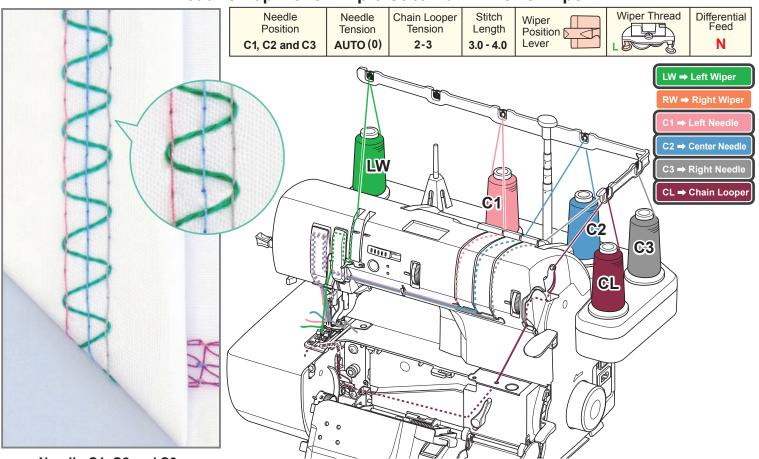

Needle C1, C2 and C3 Left Wiper

NOTE: When using the Right Wiper follow the same threading path as the Left using the guides for the Right Wiper.