



SENSOTOX C2

User Manual

READ THE MANUAL BEFORE USING

This manual should be carefully read by those who have or will have responsibility for use, maintenance or repair of the product.

This product will perform properly only if used, maintained and repaired in accordance with the manufacturer's instructions.

CAUTION

Disconnect the power before removing the sensor. Remove the cover and the sensor from the unit only if the work area is known not to be dangerous.

WARNING

Calibration of all new unit should be checked by exposing the sensors to a known gas concentration before putting the instrument into service. For maximum safety, the accuracy of reading of the Sensotox C2 should be checked every three months.



Contents

1.	INTRODUCTION	3
1.1	TECHNICAL SPECIFICATIONS	5
	Sensotox C2 EC specifications	5
	Sensotox C2 IR specifications	6
	Sensotox C2 LEL specifications	7
	Sensotox C2 PID specifications	8
2.	OPERATION	9
2.1	Physical Description	10
2.2	Installation	10
	2.2.1 Installing	10
	2.2.2 Uninstalling	11
	2.2.3 Wiring	12
	2.2.4 Installing the unit	12
3	DISPLAY & USER INTERFACE	13
	3.1 User interface	13
	3.2 Starting up the unit	13
	3.3 Display readout	14
	3.4 Alarm contacts	15
4	CALIBRATION	16
	I – Zero Calibration	17
	II - - Span calibration	19
	Advanced Menu	20
5	TROUBLESHOOTING	26
6	MODBUS/RS-485	27

1. INTRODUCTION

Sensotox C2 EC uses an electrochemical sensor to detect oxygen and toxic gases. It works with voltages from 9 to 36 V dc with an analogue (4-20 mA) or digital (RS-485, ModBus) output. Sensotox2 is equipped with flameproof enclosure, and this may be blind or have a window with a display for reading the gas concentration, status LEDs and magnetic keys for configuration.

Sensotox C2 IR uses a non-dispersive infrared sensor to detect combustible gases, carbon dioxide and other gases. It works with voltages from 9 to 36 V dc with an analogue (4-20 mA) or digital (RS-485, ModBus) output. Sensotox2 is equipped with flameproof enclosure, and this may be blind or have a window with a display for reading the gas concentration, status LEDs and magnetic keys for configuration.

Sensotox C2 LIE uses a catalytic sensor with high resistance to contaminants for detecting combustible gases (LEL). It works with voltages from 9 to 36 V dc with an analogue (4-20 mA) or digital (RS-485, ModBus) output. Sensotox2 is equipped with flameproof enclosure, and this may be blind or

have a window with a display for reading the gas concentration, status LEDs and magnetic keys for configuration.

Sensotox C2 PID uses a sensor to detect volatile organic compounds (VOCs). It works with voltages from 9 to 36 V dc with an analogue (4-20 mA) or digital (RS-485, ModBus) output. Sensotox2 is equipped with flameproof enclosure, and this may be blind or have a window with a display for reading the gas concentration, status LEDs and magnetic keys for configuration.

1.1 TECHNICAL SPECIFICATIONS

Sensotox C2 EC specifications

Size	160 mm x 100 mm x 85 mm
Weight	1.6 kg
Sensor	Electrochemical
Calibration	2 points
IP	IP-56
Power supply	13,6 Vcc, 85-260 V ac
Output	4 – 20 mA RS-485, a 4.8, 9.6 ó 19.2 Kb/seg.
Display	7 segments, 4 digits and 6 LEDs
User interface	Three key, non-intrusive access for calibration and adjustment
Temperature	-40 a 60 °C
Humidity	0-95% RH (non-condensing)
Pressure	0.9 – 1.1 Atm
Relay contacts	30 V, 2 A normally open. One for alarm 1 and one for alarm 2.

Sensotox C2 IR specifications

Size	160 mm x 100 mm x 85 mm
Weight	1.6 kg
Sensor	NDIR (non-dispersive infrared)
Calibration	2 points
IP	IP-56
Power supply	13,6 Vcc, 85-260 V ac
Output	4 – 20 mA RS-485, a 4.8, 9.6 ó 19.2 Kb/seg.
Display	7 segments, 4 digits and 6 LEDs
User interface	Three key, non-intrusive access for calibration and adjustment
Temperature	-40 a 60 °C
Humidity	0-95% RH (non-condensing)
Pressure	0.9 – 1.1 Atm
Relay contacts	30 V, 2 A normally open. One for alarm 1 and one for alarm 2.

Sensotox C2 LEL specifications

Size	160 mm x 100 mm x 85 mm
Weight	1.6 kg
Sensor	Pellistor
Calibration	2 points
IP	IP-56
Power supply	13,6 Vcc, 85-260 V ac
Output	4 – 20 mA RS-485, a 4.8, 9.6 ó 19.2 Kb/seg.
Display	7 segments, 4 digits and 6 LEDs
User interface	Three key, non-intrusive access for calibration and adjustment
Temperature	-40 a 60 °C
Humidity	0-95% RH (non-condensing)
Pressure	0.9 – 1.1 Atm
Relay contacts	30 V, 2 A normally open. One for alarm 1 and one for alarm 2.

Sensotox C2 PID specifications

Size	160 mm x 100 mm x 85 mm
Weight	1.6 kg
Sensor	Photoionization
Calibration	2 points
IP	IP-56
Power supply	13,6 Vcc, 85-260 V ac
Output	4 – 20 mA RS-485, a 4.8, 9.6 ó 19.2 Kb/seg.
Display	7 segments, 4 digits and 6 LEDs
User interface	Three key, non-intrusive access for calibration and adjustment
Temperature	-40 a 60 °C
Humidity	0-95% RH (non-condensing)
Pressure	0.9 – 1.1 Atm
Relay contacts	30 V, 2 A normally open. One for alarm 1 and one for alarm 2.

2. OPERATION

The calibration of all new instruments acquired from Sensotran should be checked by exposing the sensor to a known concentration of gas before putting the instrument into service. For maximum safety, accuracy should be checked by exposing the sensor to a known concentration of gas over a period of time.


Calibration must be checked daily during the initial period of use to ensure that there are no components in the atmosphere which might contaminate the sensor.

Check the calibration using a known concentration of gas before use. Recalibrate if the error is excessive.

Before shipment, Sensotox C2 instruments are calibrated and checked using Span gas. However, the user should check the operation before first use. Once the unit has been installed, leave it running for 24 hours and check it with gas.

2.1 Physical Description

The design of Sensotox C2 makes it easy to place and connect at a fixed location to monitor gas.

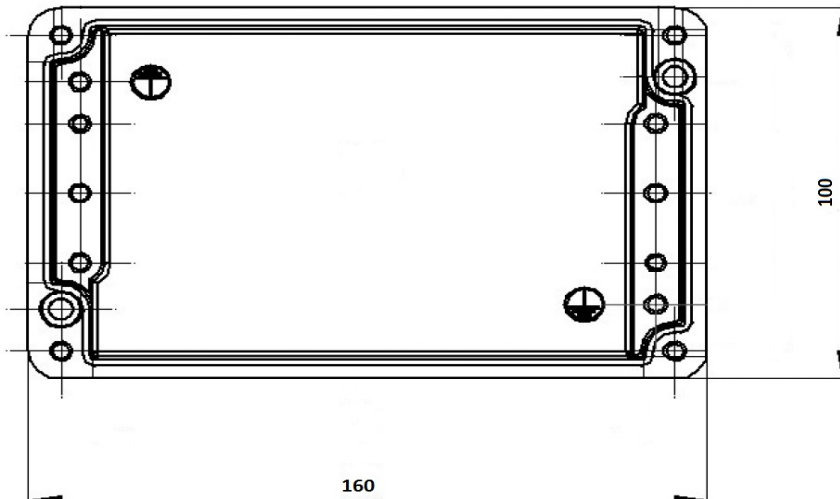


2.2 Installation

ATTENTION

- 1. At least 457 mm of armored cable must be used between group A and B zones.**
- 2. To prevent ignition in explosive atmospheres, the area must be free of flammable gases and the power supply to the detector must be disconnected before opening the cover.**
- 3. For European applications, the installation must meet the requirements of EN 60079-14.**

Make 2 holes in the mounting surface 126 mm apart.

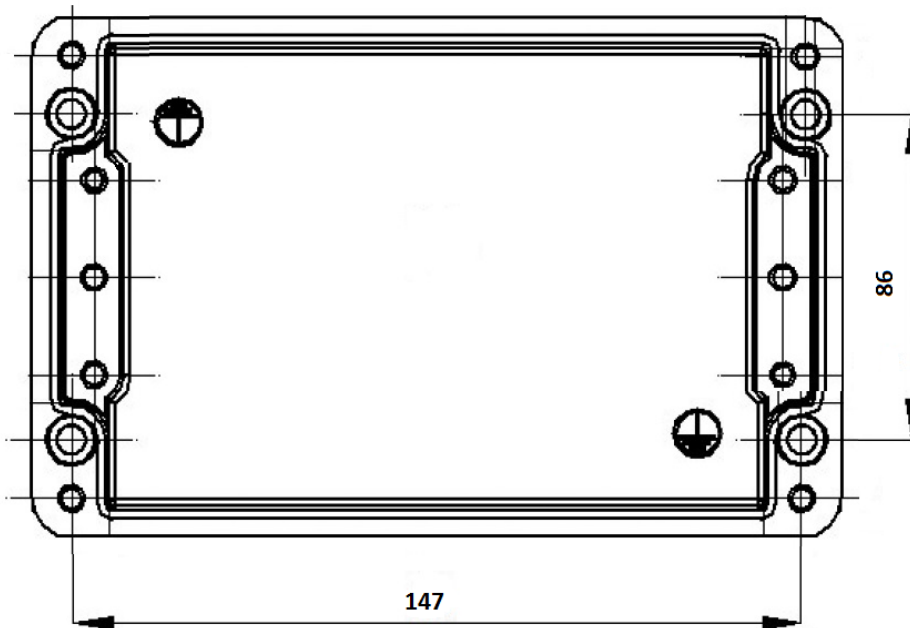


2.2.2 Uninstalling



Before dismantling, make sure that power is disconnected.

1. Unscrew the 4 screws on the lid, remove the lid, and the display flat cable connector.
2. Disconnect the power connectors and communication/relay connectors.
3. Disconnect the sensor connector.
4. Unscrew the 2 main board screws.
5. Remove the main board.
6. Unscrew the sensor.

2.2.3 Wiring

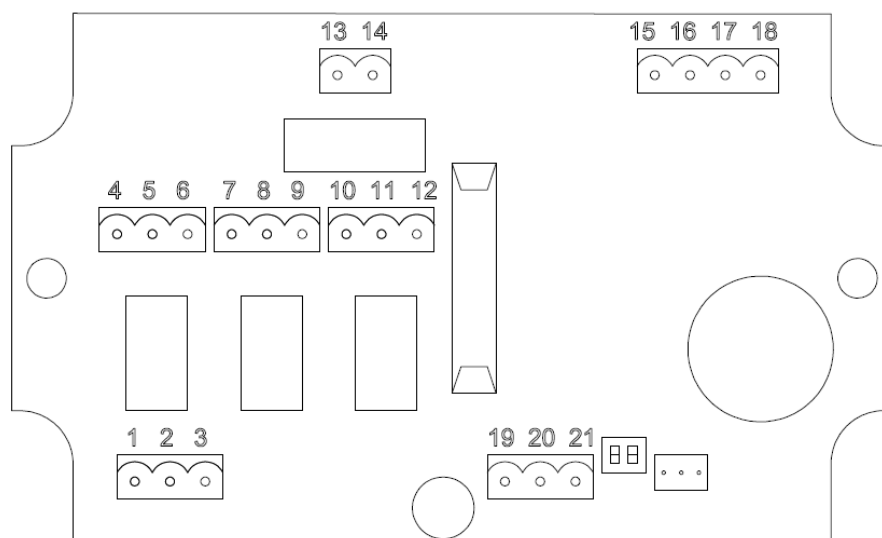

1	Earth	12	Fault Relay (common)
2	Power Supply 110/265 Vac	13	Auxiliary supply (+13,7 V)
3	Power Supply 110/265 Vac	14	Auxiliary supply (-13,7 V)
4	Alarm Relay 1 (n/c)	15	RS485A
5	Alarm Relay 1 (n/o)	16	RS485B
6	Alarm Relay 1 (common)	17	4/20 mA (Signal)
7	Alarm Relay 2 (n/c)	18	4/20 mA (common)
8	Alarm Relay 2 (n/o)	19	Sensor PS
9	Alarm Relay 2 (common)	20	4/20 mA In (Common)
10	Fault Relay (n/c)	21	4/20 mA In (Signal)
11	Fault Relay (n/o)		

2.2.4 Installing the unit

1. Fit the connectors into their respective locations. Save an extra length of cable to allow mounting on the wall.
2. Screw the sensor into the box and plug the sensor connector.
3. Plug the display flat cable.
4. Place the cover.

3 DISPLAY & USER INTERFACE

3.1 User interface

All the Sensotox C2 are equipped with four status LEDs, a four-digit LCD display and three mechanical keys [+], [MODE] and [-].

3.2 Starting up the unit

Both the detector with a window and the blind one require a start-up time that depends on the built-in sensor.

" 0 0 0 0 " is displayed on the detector with a window, alternating with a countdown. When the count reaches zero, the detector is operative.

In both the detector with a window and the blind one, the analogue output current is 2 mA during the start-up time. When the start-up time has elapsed, and provided there is no fault condition, the 4/20 mA analogue output current will be proportional to the sensor reading.

3.3 Display readout

In the detectors with window, once the detector goes into read mode, it starts an automatic check for possible faults and alarm conditions. If there is no fault or alarm condition, the green "Ok" LED is activated and the gas concentration is shown.

If a fault is shown, the "FAULT" LED will lit. Each alarm condition has a corresponding LED.

3.4 Alarm contacts

The alarm contacts or alarm relays can be used to activate acoustic or luminous alarms. External alarms have normally open contacts which close when there is an alarm.

	External alarm	LED	LCD	Analogue output
Exceeds the low alarm threshold	Alarm ALM1	Low	Reading	Based on reading
Exceeds the high alarm threshold	Alarm ALM1	High	Reading	Based on reading
Out of range	Alarm ALM2	High	8888	22 mA
Calibration fault	Alarm ALM2	Fault	E003 flashing	2 mA
Sensor drift	Alarm ALM2	Fault	E004 flashing	2 mA
ADC saturated	Alarm ALM2	Fault	E005 flashing	2 mA

4 CALIBRATION

ATTENTION

The calibration of all unit purchased from Sensotran should be tested by exposing the sensor to a known concentration of gas before putting the instrument into service. For maximum safety, the accuracy of Sensotox C2 should be checked by exposing the sensor to a known concentration of gas over a period of time

Sensotox C2 units are calibrated using a two point calibration process. First, use the "Zero calibration", then the "SPAN calibration" exposing the sensor to a reference gas concentration to establish the second calibration point.

Note: "Zero calibration" must be carried out before "Span Calibration".

The calibration requires a zero cylinder, a Span cylinder and a calibration adapter.

I – Zero Calibration

1. Ensure that there are no flammable gases or gases that might interfere with the sensor reading in the area where the detector is located. Suspected that the atmosphere is not clean, use a zero gas such as Nitrogen 5.0
2. Access to Calibration Menu by pressing [MODE] twice. "ZEr0" message will be displayed.

Note: Press [MODE] to bypass and continue to Span calibration.

Press [-] to return to Reading display.

3. In atmosphere with pollutants, connect the calibration ZERO cylinder to the sensor head of the Sensotox C2 using the calibration adapter and apply the gas flow.
4. Press [+] to start calibration. Zero LED will lit and "ZEr0" message will be displayed alternatively with a countdown.


Tip: Before countdown will finish, you can cancel calibration by pressing any key.

5. When countdown will be completed, LED and "ZEr0" disappears and calibration data will be saved.

Note: The machine returns to reading the display after 60 seconds of inactivity.

When Zero Calibration will be finished, instrument will advance to Span Calibration.

When finished, program will go to Span Calibration.

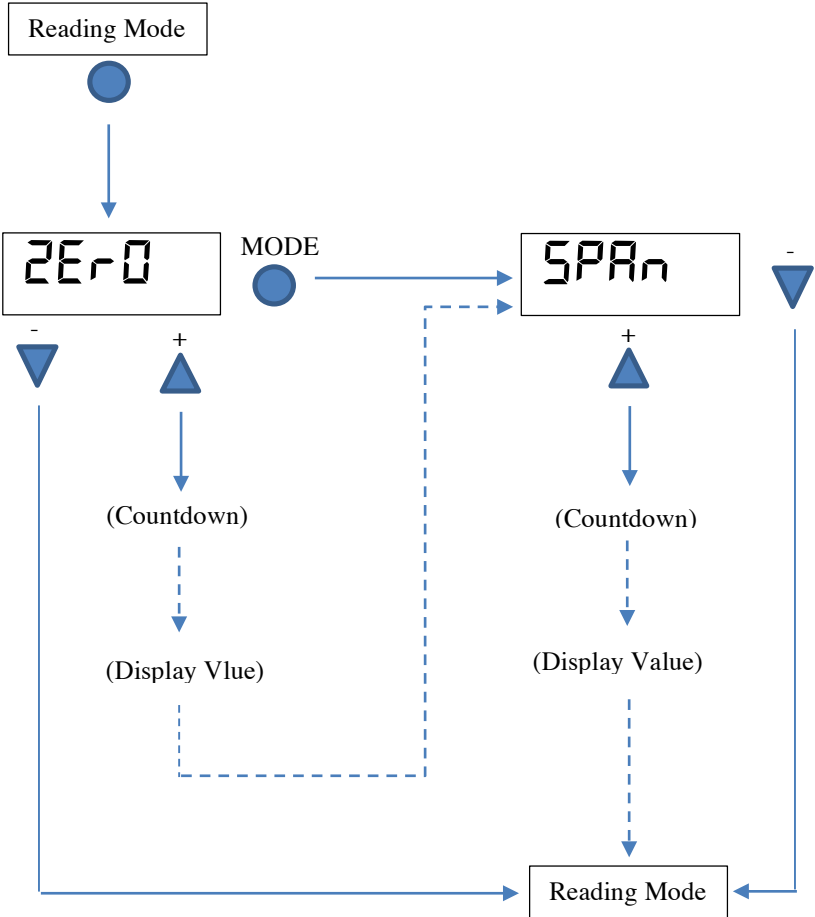


II - Span calibration

1. Connect the SPAN calibration cylinder to the sensor Sensotox C2 head using the calibration adapter and applying a flow of gas.
Tip: To accede the Span Calibration from reading display, press [MODE]. When "ZErO" appears, press [MODE] again to go to "SPAn".
2. Press [+] to start calibration. "Span" LED will lit and "SPAn" will be displayed alternatively with a countdown. Calibration can be cancelled by pressing any key.
3. When countdown will be completed, LED and "SPAn" disappears and calibration data will be saved. If the sensor does not have sensitivity enough for being calibrated, "Fa iL" and "SPAn" messages will be displayed alternatively; that can suggest than sensor needs to be replaced.
4. To quit the Menu and return to actual reading screen, press [+]. If not, the instrument will return automatically to actual reading screen after a short period.
5. Close the gas valve.

Advanced Menu

Sensotox C2 Advanced Menu let you modify several configuration parameters. To enter into Advanced Menu, press the sequence [+], [-] and [MODE]. Display will show then **CALU**.

- Pressing [MODE] will move to the next function.
- Pressing [+] will enter into the setting and show the actual value.
- Pressing [-] will leave the Advanced Menu.

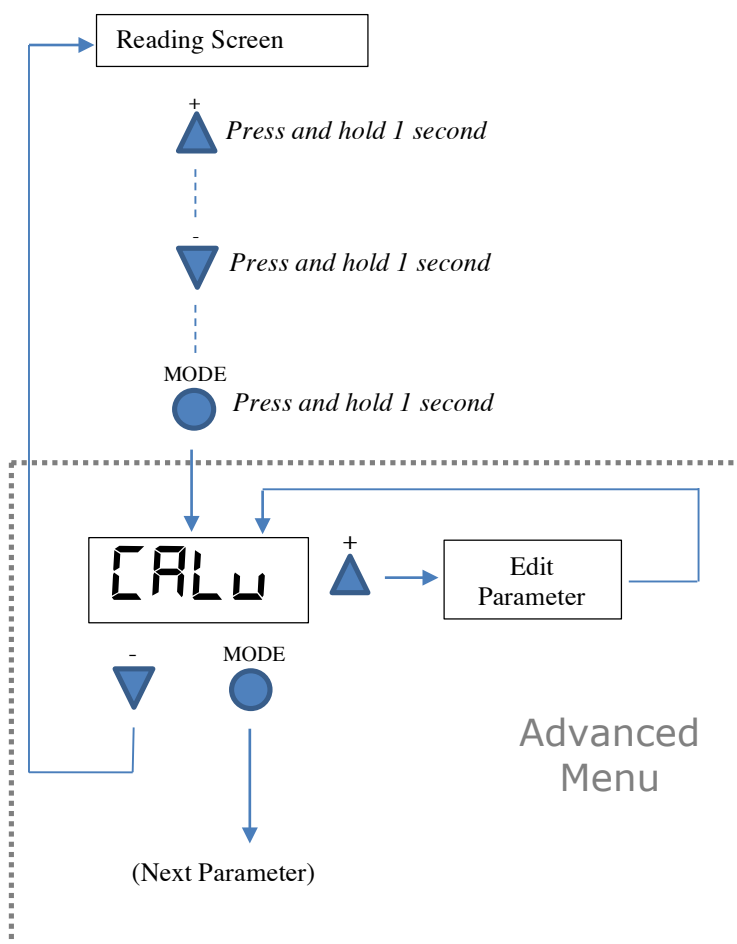

After 60 seconds without activity, detector returns to actual reading screen.

Advanced Menu

Display	Setting
[ALU	Span Calibration value
FC	Correction Factor (for LEL & VOC only)
LO	Low Alarm
HI	Hi Alarm
Id	Instrument ID
bAUD	Transmission Speed (19200, 9600 or 4800)
Lite	Backlight
Rout	Analogue output (4 / 20 mA)

- To modify a setting, press [MODE] until desired value appears.
- Press [+] to enter into the setting.
- Press [+] to increase/change the value.
- Press [-] to decrease/change the value.
- When finished, press [MODE].


If the setting has been modified, new value will blink.

-
- Press [-] or [MODE] to dismiss modifications and go to next setting.
 - Press [+] to save changes.


“SAVE” will be displayed to confirm changes have been stored.

Pressing [MODE] will circulate over next option. To edit a value, press [+] and display will show the actual setting for the parameter.


You can exit anytime from Advanced Menu by pressing [-]. If any key press is detected for 60 seconds, system will return to Reading Mode.

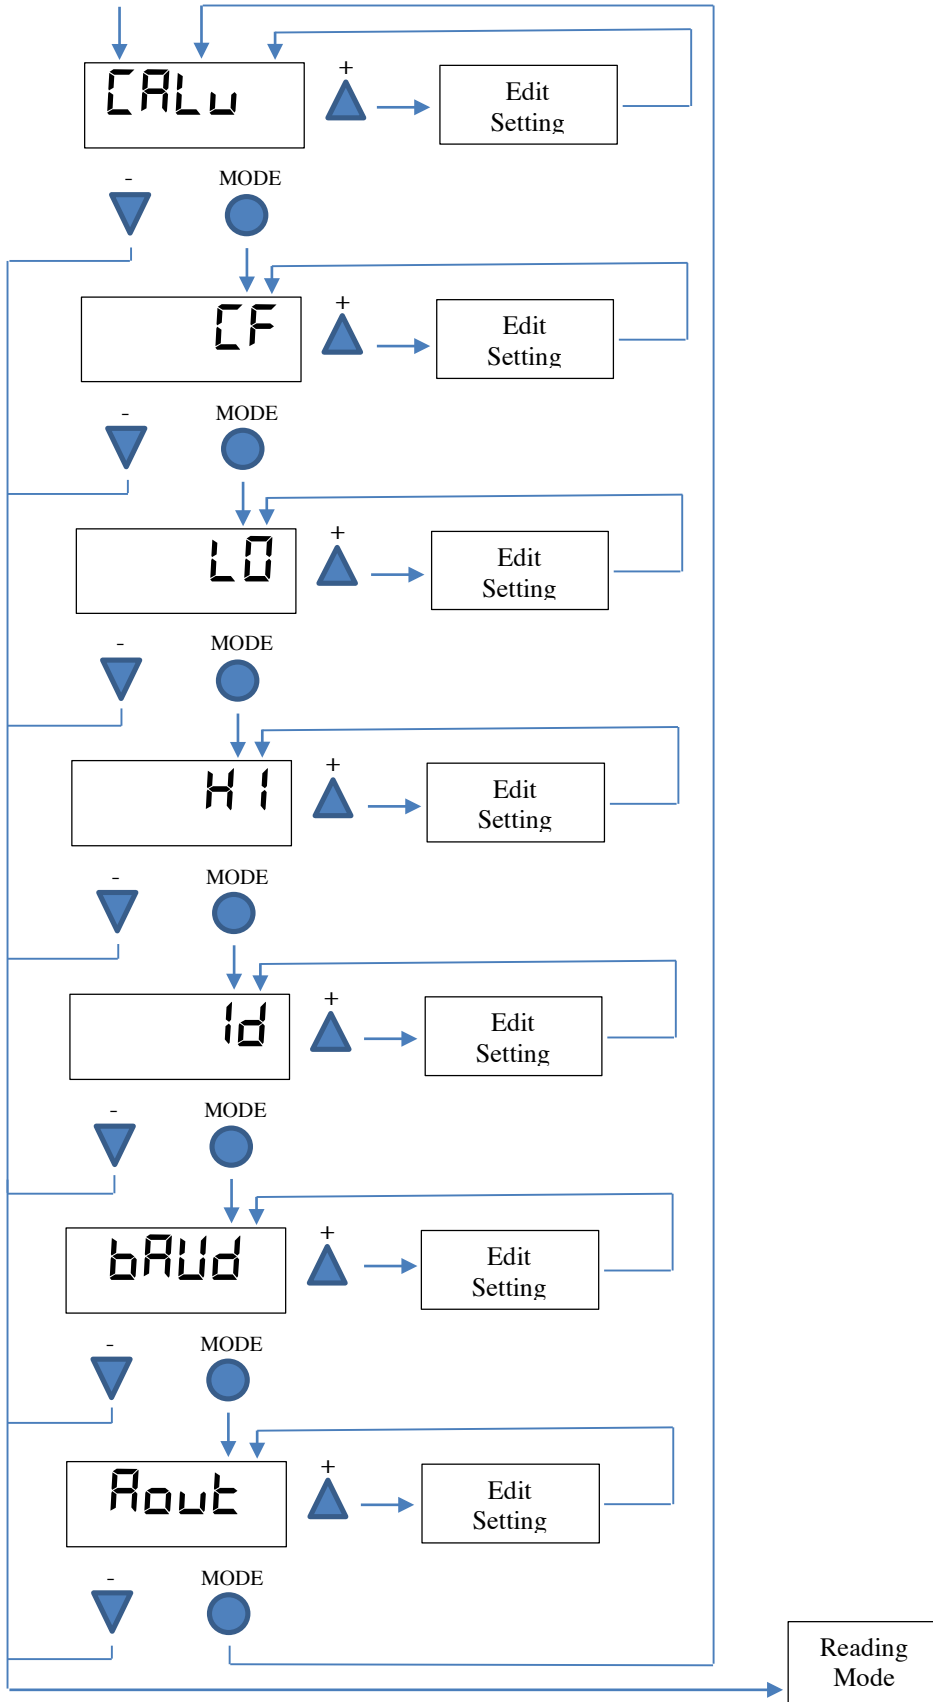

How to edit and modify Settings.

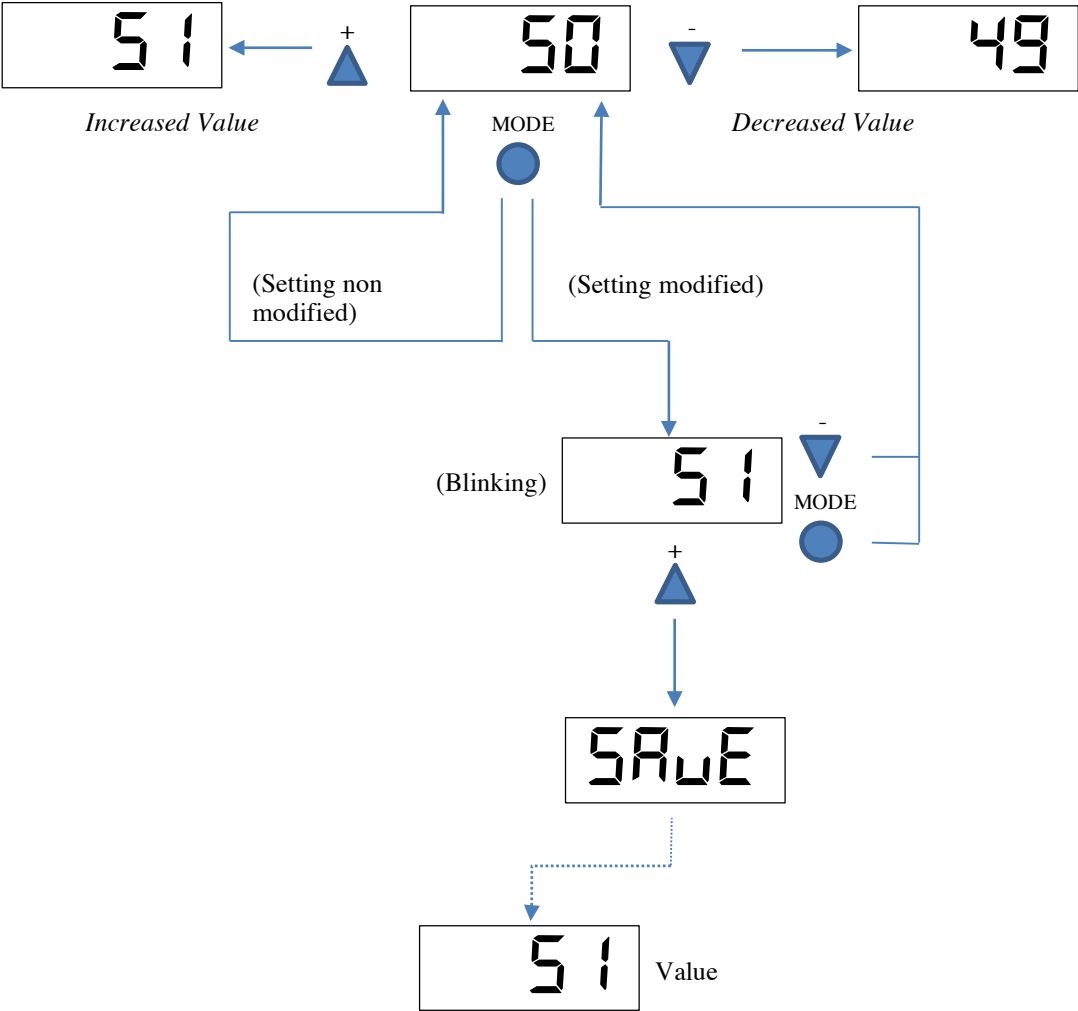

4-20 mA Analogue Output adjustment.

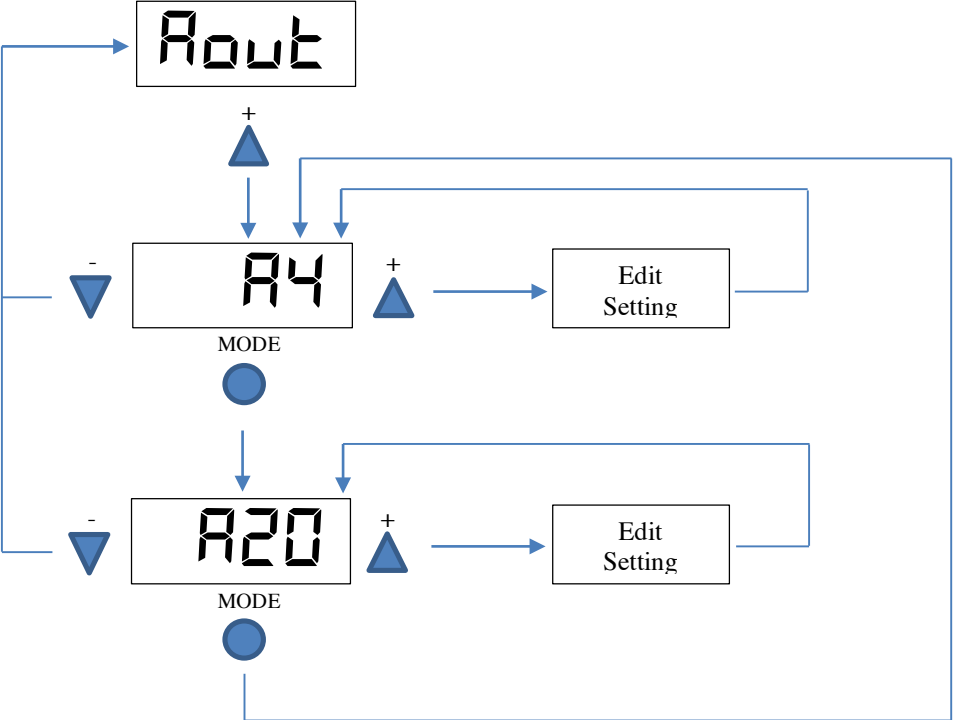

5 TROUBLESHOOTING

Error	Description and solution
E003	Description: Calibration error Solution: Make sure there is gas flow circulation and repeat calibration. If still fails, replace the sensor.
E004	Description: Zero Drift Solution: Make sure sensor is in a clean ambient or alternatively, use Nitrogen to do zero calibration.
E005	Description: Sensor Over range Solution: Call an Authorized Service Center.
E006	Description: Wiring Error Solution: Verify wiring
E007	Description: EEPROM Error Solution: Replace main board. Call an Authorized Service Centre.

6 MODBUS/RS-485

Retrieving gas concentration data from Sensotox C2 through RS-485.

The Sensotox C2 communicates by means of MODBUS RTU. All monitors provide 4-byte register value. Note: Gas concentration is the only value that can be retrieved.

As example 34 hex = 52 decimal.

1. Communication Setting

Transmission MODE:RTU

Controller: PC or GasVisor Controller.

Baud Rate: 4800, 9600, 19200 bps.

Client ID: 1 to 32

2. Message Frame/Communication Procedure

Sensotox C2 only support function code 0x03 (read holding registers), which only supports the "Get Reading Value" from the detector.

Requesting Message:

Device Address	Function Code	Register Address High Byte	Register Address Low Byte	Quantity of Registers High Byte	Quantity of Registers Low Byte	CRC Low Byte	CRC High Byte
Client ID	03	00	02	00	02	CRC	CRC

Answering Message:

Device Address	Function Code	Byte Count	Register Value				CRC Low Byte	CRC High Byte
Client ID	03	04	Reading byte 4	Reading byte 3	Reading byte 2	Reading byte 1	CRC	CRC

Note: Detector data length is 4 bytes.

Example:

Request: 01 03 00 02 00 02 CRC CRC

Answer: 01 03 04 **00 00 00 3A** 7A 20

Note: The maximum distance should be less than 1 Km when using a 1.5 mm² cable.

sensotran, s.l.

Av. Remolar 31

BARCELONA - SPAIN

Phone: +34 93 478 5842

Fax: +34 93 478 5592

www.sensotran.com

sensotran@sensotran.com